



## 1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet and refer servicing to Vtech under the following conditions:
  - When the power supply cord or plug is damaged or frayed.
  - If the product does not operate normally by following the operating instructions.
  - If the product has been dropped and the cabinet has been damaged.
  - If the product exhibits a distinct change in performance.
7. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. The batteries may be damaged.
12. Please note the correct polarity while inserting the batteries.
13. Do not immerse batteries in water, do not place in fire.

### Package contents

The package contains the following items:

- |                                  |                                  |
|----------------------------------|----------------------------------|
| <b>ADT1047 (Single Handset)</b>  | <b>ADT2047 (Twin Handset)</b>    |
| • 1 Handset                      | • 2 Handsets                     |
| • 1 Base station                 | • 1 Base station                 |
| • 1 AC power adapter             | • 1 Charge cradle                |
| • 1 Telephone line cord          | • 2 AC power adapters            |
| • 2 x AAA rechargeable batteries | • 1 Telephone line cord          |
| • 1 User manual                  | • 4 x AAA rechargeable batteries |
|                                  | • 1 User manual                  |

## 8. FLASH (R key)

In idle / predialing mode: Press **(R)** to insert a flash to get a fresh dial tone.  
During a call: Press to access a Call Waiting Line when you hear the call waiting prompt signal. Press again to toggle between the two calls.

## 9. MICROPHONE

### 10. REDIAL LIST

In Idle mode: Press **(R)** to access the redial list.


### 11. TALK ON

In idle / predialing mode: Press to make a call.  
In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list.  
During ringing: Press to answer a call.

### 12. LEFT SOFT KEY

In idle mode: Press to access the main menu.  
In sub-menu mode: Press to confirm the selection.  
During a call: Press to access Intercom / Phonebook / Redial List / Call List.

## 2.4 Base Station Overview

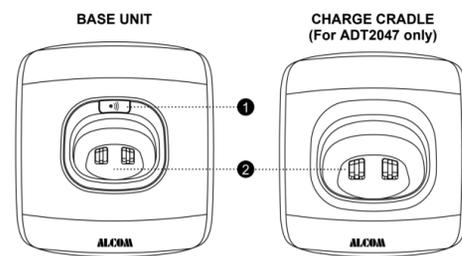

### 1. PAGE


Press **(PAGE)** on the base station to page your handset. It will ring for approximately 60 seconds.

### 2. CHARGING DOCK

Place the handset for charging.

## 2.5 Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

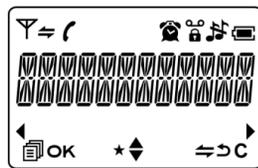

	Scroll up / down the menu items / Phonebook list / Redial list / Call List.
	Steady when the handset is in range of the base. Flash when out of range of the base or not registered to the base.
	Steady when an intercom is in progress. Flash when there is an incoming internal call.
	Indicate a call is in progress.
	Indicate that the ringer is switched off.
	Steady when an alarm is set. Flash when the alarm time set before reaches.
	Indicate that the keypad is locked.
	Indicate when there are received new Visual Message Waiting (VMWV) not yet read. Will disappear when all the visual messages have been read. <b>This function must have support from the telephone service provider.</b>
	Indicate when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.
	Indicate when the battery needs charging. Flash when low battery power level is detected.
	Indicate when more characters are existed before the text currently displayed.
	Indicate when more characters are existed after the text currently displayed.
	Press to select more menu options if applicable.
	Press to confirm the current selection if applicable.
	Indicate new call in call list.
	Press to conduct Intercom call when idle ( <b>when using with more than one Handset</b> ).

## 3.2 Answer a Call

If the handset is not on the charging cradle:  
When the phone rings, press **(R)** to answer a call.

If the handset is on the charging cradle or the base station and if AUTO ANSWER is set to ON:  
When the phone rings, pick up the handset to answer a call.

## 3.3 End a Call

During a call connection, press **(END)** to end the call.  
OR  
Put the handset on the base station to end the call.

## 3.4 Adjust Earpiece Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece volume.

During a call:  
Press **(VOLUME)** to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

## 3.5 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.  
During a call:  
Press **(MUTE)** to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press **(MUTE)** again to unmute the microphone.

## 3.6 Set the Silent Mode

In idle mode, press and hold **(MUTE)** to turn off the handset ringer. The icon is displayed on the LCD.

In silent mode, press and hold **(MUTE)** to turn on the handset ringer. The icon will disappear.

## 3.7 Turn on the Keypad Lock

In idle mode, press and hold **(MUTE)** to turn on the keypad lock. The icon is displayed on the LCD.

In keypad lock mode, press and hold **(MUTE)** to turn off the keypad lock. The icon will disappear.

## 3.8 Redial the last number

You can redial up to 5<sup>1</sup> of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

<sup>1</sup> EEPROM size dependent


## Table of contents

1. IMPORTANT SAFETY INSTRUCTIONS .....	3
2. INSTALLING YOUR PHONE CONNECTING THE BASE STATION .....	4
2.1 CONNECTING THE BASE STATION .....	4
2.2 INSTALLING AND CHARGING THE BATTERIES .....	4
2.3 HANDSET OVERVIEW .....	5
2.4 BASE STATION OVERVIEW .....	6
2.5 DISPLAY ICONS AND SYMBOLS .....	7
2.6 TEXT EDITING .....	8
3. USING YOUR PHONE .....	8
3.1 MAKE A CALL .....	8
3.1.1 PREPARATORY DIALING .....	8
3.1.2 DIRECT DIALING .....	8
3.1.3 CALL FROM THE PHONEBOOK .....	8
3.1.4 CALL FROM THE CALL LIST .....	8
3.1.5 CALL FROM THE REDIAL LIST .....	8
3.1.6 CALL TIMER .....	8
3.2 ANSWER A CALL .....	9
3.3 END A CALL .....	9
3.4 ADJUST EARPIECE VOLUME .....	9
3.5 MUTE A CALL .....	9
3.6 SET THE SILENT MODE .....	9
3.7 TURN ON THE KEYPAD LOCK .....	9
3.8 REDIAL THE LAST NUMBER .....	9
3.8.1 REDIAL A NUMBER FROM THE REDIAL LIST .....	10
3.8.2 STORE A REDIAL NUMBER INTO THE PHONEBOOK .....	10
3.8.3 DELETE A REDIAL NUMBER .....	10
3.8.4 DELETE THE ENTIRE REDIAL LIST .....	10
3.9 FIND THE HANDSET .....	10
3.10 MAKE AN INTERNAL CALL .....	11
3.10.1 INTERCOM ANOTHER HANDSET .....	11
3.10.2 CALL ALL HANDSETS .....	11
3.10.3 TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET .....	11
3.10.4 MAKE A 3-WAY CONFERENCE CALL .....	11
4. PRIVATE PHONEBOOK .....	12
4.1 ADD A NEW PHONEBOOK ENTRY .....	12
4.2 SEARCH A PHONEBOOK ENTRY .....	12
4.3 VIEW A PHONEBOOK ENTRY .....	12
4.4 EDIT A PHONEBOOK ENTRY .....	12
4.5 DELETE A PHONEBOOK ENTRY .....	13
4.6 DELETE THE ENTIRE PRIVATE PHONEBOOK .....	13

## 2. INSTALLING YOUR PHONE CONNECTING THE BASE STATION

### 2.1 Connecting the base station

1. Plug the power supply & line cord into the base station.
2. Plug the power supply & line cord into the wall socket.
3. Always use the cables provided in the box.

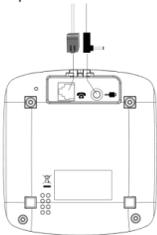


### 2.2 Installing and charging the batteries

1. Slide open the battery compartment cover.
2. Place the supplied batteries as indicated. Observe polarity.
3. Slide the battery compartment cover back.
4. Put the handset on the base or charge cradle (for ADT2047 only) and charge for 18 hours first time. A beep indicates that the handset is properly placed on the base or charger.

Use only the AC adaptors provided for the base station and charge cradle (for ADT2047 only).

Use only Ni-MH rechargeable batteries supplied or equivalent type.

CAUTION: Do not use Alkaline or Non-rechargeable batteries as this may damage the Handset and void the warranty.

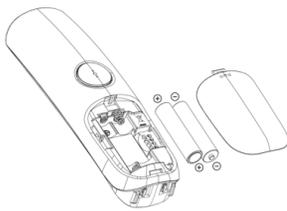

## 2.3 Handset Overview

### 1. EARPIECE

### 2. UP

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In Phonebook list / Redial list / Call List: Press to scroll up the list.

During a call: Press to increase the hearing volume.

In ringing: Press to increase the ringer volume.

### 3. RIGHT SOFT KEY

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous level.

In sub-menu mode: Press and hold to go back to idle screen.

In editing / predialing mode: Press to clear a character / digit.

In editing / predialing mode: Press and hold to delete all the characters / digits.

During a call: Press to mute / unmute the microphone.

In idle mode: Press to intercom another handset.

### 4. TALK OFF

During a call: Press to end a call and go back to idle screen.

In menu / editing mode: Press to go back to previous menu.

In menu / editing mode: Press and hold to go back to idle screen.

In idle mode: Press and hold to power off the handset.

In idle mode (when the handset is powered off): Press and hold to power on the handset.

### 5. DOWN

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In Phonebook list / Redial list / Call List: Press to scroll down the list.

During a call: Press to decrease the hearing volume.

In ringing: Press to decrease the ringer volume.

### 6. ALPHANUMERIC KEYPAD, \* (STAR), # (HASH)

Press to insert a digit / character / \* / #

\* key in idle mode: Press and hold to enable or disable the keypad lock.

\* key during a call (in Pulse mode): Press to switch to tone mode.


# key in idle mode: Press and hold to turn on / off the ringer.

0 key in idle / predialing / number editing mode: Press and hold to insert a pause.

# key in Call List mode: Press to review caller's number if applicable.

### 7. PHONEBOOK

In idle mode: Press **(PHONEBOOK)** to access the phonebook list.

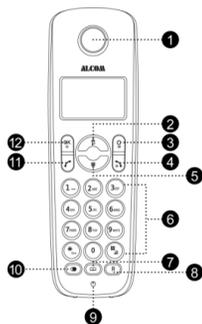

5. CALLER DISPLAY (NETWORK DEPENDENT) .....	13
5.1 VIEW THE CALL LIST .....	13
5.2 STORE A CALL LIST NUMBER INTO THE PHONEBOOK .....	14
5.3 DELETE AN ENTRY IN THE CALL LIST .....	14
5.4 DELETE THE ENTIRE LIST OF THE CALL LIST .....	14
5.5 VIEW THE DETAILS OF THE CALL LIST ENTRY .....	14
6. VOICE MAIL (NETWORK DEPENDENT) .....	15
6.1 ACCESS VOICE MAIL MESSAGES .....	15
6.2 DELETE VMWV ENTRIES .....	15
7. PHONE SETTINGS .....	16
7.1 DATE AND TIME SETTINGS .....	16
7.1.1 CHANGE THE DATE FORMAT .....	16
7.1.2 CHANGE THE TIME FORMAT .....	16
7.1.3 SET THE TIME .....	16
7.1.4 SET THE DATE .....	16
7.2 ALARM SETTINGS .....	17
7.2.1 TURN ON/OFF THE ALARM .....	17
7.2.2 SET THE ALARM TIME (IF THE ALARM IS SET TO BE ON) .....	17
7.3 HANDSET SETTINGS .....	17
7.3.1 SET THE RINGER MELODY FOR INTERNAL CALLS .....	17
7.3.2 SET THE RINGER VOLUME .....	17
7.3.3 SET ALERT TONES .....	18
7.3.4 SET THE HANDSET LANGUAGE .....	18
7.3.5 RENAME THE HANDSET .....	18
7.3.6 CHOOSE THE INFORMATION TO BE DISPLAYED IN IDLE .....	18
7.3.7 SET THE AUTO ANSWER .....	18
7.4 BASE SETTINGS .....	19
7.4.1 DE-REGISTER A HANDSET .....	19
7.4.2 CHANGE THE DIAL MODE .....	19
7.4.3 CHANGE THE FLASH TIME .....	19
7.4.4 CHANGE THE SYSTEM PIN CODE .....	19
7.5 REGISTRATION .....	20
7.6 RESET YOUR PHONE .....	20
8. TROUBLESHOOTING .....	21
9. CONFORMITY .....	22

	Press to go back to previous menu level or cancel the current action if applicable.
	Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

## 2.6 Text Editing

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

### Writing Tips:

Once a character is selected, the cursor will move to the next position after a short pause.

1. You can move the cursor within the text by **(LEFT/RIGHT)** to amend the text entry.
2. Press **(DELETE)** to delete the last character.
3. Press and hold **(DELETE)** to delete the entire text string.

## 3. USING YOUR PHONE

### 3.1 Make a Call

#### 3.1.1 Preparatory Dialing

Enter the phone number and press **(CALL)** to dial the number. Press **(CALL)** to clear the entry.

#### 3.1.2 Direct Dialing

Press **(CALL)** to take the line and enter the phone number.

#### 3.1.3 Call from the phonebook

Press **(PHONEBOOK)** to access the phonebook and press **(UP)** to select the desired phonebook entry. Press **(CALL)** to dial out to the selected phonebook entry.

Alternatively, press **(PHONEBOOK)** to access the phonebook to get the desired phonebook entry.

#### 3.1.4 Call from the Call List

Press **(UP)** to access the Call List and press **(UP)** to select the desired Call List entry. Press **(CALL)** to dial out to the selected Call List entry. Alternatively, press **(PHONEBOOK)** to access the Call List from the main menu.

#### 3.1.5 Call from the redial list

Press **(REDIAL)** to access the redial list and press **(UP)** to select the desired redial number. Press **(CALL)** to dial out to the selected redial number.

#### 3.1.6 Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made.

## 3.10 Make an Internal Call

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to external call.

Note:  
If only one handset is registered to the base station, press **(INTERCOM)** will display "NOT POSSIBLE"

### 3.10.1 Intercom Another Handset

1. In idle mode, press **(INTERCOM)** and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press **(CALL)** on the called handset to establish the internal call.

Note:  
If two handsets are registered to the base station, press **(INTERCOM)** will connect to another handset immediately.

### 3.10.2 Call All Handsets

1. In idle mode, press **(CALL ALL)** and the registered handsets will display.
2. Press **(CALL ALL)** to ring to all registered handsets.

### 3.10.3 Transfer an External Call to another handset

- During an external call:
1. Press **(INTERCOM)** and **(UP)** to select INTERCOM.
  2. Press **(UP)** to select the desired handset to intercom with.
  3. The external call is put on hold automatically and the called handset rings.
  4. Press **(CALL)** on the called handset to establish an internal call.
  5. Press **(END)** on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
  6. The external call is transferred to the called handset.

### 3.10.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

1. Follow Steps 1 to 4 in section 3.10.3.
2. Press and hold **(INTERCOM)** on the calling handset to establish the conference call.

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

## 4. PRIVATE PHONEBOOK

Your phone can store up to 10<sup>2</sup> private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

### 4.1 Add a New Phonebook Entry

In idle:

- Press to access the phonebook.

OR

- Press and to select PHONEBOOK main menu item and then press to access the phonebook.
- Press to select ADD.
- Press to enter the name.
- Press to enter the number.
- Press and to select the desired ringtone for your phonebook entry.
- Press to store the phonebook entry.

### 4.2 Search a Phonebook Entry

In idle:

- Press to access the phonebook.
- Enter the first character of the name by multi-tap.

### 4.3 View a Phonebook Entry

In idle:

- Press to access the phonebook.
- Press to select the desired phonebook entry.
- Press and to select VIEW.
- Press and to review the name, number and melody of the selected phonebook entry.

Note:

If number is more than 12 digits, press or to view the remaining digits.

### 4.4 Edit a Phonebook Entry

In idle:

- Press to access the phonebook.
- Press to select the desired phonebook entry.
- Press and to select EDIT.
- Press and the current contents of the selected phonebook entry displays.

<sup>2</sup> EEPROM size dependent

12

- Edit the name and press .
- Edit the number and press .
- Press to select the ringtone and press to confirm.

### 4.5 Delete a Phonebook Entry

In idle:

- Press to access the phonebook.
- Press to select the desired phonebook entry.
- Press and to select DELETE.
- Press to confirm.

### 4.6 Delete the Entire Private Phonebook

- Press to access the phonebook.
- Press and to select DELETE ALL.
- Press to confirm.
- Press to re-confirm.

## 5. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10<sup>3</sup> received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will display.

If the caller number is not provided, "OUT OF AREA" will display. In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed.

### 5.1 View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a ★ icon at the centre of the bottom line of the display.

- Press to access the call list.

OR

- Press and to select CALL LIST.
- Press to select the desired entry.
- Press to view the caller's number if applicable.

<sup>3</sup> EEPROM size dependent

13

### 5.2 Store a Call List Number into the Phonebook

- Follow Steps 1 and 2 in Section 5.1.
- Press and to select ADD TO PB.
- Press to enter the name.
- Press and the selected call list number is displayed.
- Edit the number if necessary.
- Press and to select the melody.
- Press to confirm.

### 5.3 Delete an entry in the Call List

- Follow Steps 1 and 2 in Section 5.1.
- Press and to select DELETE.
- Press to confirm.

### 5.4 Delete the entire list of the Call List

- Follow Steps 1 and 2 in Section 5.1.
- Press and to select DELETE ALL.
- Press to confirm.
- Press to re-confirm.

### 5.5 View the Details of the Call List Entry

- Follow Steps 1 and 2 in Section 5.1.
- Press and to select DETAILS.
- Press to display the date and time of the selected call list entry.
- Press to go back to previous screen.

14

## 6. VOICE MAIL (NETWORK DEPENDENT)

Voice Mail Waiting Indication (VMWI) is an indication given to you when a new voice mail message is waiting on the network service provider. This feature should be supported by your network service provider.

### 6.1 Access Voice Mail Messages

This feature should be supported by your network service provider. will display and the VMWI entry is stored in the Call List when you have new message in your voice mailbox.

- Press and to select CALL LIST.

OR

- Press in idle to access the call list.
- Press to select the desired VMWI entry.
- Press to dial out to the voice mail server.

Note:

If a more recent VMWI entry is received from the same network server number of an existing VMWI entry, the new VMWI will not be stored but the date/time of the VMWI will be updated on the existing VMWI entry. After you have accessed to all new voice mail messages, VMWI will turn off automatically. When the call list is full, the new VMWI entry will replace the oldest non-VMWI entry in the call list.

### 6.2 Delete VMWI Entries

To delete a single VMWI entry from the call list:

- Press and to select CALL LIST.

OR

- Press in idle to access the call list.
- Press to select the desired VMWI entry.
- Press and to select DELETE.
- Press to confirm.

To delete all VMWI entries from the call list:

To delete a single VMWI entry from the call list:

- Press and to select CALL LIST.

OR

- Press in idle to access the call list.
- Press and hold to delete all VMWI entries.
- The will disappear.

Note:

If you choose DELETE ALL function in the call list, the handset will also delete all VMWI entries and CID entries.

15

## 7. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

### 7.1 Date and Time Settings

You will need to set the correct time and date so that you know when you received call list entries. If you had subscribed for Caller ID service, when you receive a first call, time and date will be auto updated in the handset (only for FSK Caller ID signal).

#### 7.1.1 Change the Date Format

- Press and to select HS SETTINGS.
- Press and to select DATE & TIME.
- Press and to select DATE FORMAT.
- Press to select your desired date format (DD-MM-YY or MM-DD-YY).
- Press to confirm.

#### 7.1.2 Change the Time Format

- Press and to select HS SETTINGS.
- Press and to select DATE & TIME.
- Press and to select TIME FORMAT.
- Press to select your desired time format (12 HR or 24 HR).
- Press to confirm.

#### 7.1.3 Set the Time

- Press and to select HS SETTINGS.
- Press and to select DATE & TIME.
- Press and to select SET TIME.
- Press to enter the time information. The time entered will be in the format you set in Section 7.1.2.
- Press to confirm.

Note:

If time has been set before, the current time will display, otherwise, "HH:MM" will display.

#### 7.1.4 Set the Date

- Press and to select HS SETTINGS.
- Press and to select DATE & TIME.
- Press and to select SET DATE.
- Press to enter the date information. The date entered will be in the format you set in Section 7.1.1.
- Press to confirm.

Note:

If date has been set before, the current date will display, otherwise, "DD-MM-YY" will display.

16

### 7.2 Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the displays on the LCD. When the alarm time is reached, the and "ALARM ON" flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes.

#### 7.2.1 Turn on/off the Alarm

- Press and to select HS SETTINGS.
- Press and to select ALARM.
- Press and to select ON/OFF.
- Press to confirm.

Note:

If ON is selected, you will be asked to set the alarm time.

#### 7.2.2 Set the Alarm Time (if the Alarm is set to be ON)

- Follow Steps 1 to 4 in Section 7.2.1.
- Enter the alarm time.
- Press to set the snooze function.
- Press and to select ON or OFF.
- Press to confirm.

### 7.3 Handset Settings

#### 7.3.1 Set the Ringer Melody for Internal Calls

- Press and to select HS SETTINGS.
- Press and to select RING SETUP.
- Press and to select INT RING.
- Press and to select the desired ringer melody (a total of 5 melodies for your selection) for setting ringer melody for internal calls.

Note:

The respective ringer melody will be played while browsing the melody list.

- Press to confirm.

#### 7.3.2 Set the Ringer Volume

- Press and to select HS SETTINGS.
- Press and to select RING SETUP.
- Press and to select RING VOLUME.
- Press and to select the desired ringer volume (a total of 6 ringer volume levels including VOLUME OFF).

Note:

The respective ringer volume will be played during your selection. If VOLUME OFF is selected, icon will display.

- Press to confirm.

17

#### 7.3.3 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

- Press and to select HS SETTINGS.
- Press and to select TONE SETUP.
- Press and to select KEY TONE / BATTERY TONE / OUT OF RANGE.
- Press and to turn on or off these tones.
- Press to confirm.

#### 7.3.4 Set the Handset Language

- Press and to select HS SETTINGS.
- Press and to select LANGUAGE.
- Press and to select the desired language.
- Press to confirm.

#### 7.3.5 Rename the Handset

- Press and to select HS SETTINGS.
- Press and to select RENAME HS.
- Press and enter the name of your handset.
- Press to confirm.

#### 7.3.6 Choose the Information to be displayed in idle

You can choose to display time or handset name in your idle screen.

- Press and to select HS SETTINGS.
- Press and to select HS DISPLAY.
- Press and to select HANDSET NAME or TIME.
- Press to confirm.

#### 7.3.7 Set the Auto Answer

If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.

- Press and to select HS SETTINGS.
- Press and to select AUTO ANSWER.
- Press and to turn on or off the auto answer feature.
- Press to confirm.

### 7.4 Base Settings

The current settings are marked an asterisk which is displayed at the rightmost of the menu item.

#### 7.4.1 De-register a Handset

You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The antenna icon on the de-registered handset will blink.

Note:

You cannot de-register the handset that you are currently using.

- Press and to select BS SETTINGS.
- Press and to select DELETE HS.
- Press and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN. (The default system PIN code is 0000)
- Press and a list of registered handsets is displayed.
- Press to select one of the handsets that you want to de-register.
- Press to confirm.

#### 7.4.2 Change the dial mode

- Press and to select BS SETTINGS.
- Press and to select DIAL MODE.
- Press and to select TONE or PULSE.
- Press to confirm.

#### 7.4.3 Change the Flash Time

The flash time settings is country dependent. Please contact your local service provider for the correct settings.

- Press and to select BS SETTINGS.
- Press and to select FLASH TIME.
- Press and to select your desired flash time (SHORT, MEDIUM, LONG).
- Press to confirm.

#### 7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press and to select BS SETTINGS.
- Press and to select CHANGE PIN.
- Press and you are requested to enter the 4-digit system PIN.
- Enter the old system PIN.
- Press and enter the new system PIN.
- Press and enter the new system PIN again.

Note:

If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

- Press to confirm.

19

### 7.5 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.

If for some reason, the handset is not registered to the base station ( flashes even when the handset is near the base station), register your handset according to the following procedure.

- Press and hold on the base station for about five seconds, the base station is entered into registration mode.
- Press and to select REGISTRATION.
- Press and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press to confirm.

If the handset registration is successful, you will hear a confirmation tone and the will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the will still flash.

### 7.6 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook remains unchanged.

- Press and to select DEFAULT.
- Press and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press to confirm.
- Press to re-confirm.

20

## 8. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Cause	Solutions
No dialing tone when pressing  key.	a. Telephone cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another handset is used.	a. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station DC socket and the AC adaptor plug (remove and plug-in). c. Wait until the line is unoccupied.
When connected to a PABX, cannot make outgoing calls or call reaches a wrong number.	Dialing prefix is needed.	Insert the dialing prefix.
"SEARCHING" is displayed.	a. Base station out of range. b. Base station not connected to mains. c. Handset out of Registration with base.	a. Reduce the range. b. Connect base station to mains. c. Please register the handset with base.
Cannot make a call.	Service not activated or wrong setting.	Check your Subscription with network or change the dial mode.
No display.	Empty battery.	Recharge battery.
Caller ID cannot appear.	No caller ID service available in the network.	Check if you have subscribed for caller ID service.

## 9. CONFORMITY

This unit conforms to the following rules and regulations: 1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity. The CE mark proves the above.



**Due to continuous product development all features and specifications are subject to change without prior notice. For more information on Warranty and Product Support please contact:**

**Alcom Electronics Pte Ltd Singapore**  
**Phone: (65) 6841 2668 Fax: (65) 6841 2628**  
**Email: support@alcom.com.sg**  
**Website: www.alcomonline.com**

22

23