

---

---

**ALCOM**  
*Quality Lifestyle*

**MODEL:AT3108**  
**Instruction Manual**




**Red:** unlock, you can dial any phone numbers.  
**Green:** Lock all. You can't dial any telephone numbers.

Note: Due to continuous product development All features and specifications are subject to change without prior notice

For more information on Warranty and Product Support in Singapore please call  
(65) 68412668 or Fax to (65) 68412628.  
Email: support@alcom.com.sg  
Website: www.alcomonline.com

## ILLUSTRATION OF FUNCTIONS

1. Hook Button
2. Wall Button
3. Dialing Button
4. REDIAL Button
5. FLASH Button
6. PAUSE Button

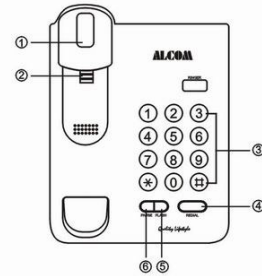

## FEATURES

1. Pause function
2. Redial the last number
3. Flash function
4. Ringer HI/LOW Switchable

## INSTALLATION

- 
1. Open your gift box and take out all the accessories including the base unit, handset, line cord and the coil cord.
  2. Connect the handset properly with the base unit by the attached coil cord, and place the handset on the base unit on the hook button.
  3. Connect the base unit properly with telephone JACK by the attached line cord.
  4. The dial tone send out from the handset means a successful installation of the phone.

## **OPERATION**

### **1. MAKING A CALL**

Pick up the handset, Key in the desired number on the numeric keypad when you hear a dial tone, you may communicate with the other end when he picks up his handset.

### **2. RECEIVING A CALL**

The phone will ring up when it receives a calling signal. Pick up your handset for conversation when it is ringing. Put back the handset properly to hang up after your conversation is completed.

- 2 -

---

### **3. PAUSE FUNCTION**

During the dialing, press PAUSE button to pause 600ms.

### **4. REDIAL FUNCTION**

In case you got a busy line, press FLASH and then press REDIAL, the number you dialed just now will be dialed out again automatically. This operation can be repeated.

### **5. FLASH FUNCTION**

In working mode, if you press FLASH button, the line will be disconnected for 600 MS and then be put through again automatically.

### **6. RINGER SWITCH**

There is the RINGER Switch on back of the base unit, HI: the highest ringer volume. LO: the lowest ringer volume.

### **7. LOCK**

There is the 2 position machinery lock on back of the base unit

- 3 -