
### **ILLUSTRATION OF FUNCTIONS**

- 1. Hook Button
- 2. Wall Button
- 3. Dialing Button
- 4. REDIAL Button
- 5. FLASH Button
- 6. PAUSE Button

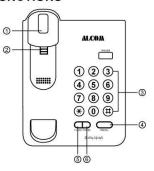

# **FEATURES**

- 1. Pause function
- 2. Redial the last number
- 3. Flash function
- 4. Ringer HI/LOW Switchable

### **INSTALLATION**

- Open your gift box and take out all the accessories including the base unit, handset, line cord and the coil cord.
- Connect the handset properly with the base unit by the attached coil cord,and place the handset on the base unit on the hook button.
- Connect the base unit properly with telephone JACK by the attached line cord.

The dial tone send out from the handset means a successful installation of the phone.

#### **OPERAION**

#### 1. MAKING A CALL

Pick up the handset ,key in the desired number on the numeric keypad when you hear a dial tone,you may communicate with the other end when he picks up his handset.

### 2. RECEIVING A CALL

The phone will ring up when it receives a calling signal.Pick up your handset for conversation when it is ringing .Put back the handset properly to hang up after your conversation is completed.

### 3. PAUSE FUNCTION

During the dialing ,press PAUSE button to pause 600ms.

#### 4. REDIAL FUNCTION

In case you got a busy line, press FLASH and then press REDIAL, the number you dialed just now will be dialed out again automatically. This operation can be repeated.

# 5. FLASH FUNCTION

 
In wotking mode ,if you press FLASH button ,the line will be disconnected for 600 MS and then be put through again automatically.

# 6. RINGER SWITCH

There is the RINGER switch on back of the base unit, HIGH: the highest ringer volume. LOW: the lowest ringer volume.



MODEL:AT3308
Instruction Manual



For more Information on Warranty and Product Support in Singapore please call (65) 68412668 or Fax to (65) 68412628.

Email: support@alcom.com.sg Website: www.alcomonline.com

