



AT7080

## Caller ID Telephone



## USER MANUAL

Thank you for choosing ALCOM AT7080 Caller ID Telephone. This telephone adopts the latest advanced technology and is Integrated with multi-functions, contributing a lot to your life. For the maximum use of this product please read the instructions carefully before using it.

### FEATURES

- FSK/DTMF Caller ID
- Redial of incoming numbers
- Dialed numbers record with redial
- Auto talk timer
- Hands free monitor Ring volume adjustable
- Automatic redial
- Long-distance call lock function
- 3 level brightness adjust
- Alarm function
- Hold on music

### INSTALLATION INSTRUCTIONS

1. Please apply for the Calling Identity Service from your local Telephone service provider.
2. If this phone is used as a parallel phone, please install two AA batteries into it. (If not used as a parallel phone, it can work normally without battery.)
3. Keep the phone in a place that is dry and ventilated.
4. This unit does not have a built in MIC in the base. H.F. mode is just Listening monitor. Please pickup handset to talk.

### SETTING

Every setting option needs to be confirmed by pressing the [SET] key, and pressing [DEL] key to return normal mode.

#### 1. SETTING DATE

- a) Press [SET] key, screen displays "Set 12345678" and "12345678" will flash.
- b) Press [1], screen displays "1-DATE 2-CL".
- c) Press [1] to enter date setting (Year, Month and Date will flash).
- d) Press numeric keys and adjust the Year>Month>Date.
- e) Press [SET] key to confirm.

#### 2. SETTING TIME

- a) Press [SET] key, screen displays "Set 12345678" and "12345678" will flash.
- b) Press [1], screen displays "1-DATE 2-CL"
- c) Press [2] for clock Setting, screen displays "CL 00-00". (Hour and Min will flash)
- d) Press numeric keys to adjust Hour>Min.
- e) Press [SET] key to confirm. Press [H.F. Monitor] key to exit. For example, if you want to set the time 18:20, August 30, 2003, press [SET]> [1]> [1]> [030830]> [SET]> [2]> [18:20]> [SET]

-1-

### 3. RING TONES AND VOLUME

#### SETTING RING TONE

- a) Press [SET] key then press [2], screen displays "r 1tVIP3VoL".
- b) Press [UP/-] Key, screen displays "ring tyPE 01".
- c) Press [SET] Key the numeric digit will flash.
- d) Press [UP/-] or [DOWN/+] to choose the ring tone (01-16).
- e) Press [SET] Key to confirm, flashing numeric digit will stop.

#### SETTING RING VOLUME

- f) Press [DEL] key to return to step a) for adjusting volume.
- g) Press [DOWN/+] Key, screen displays "ring VOL 4".
- h) Press [SET] Key the numeric digit will flash.
- i) Press [UP/-] or [DOWN/+] to adjust ringer volume (1 - 4).
- j) Press [SET] Key to confirm, flashing numeric digit will stop.

#### SETTING VIP RING TONE

- k) Press [DEL] key to return to step a) for adjusting VIP tone.
- l) Press [SET] key then press [2], screen displays "r 1tVIP3VoL".
- m) Press [UP/-] Key twice, screen displays "ring VIP 01".
- n) Press [SET] Key the numeric digit will flash.
- o) Press [UP/-] or [DOWN/+] to choose the ring tone (01-16).
- p) Press [SET] Key to confirm, flashing numeric digit will stop.
- q) Press [DEL] Key to exit.

**Note: The ring volume cannot be set to OFF.**

#### 4. ALARM SETTING

Press [SET] key then press [3], the LCD displays "AL1-2-3", press numeric keys to enter setting. Press [1] to enter the first set of alarm setting, the screen displays "ALAr OFF". When OFF flashes, input desired time. To Off Alarm use the [UP/-] or [DOWN/+] key, choose OFF option, and press the [SET] key to confirm. The setting of AL 2 & AL 3 is same to that of the first set.

**Note: Choose the first set for single alarm and the 2nd /3rd set for daily alarm. To stop the alarm, press any key.**

#### 5. DO NOT DISTURB

You can set the phone to DO NOT DISTURB mode. Press [SET] key then press [4], LCD displays the sub option "OFF-r 00-00", and input desired time when the digits flash. Press the [SET] key to confirm and press [H.F. Monitor] key exit. When do not disturb mode is activated, the screen displays the time set and starts to countdown in minutes, when finished, the function will be cancelled automatically, you can exit function by picking up the receiver or Pressing the [H.F. Monitor] key.

**Note: When Do not disturb mode is active, there will be no ring for Incoming calls except calls from VIP list.**

#### 6. FLASH FUNCTION

-2-

Press [SET] key then press [5], the screen displays the sub option "1-F 2-PT 3-D" which will flash Press [1] to enter FLASH TIME SETTING, press [UP/-] or [DOWN/+] key to choose flash time from 90, 95, 100, 120, 180, 300, 600, and 1000ms. Press [SET] key to confirm.

**Note: The default setting is 600ms. During a call press [FLASH] key to access a call waiting line (second line). Press [FLASH] key to toggle between the two calls. Also when a call is engaged press [FLASH] key to get a fresh dial tone.**

#### 7. DIAL MODE

Press [SET] key then press [5], the screen displays the sub option "1-F 2-PT 3-D" which will flash Press [2] to enter DIAL MODE SETTING, screen displays "P t tone" will flash, Press [UP/-] or [DOWN/+] key to choose tone or pulse and press [SET] key to confirm.

**Note: The default setting is TONE dialing.**

#### 8. ANTI - PARALLEL

Press [SET] key then press [5], the screen displays the sub option "1-F 2-PT 3-D" which will flash press [3] to enter ANTI-PARALLEL SETTING, screen "dEFEnd on", which will flash press [UP/-] or [DOWN/+] key to select On or OFF.

**Note: The default setting is OFF.**

#### 9. LOCAL AREA CODE

**Note: Local area setting is not applicable when used in Singapore.** Press [SET] key then press [6], screen displays the sub option "1-LOC 2-OL" will flash Press [1] to enter local area code setting, choose 1-8 digits as required by pressing keypad directly and press [SET] key to confirm.

#### 10. PABX CODE

Press [SET] key then press [6], screen displays the sub option "1-LOC 2-OL" will flash Press [2] to enter PABX-CODE setting, screen displays "out OFF", will flash, choose 1-8 digits as required by pressing keypad directly and press [SET] key to confirm, and Press [H.F. Monitor] key to exit.

**Note: For example if "9" is keyed in as the first digit, the numbers Dialed from Incoming, Redial & Out list will add "9" in front and first digit will not be seen in the display when dialed. Default Setting is "OFF".**

#### 11. LCD BRIGHTNESS

Press [SET] key then press [7], the LCD displays the sub option "LCD con" will flash, press [UP/-] or [DOWN/+] key to choose level from 1-5, press [SET] key to confirm.

**Note: The default setting is 3.**

#### 12. IP FUNCTION SETTING

**Note: This function is not applicable for Singapore and [IP] key**

-3-

should be ignored.

#### 13. H.F. Monitor

This mode is used as a monitor to listen when dialing or when using one way calls for example electronic phone banking services. However if you need to talk to the other party you must pick up the handset.

**Note: Two way conversation is not possible in H.F. Mode.**

#### 14. INCOMING CALLS LIST

Search the incoming numbers and time by pressing [UP/-] or [DOWN/+]

keys.

#### 15. DIALED CALLS LIST

Search the dialed numbers by pressing [OUT/X] key once and press

[UP/-] or [DOWN/+] Keys to search the dialed numbers.

#### 16. REDIAL

To redial last number press [REDIAL/P], and press [BACK/÷] key to dial out, pick up the handset to talk. To redial from the Incoming list press [UP/-] or [DOWN/+] keys to choose a number and Press [BACK/÷] key to dial out; pick up the handset to talk.

#### 17. PRE DIAL

When the phone is on hook, dial the number directly, check the number on screen, if any of the digits are incorrect, use the [DEL] key to delete, and then input the correct number. Once the number is correct, press [H.F. Monitor] key to dial automatically. Pick up the handset to talk.

#### 18. DELETE

When the phone is on hook (pre dial mode), any wrong digits entered can be deleted by pressing the [DEL] key once. When viewing incoming calls list or outgoing call list press [DEL] key once to delete the number or press and hold [DEL] key for 3secs to delete the complete list.

#### 19. HOLD ON MUSIC

During a conversation press the [HOLD] key and both the parties will hear the music. To get back to conversation press [HOLD] key again.

**Note: In the hold on mode the mic in the handset of this phone will be muted.**

#### 20. AUTOMATIC REDIAL

If the called party is busy, press [BACK/÷] key to enter automatic redial mode. The unit will start to automatically redial the number in a 5secs interval until it gets the ring back tone. To cancel this mode pick up the handset and put back.

#### 21. CALCULATOR

In On Hook or Off Hook mode press [CAL] key and unit will enter calculator mode and screen will display "0". Enter the required numbers using the dial pad and keys to the required Calculation symbols. Pick up

-4-

handset to exit Calculator mode. Calculator mode will auto exit if no keys are pressed or if there is an incoming call.

**Note: For example 12 X 24, press [CAL] button to enter calculator mode input number 12, then press [OUT/X] key, input number 24, then Press [=/] key, LCD shows the answer 288.**

#### 22. KEY LOCK

When the lock is set to Red position, all numbers can be dialed. When the lock is set to Green position number starting with "0" can't be dialed.

**Example: Long distance calls starting with "0" can not be dialed.**

#### TROUBLE SHOOTING

##### NO TONE

Please check the telephone line cable, and ensure connections are proper.

##### CAN NOT MAKE/DIAL A CALL

Please check the lock position and ensure Keys are unlocked.

##### NOISE

Please check if the line cord or wall plug is moisture.

##### RING ONCE ONLY BUT CAN MAKE CALLS

Please check the line connection, check if too many phones are connected

in the same line, or the wall socket or line cord is moisture.

##### CANNOT DISPLAY CALLER ID

Be sure that you have applied this service from your Telecom service provider. Check if the battery has not drained and it has power. Check if any other apparatus is connected between the unit and Telephone line which causes CID data loss. If the unit still does not work properly, disconnect all the telephone cords, remove the batteries, after 5 minutes, reload batteries, and insert the telephone line. The unit will get a reset.

**Note: Due to continuous product development all features and specifications are subject to change without prior notice**

##### For more Information on Warranty and Product Support in Singapore please call

(65) 68412668 or Fax to (65) 68412628.

Email: support@alcom.com.sg

Website: www.alcomonline.com

-5-