



# Digital Cordless Telephone

## Model BL100

## User's Guide



### CAUTION

Rechargeable batteries are included with this DECT phone Never use non-rechargeable batteries! Use of improper batteries will void the warranty and risk the danger of explosion.

# Introduction

## Important Safety Notes

Please observe the following to ensure reliable operation of the telephone:

- Read this manual thoroughly and observe the operating instructions and information provided.
- Place the base station on a non-slip surface and lay the connection cables so they cannot be the source of an accident.
- Do not expose the equipment to extreme temperatures or high relative humidity and protect it from direct sunlight and dusty conditions.
- Clean the equipment with a soft, damp cloth. Do not use any solvents or aggressive cleaning agents.
- Only connect approved accessories.
- Only use the power plug supplied.
- Never open the unit. Opening the unit annuls claims under the terms of guarantee and exposes the person to the risk of an electric shock.

- Repairs to defective units should only be carried out by service centers recommended by the sales outlet.
- We recommend removing the batteries if the equipment is not to be used for longer periods.
- Only replace the batteries with types recommended by us. Dispose of defective batteries according to the applicable local laws (not in household waste). We assume no liability for damage caused by using the equipment for unintended purposes.

## **Exemption from Liability**

We cannot guarantee the information which relates to the technical properties or that contained in this document is correct. The product and its accessories described in this document are subject to constant improvement and further development. For this reason, we reserve the right to modify components, accessories, technical specifications and related documentation of the Product described herein without notification.

## **Intended Use**

This telephone is designed for communicating within a telephone network. Any other use is considered unintended use. Unauthorized modifications or reconstruction not described in this manual is not permitted.

 
# Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in User's Guide.
- Keep batteries out of children.
- Remove batteries if storing over 30 days.

## Connecting the Base Station and Power Plug

Connecting the plugs to the corresponding sockets in the base station ( they can not be connected incorrectly because the sockets and plugs are designed prevent reverse poling). Lay the cable under the telephone to the rear. Plug the telephone line in the telephone connection socket. Insert the power plug at the other end in the power outlet. The base station is now ready to operate.

**Only use the connection cable supplied.**

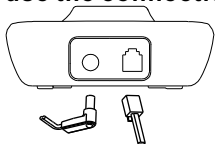

AC power outlet  
Phone jack




### **CAUTION:**

 Plug the adapter to the socket outlet that is near the equipment and shall be easily accessible. **USE ONLY WITH PROVIDED ADAPTOR.** Using other power supplies may damage the unit.

# Getting Started

## Install and Charge the Batteries

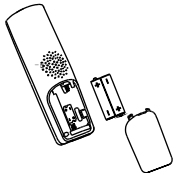

Insert two pieces Rechargeable AAA batteries in the compartment, ensuring correct polarity and close the compartment

- Please wait for 30 seconds after removing the old batteries when change and install a new pair battery.
- Place the handset in the base station to charge for 14 hours prior for first use. If you don't properly charge the phone, battery performance will be Compromised.
- Use only with provided batteries.

### **Warning:**

**The handset will not work and damage if wrong batteries are inserted.**

**Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instruction for recycling in your country. If batteries are empty, handset LCD will not display and the handset will not respond to any key. Handset is then required to put back on Base Station / Charger cradle to charge.**

 
**If handset is not charged fully before use, handset may emit battery low alert tone and battery level indicator will show empty.**




 



## **Feature List**

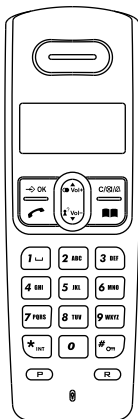


1. Comfortable digital cordless phone with DECT standards
  2. 25 Names and number phone book
  3. Caller ID\* and Caller ID on Call Waiting
  4. Incoming 20 names/numbers call log
  5. Multi-language menu
  6. 10 Ringtone melodies
  7. Ringer on/off
  8. 10 Last number redial
  9. 5 level ring volume
  10. Real time clock display
  11. Handset can be named
  12. Automatic call answering
  13. Key input tone on/off
  14. Keypad lock
  15. Teleconference+
  16. Internal free communication between handsets+
  17. Battery status icon low battery warning
  18. Up to 100 hours standby
  19. Up to 10 hours continuous talk time
  20. Out of range warning
  21. Recall/Pause/Hold
  22. Tone and pulse dialling
- + More than one handset require  
\* Subscription may be required. Please contact your network provider.

 
**DECT: Digitally Enhanced Cordless Telephone Standard for Cordless telephones.**

# Handset and Base Layouts



 <b>Vol+</b>	Redial / Up / Increase volume key
 <b>Vol-</b>	Caller ID / Down / Decrease volume key
 <b>OK</b>	Menu / OK key
 <b>C/⊗/⊘</b>	Cancel / Mute / Ring off key
 <b>R</b>	Flash key
	Phone book key
	Talk / Off key

 
	Asterisk /INT key
	Hash /Keypad lock key
	Pause Key

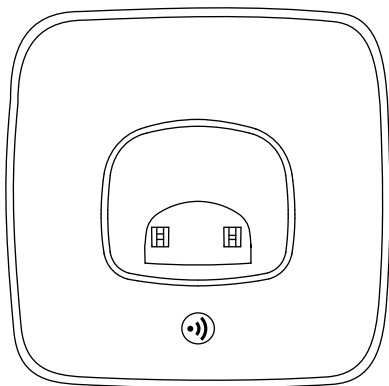







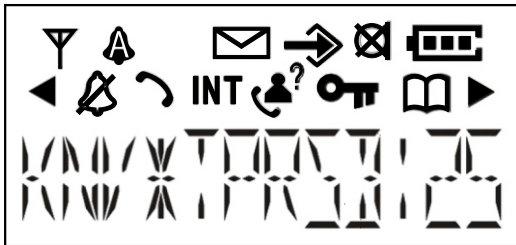




	Paging
---	--------





# LCD Display





Icon	Description
	Aerial icon
	Phone icon
	Key lock icon
	No ring icon
	Microphone mute icon
<b>INT</b>	Intercom call indicator
	Battery level indicator
	Phonebook icon
	Menu icon
	Voice mail waiting indicator (VMWI icon)
	Caller ID icon
	Alarm icon

# Basic Operation



## Make a Call

1. Press the  key, wait for a dial tone, then dial the desired number.
2. After finishing the conversation, press  key or place the cordless handset into the charger. The talk timer will be shown for about 2 seconds before return to idle mode.


## Pre-dialling



1. When the handset is in idle mode, dial the desired number.
2. Press **C** key to cancel the wrong digit, dial the correct one again. If a pause is needed during dialing, press and hold **P** key for a while and character “**P**” will be shown. A 3 seconds pause will be added while dialing.
3. Press the  key, the number will be automatically dialled out.
4. After finishing the conversation, press  key or place the cordless handset into the charger. The talk timer will be shown for about 2 seconds before return to idle mode.

## Adjust the Receiver Volume


While the phone is in talk mode, press  or  key on the handset to adjust the receiver volume of the handset. There are **5** possible volume selections for handset receiver. The display will show the current volume level during adjusting.

## Answer a Call


When the phone rings, the icon  will flash and the LCD on the handset will show "CALL". If you have subscribed to Caller ID service from your local telephone company, the incoming call information will be shown.

1. Press the  key to answer a call.
2. After finishing the conversation, press  key or place the cordless handset into the charger.





## Auto Answer

If you set on the "AUTO TALK", just need to pick up the cordless handset from the charger to answer the call. Directly, needn't press  key.

## Dialing from the Phone Book


Press  button when in standby mode, the first entry in the phone book appears.

**Note:** If there is no record in phone book, "PB EMPTY" information will display

1. Press  or  key to select the required record from the phone book.
2. Press  key to dial the number.
3. After finishing the conversation, press  key or place the cordless handset into the charger to terminate the call.

## Intercom

You can make an intercom between any two handsets (If you have more than one handset).

1. When the handset is in idle mode, press and hold **INT** key, "INT-NUMBER?" will be shown, dial the handset number to call.
2. The called handset will ring and the LCD will show the calling handset's number.
3. Press  key in the called handset to answer.

## Call Transfer

The function allows you to transfer an external call from a handset to another handset.

1. When the caller is on line, press and hold **INT** key on the calling unit and dial the handset number to transfer. The line will be put on hold.
2. After the called unit answers the call, the intercom will begin between the two handsets.
3. If you want to transfer the call to the called unit, end the call at the calling unit. The call will be automatically transferred to the called unit.

**Note:** If the called unit doesn't answer the intercom Call within 30 seconds, the calling unit will return to the talk mode with the caller.

## Call Waiting

If you have subscribed to the service of CID on Call waiting, the telephone will show the phone number of another incoming call while you are talking on the phone.

1. Press R key to put the current call on hold and talk with the second caller.
  2. Subsequent presses of R key will toggle you between these 2 callers.
- Caller information of this second call will be stored in the call log.

## Three-way Conversation

You may have a 3-way conversation using the intercom and external line.

1. When the caller on line, press and hold **INT** key on the calling unit and dial the handset number. The line will be put on hold.
2. After the called unit answers the call, the intercom will begin between the two handsets.
3. Press  $\rightarrow$  OK key on the handset to enter menu, then press  $\blacktriangle$  or  $\blacktriangledown$  key to select “CONFERENCE”, press  $\rightarrow$  OK key on the handset to confirm. The three-way conference will begin between the two handsets and the caller.

**Note:** Only the calling unit can operate the “CONFERENCE”.

## Muting the Ringer volume

Press and hold **C/📞/🔇** key in idle mode to activate or deactivate the handset Ringer. The 🔇 icon turns on or off.

## Muting the Microphone

Press **C/📞/🔇** key can switch the microphone on or off during a call. The 📞 icon turns on or off.

## Paging the Handset



If a handset has been misplaced, it is possible to call all the handsets.

Short press **Page** key on the base to station.

To stop the page call:

Short press any key on the handset or press **page** key briefly on the base.



## Switching the Key Lock On/Off

Press and hold **#**  key to activate or deactivate the key lock. The  icon turns on or off.


## Redial Function

The last 10 numbers you dialed out will be separately stored in handset redial memory.

### Review and Dial Redial Record

1. When the handset is in idle mode, press  **Vol+** key to display the last redial record. If the redial record is empty, "EMPTY" will be shown.
2. Press **▲** or **▼** key to select the desired redial number.
3. Press  key, the telephone number is automatically dialed out.


### Save Redial Number

1. When the handset is in idle mode, press  **Vol+** key.
2. Press **▲** or **▼** key to select the desired redial number.
3. Press **→** **OK** key to enter menu, press **▲** or **▼** key to


select "SAVE NUMBER", press →OK key on the handset, the selected number will be shown, press →OK Key, "ENTER NAME" will be shown and input the desired name. You must input the name, otherwise the record can't be saved.

4. Press →OK key to save.

## Delete a Single Redial Record

1. When the cordless handset is in idle mode, press  Vol+ Key.
2. Press ▲ or ▼ key to select the desired redial number.
3. Press →OK key to enter menu, press ▲ or ▼ key to select "DELETE?", Press →OK key, "CONFIRM?" will be shown.
4. Press →OK key to confirm.

## Delete All Redial Records

1. When the handset is in idle mode, press  Vol+ key.
2. Press ▲ or ▼ key to select the desired redial number.
3. Press →OK key to enter menu, press ▲ or ▼ key to select "DELETE ALL?", press →OK key, "CONFIRM?" will be shown.
4. Press →OK key to confirm.

Note: In the redial function menu, If you want to return to the redial list, press C key.

## Caller ID Service

The caller's information will be displayed and recorded if you have subscribed to Caller ID service from your local telephone company.


When the telephone rings, the caller's information will


be displayed on the handset LCD display. This information includes the phone number and name (if supported). The handset can store up to 20 calls for later review (up to 16 digits and 16 characters for each record). When the memory is full, a new call automatically replaces the oldest call in the memory.


**Note:** If the caller's information includes Date/Time, the Date/Time will be stored with the record. The Date/Time displayed on the LCD display will be updated after receiving a call.

If the caller number is same as one of phonebook memory, the matched name stored in the phonebook memory will be displayed. If the incoming call is registered as "PRIVATE NUMBER" and its caller ID information is withheld, the LCD will show "WITHHELD". If the incoming call does not have Caller ID service or its service area is not linked to yours, the LCD will show "UNAVAILABLE".

The handset will prompt user if there is unanswered call.

When the handset is in idle mode, "  " will be displayed prior to other display information.


If you reviewed all the missed calls from handset, the display "  " will be disappeared.

**Note:** 1. If you reviewed all the missed calls from one handset, the display "  " will still on other handsets.  
2. Press \* key to toggle the display between name and number.


**Note:** Message alert Indicator will only work if supported by you telephone service provider



## Review Caller ID Record



1. When the handset is in idle mode, press  key to display the information for the last call received.
2. Press ▲ or ▼ key to review all call records.
3. When you scroll to the end, "--(GO BACK)--" will be shown.

### Note:

1. The "" icon will turn on if the call is a missed call.
2. "EMPTY" will be displayed for 2 seconds and return to idle mode if you have not received any call.


## Edit and Dial Call Record

You can edit the call record so as to dial back.

1. When the handset is in idle mode, press  key.
2. Press ▲ or ▼ key to select the desired record.
3. Press →OK key to enter menu.
4. Press ▲ or ▼ key to select "Select", press →OK key.
5. Press ▲ key to select the desired location and enter the number. To delete a digit before the cursor press C.
6. After editing, press  key to dial out the edited number.


**Note:** you may edit the number and make the call, but the edited number cannot be saved in this option.

## Save Call Record


1. When the handset is in idle mode, press  key.
2. Press ▲ or ▼ key to select the desired record.

3. Press →OK key to enter menu.
4. Press ▲ or ▼ key to select “SAVE NUMBER”, press →OK key. the selected number will be shown, press →OK key, “ENTER NAME” will be shown and input the desired name. You must input the name, otherwise the record can't be saved.
5. Press →OK key to save.

## Delete a Single Call Record

1. When the handset is in idle mode, press  Vol- key.
2. Press ▲ or ▼ key to select the desired record.
3. Press →OK key to enter menu.
4. Press ▲ or ▼ key to select “DELETE?”, Press →OK key, “CONFIRM?” will be shown.
5. Press →OK key to confirm.

## Delete All Call Record

1. When the handset is in idle mode, press  Vol- key.
2. Press ▲ or ▼ key to select the desired record.
3. Press →OK key to enter menu. press ▲ or ▼ key to select “DELETE ALL?”, Press →OK key, “CONFIRM?” will be shown.
4. Press →OK key to confirm.

## Phone Book

The telephone can store up to 25 entries in the phone book with name and call number. When the function is Supported by the telephone provider, the handset displays the name of the caller (when stored in the phone book).

## Store Entries

1. Press **■** key to access phone book memory.
2. Press **→OK** key to access phone book menu.
3. Press **▲** or **▼** key to select ADD NEW and press **→OK** Key.
4. Enter number (max. 16 digits) and press **→OK** key when finished.
5. Enter name (max. 16 characters) and press **→OK** key when finished.

Note: 1. When the capacity is full, MEMORY FULL will display.

2. Any incorrect input can be deleted by pressing **C** key.

## Select Entries

Press **■** key to access phone book memory.

1. Press **▲** or **▼** key to scroll.
2. Press **→OK** key to select a desired entry, and then press **▲** or **▼** to select the submenu SELECT.
3. Press **→OK** key to select the telephone number, you may edit the number and make the call, but the edited number cannot be saved in this option.

## Edit Entries

Press **■** key to access phone book memory.

1. Press **▲** or **▼** key to scroll.
2. Press **→OK** key to select a desired entry, and then Press **▲** or **▼** to select the submenu "EDIT".
3. Press **→OK** to start Number edition and press key

again to start Name edition.

4. Press →OK key to confirm.

**Note:** Press **C** key to delete any incorrect input.

### **Delete Entries**

Press ■■ key to access phone book memory.

1. Press ▲ or ▼ key to scroll.
2. Press →OK key to select a desired entry, and then press ▲ or ▼ to select the submenu “DELETE?”
3. Press →OK key to delete the entry.
4. Press →OK key again to confirm.

### **Delete All Entries**

Press ■■ key to access phone book memory.

1. Press ▲ or ▼ key to scroll.
2. Press →OK key to select a desired entry, and then Press ▲ or ▼ to select the submenu “DELETE ALL?”
3. Press →OK key to delete the entry.
4. Press →OK key again to confirm.

## **Menu Operation**

### **Handset Setting**

#### **Ring Melody**

You may select one of the 10 available ringer tones for your incoming calls alert tone. The default setting is “MELODY 1”.

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETUP HS” and press →OK Key.
3. Press ▲ or ▼ key to select “RING MELODY” and

press →OK key.

4. Press ▲ or ▼ key to select the desired ring melody, the selected melody will be sounded.
5. Press →OK key to confirm the setting.

## **Ring Volume**

You may select one of the 5 available volumes for your incoming calls alert tone. The default setting is volume 5. Ringer can be disabled by pressing C key for 1.5 seconds in idle mode.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Setup HS” and press →OK key.
3. Press ▲ or ▼ key to select “Ring volume” and press →OK key.
4. Press ▲ or ▼ key to select the desired ring volume, the selected volume will be sounded.
5. Press →OK key to confirm the setting.

## **TONES**

### **Low Battery**

You may set the warning beep to “ON” when your cordless handset battery is low, so as to alert you to charge the battery. The default setting is “ON”.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Setup HS” and press →OK key.
3. Press ▲ or ▼ key to select “Tones” and press →OK key.
4. Press ▲ or ▼ key to select “Low battery” and press →OK Key.

5. Press ▲ or ▼ key to select “ON” or “OFF”.
6. Press →OK key to confirm the setting.

## No Coverage

You may set the warning beep to “ON” or “OFF” when the cordless handset is out of range.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Setup HS” and press →OK key.
3. Press ▲ or ▼ key to select “Tones” and press →OK Key.
4. Press ▲ or ▼ key to select “No coverage” and press →OK key.
5. Press ▲ or ▼ key to select “ON” or “OFF”.
6. Press →OK key to confirm the setting.


## Key Tone

You may set the key tone to “ON” or “OFF” when you press the keypad. The default setting is “ON”.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Setup HS” and press →OK key.
3. Press ▲ or ▼ key to select “Tones” and press →OK key.
4. Press ▲ or ▼ key to select “Key Tone” and press →OK key.
5. Press ▲ or ▼ key to select “ON” or “OFF”.
6. Press →OK key to confirm the setting.

## Auto Talk

This option allows user to pick up the cordless handset from charger to answer the call directly

when a call is coming, and no need to press  key. The default setting is "ON".

1. Press  $\rightarrow$  OK key.
2. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select "Setup HS" and press  $\rightarrow$  OK key.
3. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select "Auto talk" and press  $\rightarrow$  OK key.
4. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select "ON" or "OFF".
5. Press  $\rightarrow$  OK key to confirm the setting.

## Alarm

1. Press  $\rightarrow$  OK key.
2. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select SETUP HS and press  $\rightarrow$  OK key.
3. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select ALARM and press  $\rightarrow$  OK Key.
4. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select ON or OFF.
5. Enter HH:MM in 24 hour format
6. Press  $\rightarrow$  OK key to confirm.

Note: When Alarm time is reached, "ALARM ON" will be blinking and alarm sound will stop after around 1 minute.

## Handset Name

You can set the cordless handset name that you like. The default setting is "DECT".

1. Press  $\rightarrow$  OK key.
2. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select "Setup HS" and press  $\rightarrow$  OK Key.
3. Press  $\blacktriangle$  or  $\blacktriangledown$  key to select "NAmE" and press  $\rightarrow$  OK Key.
4. Press C key to delete the current name.

5. Input the desired name using number key.
6. Press →OK key to confirm the setting.

## Language

14 different languages are available for selection for each handset(default language is set to English).

1. Press →OK key.
2. Press ▲ or ▼ key to select “Setup HS” and press →OK key.
3. Press ▲ or ▼ key to select “Language” and press →OK key.
4. Press ▲ or ▼ key to select Language.
5. Press →OK key to confirm the setting.

## Reset Handset

This option allows user to restore the cordless Handset to the default setting.

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETup HS” and press →OK Key.
3. Press ▲ or ▼ key to select “REset” and press →OK key, the LCD will display “Reset?”.
4. Press →OK key to confirm the setting.

## Base Setting

### Change PIN

PIN is your base's identification number, the function is to avoid the setting is changed by others. The default setting is “0000”. You may change the PIN.

**Please take note of the change so as to operate the unit normally.**

1. Press →OK key.



2. Press ▲ or ▼ key to select “SETUP BS” and press →OK key.
3. Press ▲ or ▼ key to select “CHange PIN” and press →OK key, the LCD will show “ENter PIN”.
4. Press number key to input the old PIN code and press →OK key, the LCD will show “New PIN”, prompt you to input a new PIN code.

**Note:** “Wrong PIN” will be shown if the old PIN code

You input is wrong, and then return to step 4.

5. Input the desired new PIN code and press →OK key, the LCD will show “REpeat PIN”, prompt you to input the new PIN code again.
6. Input the new PIN code again and press →OK key to confirm the setting.

**Note:** 1. The PIN code must be 4 digits.

## Dial Mode


You may set the dial mode to “TONE” or “PULSE” according to your needs. The default setting is “Tone”.

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETUP BS” and press →OK key.
3. Press ▲ or ▼ key to select “Dial mode” and press →OK Key.
4. Press ▲ or ▼ key to select “Tone” or “Pulse”.
5. Press →OK key to confirm the setting.

## Recall Time

You may select flash time from 100ms to 800ms according to your needs. The default setting is 600ms.

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETUP BS” and press →OK key.
3. Press ▲ or ▼ key to select “Recall time” and press →OK key.
4. Press ▲ or ▼ key to select the desired flash time.
5. Press →OK key to confirm the setting.

**VMWI** (should be supported by your telephone service provider)  
If you have subscribed to a voice messaging service, the  icon will display on the handset to alert you if you have a messages waiting.

### **To turn Visual Message Waiting Indication (VMWI) to OFF**

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETUP BS” and press →OK key.
3. Press ▲ or ▼ key to select “VMWI” and press key. “VMWI OFF?” will display.
4. Press →OK key to confirm the setting.

### **Reset Base**

This option allows user to restore the base and Date/Time to the default setting.

1. Press →OK key.
2. Press ▲ or ▼ key to select “SETUP BS” and press →OK key.
3. Press ▲ or ▼ key to select “Reset” and press →OK key, the LCD will display “Enter PIN”.
4. Input the correct PIN code using number key, press

→OK Key to confirm, and the LCD will display "Reset?".

5. Press →OK key to confirm the setting.

## **Date / Time**

You can set the Date/Time displayed in idle mode. The default setting is "2008, 01/01 12:00".

1. Press →OK key.
2. Press ▲ or ▼ key to select "Date/Time" and press →OK key, the LCD will display "YEAr 2008".
3. Input the correct last two digits of year (range: 00-99) using number key, press →OK key to confirm the setting and enter month and date setting.
4. Input the correct month and date, the format is: date / month (date range: 01-30/31 , month range: 01-12) using number key, press →OK key to confirm the setting and enter time setting.
5. Input the correct time, the format is: hour/minute (hour range: 00-23, minute range: 00-59) using number key.
6. Press →OK key to confirm the setting.

**Note:** If the value you input is over the range during setting, you can't enter next setting by pressing →OK key, please enter the correct setting again.

## **Registration**

### **Register**

Up to 6 cordless handsets can be registered to one base.

1. Press →OK key.
2. Press ▲ or ▼ key to select "Registration" and press →OK key.

3. Press ▲ or ▼ key to select “Register” and press →OK key, Press ▲ or ▼ key to select a base and Press →OK key, the LCD will display “Enter PIN”.
4. Input the correct PIN code and press →OK key to begin to register the cordless handset, the LCD will display “Searching”.
5. Press and hold the **page** key for about 15 seconds.

**Note:** 1. “Successful” will be shown on handset LCD display if the handset is registered to the base. cordless handset number will be shown after it returns to idle mode.  
2. “FAIL” will be shown on handset LCD display if the cordless handset is failed to registered to the base, register the handset again.

## Select Base

This option allows user to select a base.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Registration” and press →OK key.
3. Press ▲ or ▼ key to select “SEL BASE” and press →OK key, Press ▲ or ▼ key to select a specific base or Auto.
4. Press →OK key to confirm the setting.

## Remove Handset

This option allows user to remove the registered cordless handset from the base.

1. Press →OK key.
2. Press ▲ or ▼ key to select “Registration” and press →OK key.

3. Press ▲ or ▼ key to select “Remove handset” and press → OK key, the LCD will display “Enter PIN”.
4. Input the correct PIN code and press → OK key.
5. Press ▲ or ▼ key to select the cordless handset you want to remove and press → OK key, the LCD will display “SAVED”.

**Note:** 1. The removed handset LCD will show “SEARCHING”. You must register it again before using it.

2. If the PIN code you input is wrong, “Wrong PIN” will be shown on cordless handset LCD.

## Technical Specifications

Handset Operating Time: (average Values*)	Approx. 10 hours talk time Approx. 100 hours standby
AC / DC Adapter	<p>For Base Unit :</p> <p>Model No.: KB1B-060-0250D          Input: 230V AC / 50 Hz 30mA          Output: 6 V DC, 250 mA</p> <p>For Charger :</p> <p>Model No.: KB1B-060-0150D          Input: 230V AC / 50 Hz 30mA          Output: 6 V DC, 150 mA</p> <p>Single-phase AC excluding IT installations defined by the EN 60950 standard.</p> <p>Caution: the network voltage is classified as a hazard by the criteria of this standard.</p>

Telephone connection	Appliance designed for connection to an analogue telephone line class TNV3 (telecommunications network voltage) as defined by the EN 60950 standard.
Rechargeable Battery	GP45AAAHC, 1.2V / 450mAh / Ni-MH, AAA x 2 or equivalent.

\* For guidance only, depends on initial battery charge.

## General Product Care

Simply wipe the base station with a damp cloth or an antistatic wipe. Never use a dry cloth as this can cause static discharge. Periodically clean the charge contacts on the handset, base and charger with a soft cloth.

**Note:** Due to continuous product development all features and Specifications are subject to change without prior notice.


**For more information on Warranty and Product Support in Singapore please call**

**(65) 68412668 or Fax to (65) 68412628.**

**Email: [support@alcom.com.sg](mailto:support@alcom.com.sg)**

**Website: [www.alcomonline.com](http://www.alcomonline.com)**

# Troubleshooting Guide

PROBLEMS	CAUSES	SOLUTIONS
Handset can not be register	The battery is not sufficiently charged.	Charge the battery for 14 hours (see Battery Charging).
	Handset and base station were not prepared for registration.	Unplug and then plug in the power adapter.
No display.	The battery has not been charged.	Charge the battery or replace them (see Battery Charging)
No reactions to keystroke.	The keypad is locked.	Press #* key longer Than 2 seconds.
No radio connection to the base	The handset is outside the base station range.	Move closer to the base station.
Station:  blinking!	The handset is not registered.	Register the handset (see Registering Handset).
	The base station does not work.	Unplug and then plug the power adapter to the power outlet and the other end into the power jack On base bottom.