



**CL-3375  
USER'S MANUAL**

**Congratulations**

on purchasing our high quality product. Please read the manual carefully to find out all features and how your telephone works, so you can get the best out of your new phone.

 
**Safety Precautions**

To reduce the risk of electrical shock and injury, please follow these basic safety precautions before using the phone.

- Carefully read and observe the instructions in this manual.
- Follow all warnings marked on the unit.
- When cleaning, unplug the phone first, then use a damp cloth to wipe. Do not use liquid or aerosol cleaners.
- Do not place objects on the line cord that may cause damage.
- Do not use this phone in wet surroundings or environments where there is a risk of explosion.
- Avoid spilling of any liquid on the phone.
- Unplug this phone from the wall outlet and refer servicing to qualified service personnel only.
- Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with polarity symbols (this instruction is found in the installing batteries section.)
- Use only **the batteries indicated in the User's Manual**. Never use other ordinary batteries or conventional alkaline batteries. Otherwise this may not only cause personal injuries but also damage to the unit.
- Do not mix exhausted batteries with full batteries. Exhausted batteries shall not be disposed of with the usual household waste or in a fire.
- If you are sure you will not be going to use the handset over a month, please take out the batteries from the battery compartment.
- Use only **the power supply indicated in the User's Manual**.
- Keep the phone out of the reach of children.
- Use the phone only in the described manner.
- Stop using the phone if it becomes damaged.

**Unpacking**


Once you have unpacked your phone, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

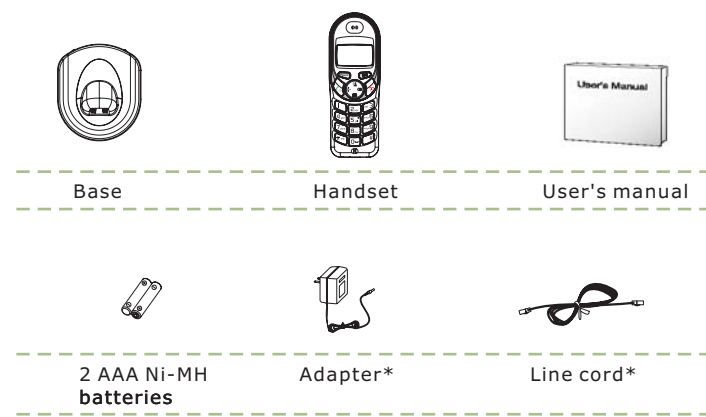

\*The shape of the plugs can vary according to each country's specification.


**Phone Layout and Keys Function**

 **Handset**

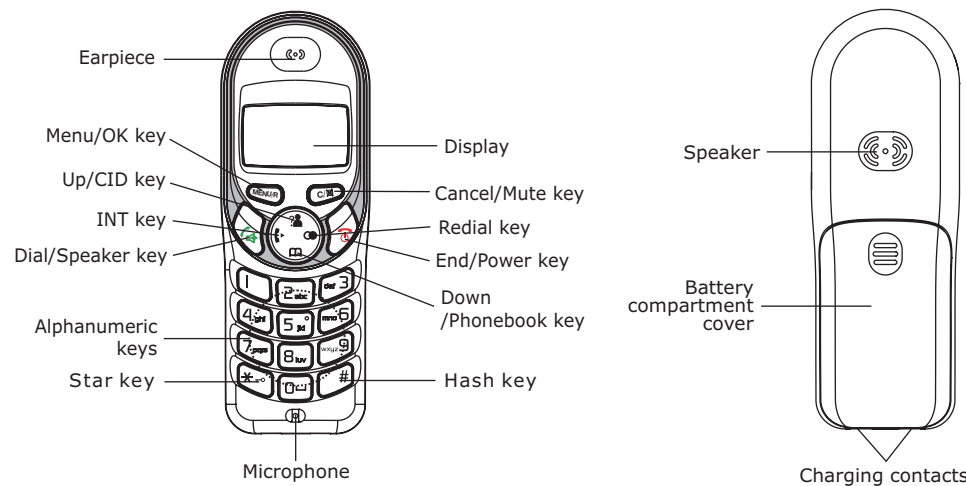


**Base**

 **Charge pins**

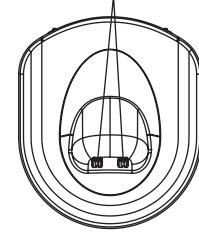

**Rear and bottom View**

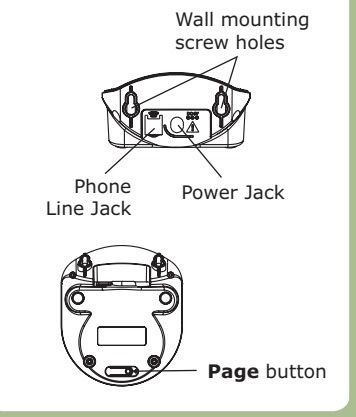 

**Keys Description**



**Dial/Answer key**  
Make/Answer a call.  
Activates the speakerphone if pressed during a call.



**End/Power key**  
End a call.  
Long press to activate power on/off, as described in par. **Turning Handset On/Off**.



**Navigation key:**  
**Up/CID key**  
Scroll up through lists and menu options.  
Increase the earpiece/speakerphone volume during a call.  
Enter the CID book, as described in par. **CID Book**.

**Down/Phonebook key**  
Scroll down through lists and menu options.  
Decrease the earpiece/speakerphone volume during a call.  
Enter the Phonebook, as described in par. **Phone Book**.

**INT key**  
Set up an internal call to another handset.  
Transfer an incoming call to another handset.  
Set up a conference call with an external line and an internal handset.

**Redial key**  
Enter the redial book, as described in par. **Last Number Redial**.  
Insert a pause when pre-dialing a number.



**Menu/OK key**  
Enter the menu functions in standby mode.  
Confirm selections & actions.  
Performs "Flash" function.



**Cancel/Mute key**  
Return to the previous menu.  
Enter to mute during a call.  
Delete an incorrect character/digit.



**Star key**  
Press and hold to turn on/off keypad lock function.  
Set up a conference call, as described in par. **Calling with more than one Handset**.

**LCD Window Icons Description**



**New Call**  
Indicates you have missed one or more calls.



**Off Hook**  
Indicates the line is engaged.



**Hands-free**  
Indicates the handsfree function is enabled.



**Battery Icon**  
Indicates battery charge level.



 
**Signal Icon**  
Indicates whether the current signal exists or not. If the handset is too far from the base, this icon will blink on the LCD.



**Keypad Lock**  
This icon appears when the keypad is locked.

**Connecting Lines**


- Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.
- Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapter into a standard AC wall outlet.

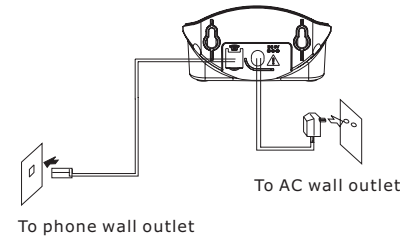

**Installing Batteries**

The rechargeable Ni-MH batteries (AAA size) come with your phone. Install the battery before using your phone.

 - Slide the battery cover in the direction of the arrow and pull it out.
- Insert new batteries as indicated, matching correct polarity (+,-).
- To replace the battery cover, slide the cover up until it snaps in place.

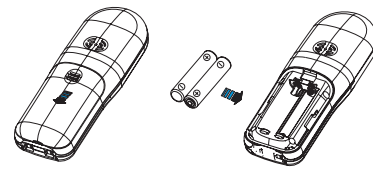


**Notes:**  
• Reversing the orientation may damage the handset.  
• The batteries need to be replaced if they do not recover their full storage capacities after recharging.  
• When replacing the batteries, always use good quality Ni-MH re-chargeable batteries. Never use other batteries or conventional alkaline batteries.

**Charging Handset**

 **! Important Note:** Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **15 hours**.

To charge the handset, you should place it on the base.

**Result:** When you place the handset on the base, the handset automatically turns on.



**Turning Handset On/Off**

If the handset is in power off mode, when you place the handset on the base, it automatically turns on. To turn the handset on or off in standby mode, follow these steps:

- To turn on the handset when it's off, press and hold the **[\*]** key until you switch the display on. On power up, the handset will enter subscription mode and search for a registered base. A message as shown below will be displayed to the user, and the signal icon will flash.



- To turn the handset off, keep the **[\*]** key pressed until the display turns off.

**Notes:**  
• When battery power is very low, if you place the handset on the base, the display will show as below. **YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.**



**Basic Functions**

**Making a Call**

- Pick up the handset and press the **[\*]** key.

**Result:** The **[\*]** icon appears on the LCD.

- Dial a telephone number.

**Note:**  
• You can store up to 10 telephone numbers in memory for automatic dialing.

- To end the call, either press the **[\*]** key or replace the handset on the base.

**Note:**  
• To make a call to the last number you dialed, use the **Redial** feature. For details, see par. **Last Number Redial**.

You can enter the desired phone number in standby mode, which allows you to make corrections before dialing. Follow these steps:

- Enter a telephone number (up to 32 digits). Check it. You can also use the **[\*]** key to insert a pause.

**Note:**  
• If you make a mistake while entering a number, press the **[\*]** key to clear the last digit.

- When the number appears correctly, press the **[\*]** key.

**Receiving a Call**

When a new call is received, the call information will appear.

If the caller can be identified, the caller's phone number is displayed.

- To answer the call, press the **[\*]** key. If you have activated the Auto Answer function, when the handset is on the base, simply lift it up to answer.
- To end the call, either press the **[\*]** key or replace the handset on the base.

**Result:** After you hang up the call, the LCD displays the call duration.

**Notes:**  
• You can select the ringer volume by using **[\*]** or **[\*]** key when the phone rings with an incoming call.  
• If the polyphonic ring tone is set, the ring tone may continue for 4 seconds after the caller's hang-up or after the parallel phone had answered the call.

**Muting the Microphone**

During a conversation, you can temporarily switch your phone's microphone off, so that the other party cannot hear you.

**Example:** You want to say something to another person in the room but do not want the other party to hear you.

To mute your microphone, press the **[\*]** key during the conversation. The **"CALL MUTED"** appears on the LCD.

To unmute the microphone, press the **[\*]** key again. You will restore the normal condition.

**Adjusting Audio Volume**

During a conversation, you can use the **[\*]** or **[\*]** key to adjust the level of the earpiece (or the handsfree speakerphone one, if activated) volume from **VOL1** to **VOL5**. The selected volume will be displayed on the LCD.

You can also select the earpiece volume or the speaker volume by the **AUDIO SETUP** in Menu under **HS SETTING**, as described in par. **HS Settings**.

**Ringer Setting**

You can select your own external (from the telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

**Result:** You can select the ring tone from Melody 1 to 10 or adjust the volume from Volume 1 to 5, or off. When you adjust the ring tone or volume, the phone plays the selected melody or sounds the selected loudness.

- Press the **[\*]** key.
- Press **[\*]** or **[\*]** key repeatedly to choose **HS SETTING** menu, then press the **[\*]** key.
- Press **[\*]** or **[\*]** key to choose **RING SETUP**, and press the **[\*]** key.
- Use **[\*]** or **[\*]** key to choose **INT RING/EXT RING**, press the **[\*]** key.
- Press **[\*]** or **[\*]** key to choose **MELODY** or **VOLUME**, press the **[\*]** key.

- Press the **[\*]** key to confirm.

**Last Number Redial**

- Press the **[\*]** key in standby mode.

**Result:** The LCD displays the last number you dialed.

- Press the **[\*]** key to dial out the number.

Your phone allows you to retrieve the last 10 numbers you have dialed and recall them quickly.

**Search for and dial a number in Redial Book**

- Press the **[\*]** key in standby mode.
- If you want to scroll through the memory, press **[\*]** or **[\*]** key repeatedly until you find out the number you want to dial.
- Press the **[\*]** key to dial out the number.

**Notes:**  
• If no numbers are found, "EMPTY" is displayed.  
• When the redial book is full, each time you dial a new number, the oldest number stored in the redial book is automatically erased.

**CID Book**

When you receive a call, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number is displayed. Moreover, if you missed one or more calls, the **[\*]** icon will appear on the LCD. If the CID memory is full, the **[\*]** icon will flash on the LCD.

**OUT OF AREA** - This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.

**PRIVATE** - If the caller has exercised the option to prevent his name and number from being sent, the message will show on the LCD.

**View and dial any of the CID numbers**

- Press the **[\*]** key.
- Press the **[\*]** key again to choose **CID BOOK**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the **[\*]** key in standby mode.)
- Use **[\*]** or **[\*]** key to view the numbers, you can make a call by a press of the **[\*]** key. You can also add the entry to the phonebook.

**Use Redial Book options**

Using the redial book options, you can add a number to phone book or delete a number in the redial book.

- Press the **[\*]** key.
- Scroll to the desired number by using the **[\*]** or **[\*]** key.
- When the number appears on the display, press the **[\*]** key to choose the desired option:
  - ADD TO PB:** allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in par "Adding the Phone Book Entries" (obviously, you will find the number already entered in the appropriate field).
  - DELETE:** allows you to delete the selected number.
  - DELETE ALL:** allows you to delete the whole redial book.
- To exit, press the **[\*]** key.

**Note:**  
• At step 3, when you select **DELETE** or **DELETE ALL** options, a message **"CONFIRM ?"** will further ask you to confirm the deletion. To confirm press **[\*]** key, to escape press the **[\*]** key.

- Press the **[\*]** key, you are prompted to enter the name.
- Enter the name and press the **[\*]** key, then you can modify the number you want to store.
- Press the **[\*]** key, you are able to select the ring tone from Melody 1 to Melody 10, press the **[\*]** key to confirm and exit, you will hear a confirm beep.

**Delete a number in the CID Book**

- Press the **[\*]** key.
- Press the **[\*]** key again to choose **CID BOOK**, and if available, the numbers are displayed.
- Scroll to the number you want to delete by using **[\*]** or **[\*]** key.
- When the desired number appears on the display, press the **[\*]** key.
- Use **[\*]** or **[\*]** key to choose **DELETE**, press the **[\*]** key. The display will show **"CONFIRM ?"**. Press the **[\*]** key to confirm, you will hear a beep and the LCD shows the next number.

**Delete all numbers in the CID Book**

- Press the **[\*]** key.
- Press the **[\*]** key again to choose **CID BOOK**, and if available, the numbers are displayed.
- Press the **[\*]** key and use **[\*]** or **[\*]** key to choose **DELETE ALL** menu, then press the **[\*]** key.
- The display shows **"CONFIRM ?"**, press the **[\*]** key to confirm.

**Result:** You hear a beep and the phone returns to the standby mode after clearing all the CID numbers.

**Note:**  
• In locked mode, if you press any key, the phone will generate a warning tone, and the **"HS LOCKED"** message will be redisplayed.

**Key Lock**

If you turn on this feature, all keys will be locked. You can answer calls by using the **[\*]** key. But when you hang up, the phone returns to the locked mode. This feature is useful to avoid pressing keys by mistake.

To lock the keys, in the standby mode just keep the **[\*]** key pressed till the display shows **"HS LOCKED"** and the **[\*]** icon.

**Selecting a Language**

The handset supports multiple predefined languages. You can change the language used to display the menu messages.

- Press the **[\*]** key.
- Press **[\*]** or **[\*]** key repeatedly to choose **HS SETTING**, press the **[\*]** key.

- Use **[\*]** or **[\*]** key to choose the **LANGUAGE**, then press the **[\*]** key.
- The languages will be displayed. Use **[\*]** or **[\*]** key to scroll through the options. Each language will be displayed in its own native translation.
- Press the **[\*]** key to select the required language and you will hear a confirm beep.

**HS Name**

"HS N" is the default name of the handset after registration of handset. The handset number N= 1 to 5 reflects the handset is the Nth handset, which is registered to the base. The HS Label is displayed in the standby mode. You can modify it by the following steps:

- Press the **[\*]** key.
- Press **[\*]** or **[\*]** key repeatedly to choose **HS SETTING**, press the **[\*]** key.

- Use **[\*]** or **[\*]** key to choose **HS LABEL**, then press the **[\*]** key.
- You can enter the handset name (up to 6 characters) by using the alphanumeric keys (use the **[\*]** key to delete the previous character if necessary), then press **[\*]** key to confirm and exit. The handset name will be modified.



