

User's Guide

Model EX30043



Desktop Corded Phone with Tone/Pulse Dialing



visit our website:
www.thehomephones.com

Model EX30043
P/N: 830043-4101
Version 2 11/2010
Printed in China
© 2010 CCT Tech Global Limited



is a trademark of
The General Electric Company
and is under license by
CCT Tech Global Limited,
Central, Hong Kong

INTRODUCTION


Your telephone is designed to give you flexibility in use, and high quality performance. To get the most from your new telephone, read through this user's guide.

If you have any questions or problems, read the Troubleshooting Tips for solutions.

GETTING START

PARTS CHECKLIST

Your package should contain the following items:

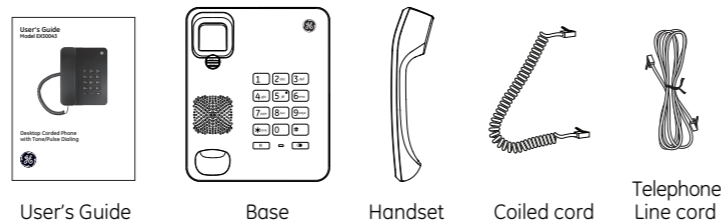


INSTALLATION AND SETUP

Your GE telephone can be mounted on the wall or placed on a table. After you decide which type of installation you want, refer to the appropriate installation diagram.


BEFORE YOU BEGIN

TELEPHONE JACK REQUIREMENTS

To use this phone, you need a RJ11C type modular telephone jack, (similar to the one pictured here), installed in your home. Call your local telephone company to have one installed.

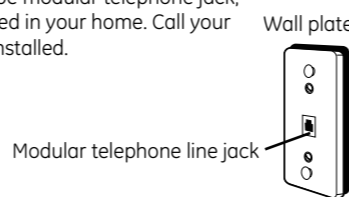

DESKTOP INSTALLATION

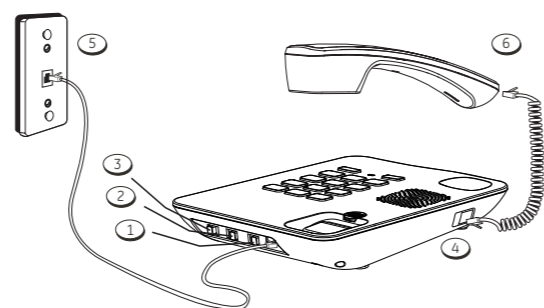


1. Adjust the **RINGER** volume switch to the desired setting. Default setting is **HI**.
2. Set the **PULSE/TONE** switch to **TONE** if you use Touch-Tone Service; set it to **PULSE** if you use rotary service. Default setting is **TONE**.
3. Set the Flash time switch (600ms, 300ms, 100ms) to the appropriate setting. Default setting is **600ms**.
4. Plug one end of the coiled cord into the handset, and the other end into the jack on the left side of the unit.
5. Plug one end of the telephone line cord into a modular jack (RJ11C), and the other end into the **LINE** jack on the back of the unit.
6. Place the handset back to the cradle.


WALL MOUNT INSTALLATION

The telephone can be mounted on a wall phone plate (not included).


1. Rotate the wall mount knob 180° on the cradle of the base as shown in the picture below.

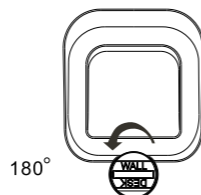


2. Set the **RINGER VOLUME** switch to the desired setting. Default setting is **HI**.
3. Set the **PULSE/TONE** switch to **TONE** if you use Touch-Tone service; set it to **PULSE** if you use rotary service. Default setting is **TONE**.
4. Set the Flash time switch (600ms, 300ms, 100ms) to the appropriate setting. Default setting is **600ms**.

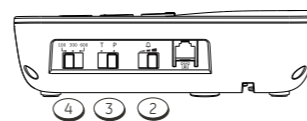


5. Adjust the wall hook on the cradle of the base to apply to wall mount.
6. Plug one end of the telephone line cord into the phone jack on the back of the unit.

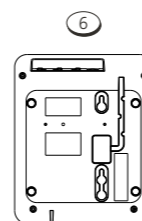

7. Connect the other end of the telephone line cord to the modular jack on the wall.

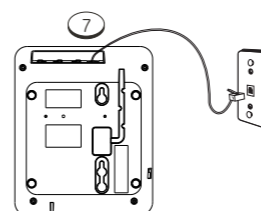

8. Place the base to the wall mount plate.
9. Plug one end of the coiled cord into the handset and the other end into the base, and then place the handset back to the cradle.

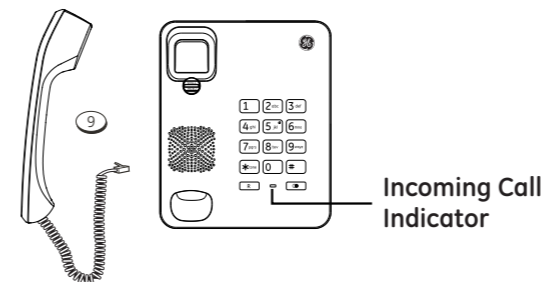

PHONE OPERATION

MAKING A CALL

1. Lift the handset.
2. Dial the telephone number using the keypad.

RECEIVING A CALL

Lift the handset to answer a call.

RINGER VOLUME CONTROL

Use the **RINGER** volume switch on the back of the base to adjust the volume of the ringer.

FLASH BUTTON

Press the **FLASH** button instead of using the hook switch to activate services such as call waiting or call transfer.

REDIAL BUTTON

Redial the last number you called by pressing the **REDIAL** button. Maximum digits of redial is 32.



TROUBLESHOOTING TIPS

PROBLEM	SOLUTION
No dial tone Can't dial out	<ul style="list-style-type: none"> • Make sure the hook switch is fully extended when handset is lifted from the cradle. • Make sure TONE/PULSE is set to the correct position. • Unplug the telephone line, wait for 30 seconds, then plug the line back in.
Phone doesn't ring	<ul style="list-style-type: none"> • Check phone line cord. • You may have too many extension phones on your line. Try unplugging some extension phones.

CARE AND MAINTENANCE

To keep your phone in good operating condition, please follow these guidelines:

- Avoid placing near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset and other rough treatment.
- Never use a strong cleaning agent or abrasive powder as this will damage the phone.
- Retain the original package in case you need to return it at a later date.



Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling center.