 




**Congratulations on your purchase of a Motorola product!  
Your Motorola Telephone at a glance:**

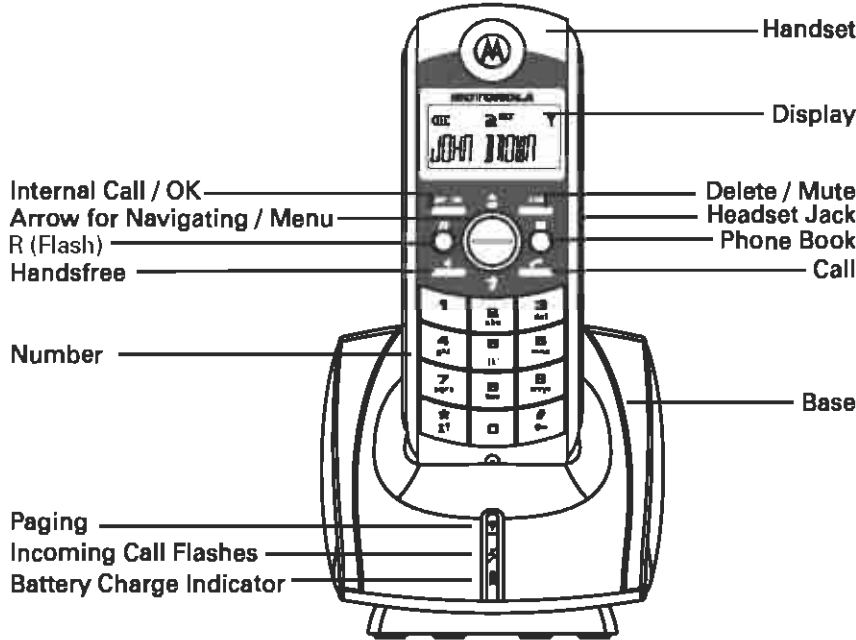

**Welcome**



For product-related questions, please refer to the Warranty section.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Product, you will need to provide a copy of your dated sales receipt to confirm warranty status.

☑ Complies with the essential protective requirements and objectives of the EC's R&TTE Directive 1999/5/EC; EC Low Voltage Directive 72/23/EEC; EC EMC Directive 89/336/EEC

Copyright © 2004 Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA, the Stylized M Logo, and PhoneWrap are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.

**Welcome**





## Contents

<b>Welcome</b> .....	<b>1</b>	Selecting the Language .....	<b>17</b>
		Making Internal Calls .....	<b>17</b>
<b>Contents</b> .....	<b>3</b>	Making External Calls .....	<b>17</b>
		<i>Direct dialing</i> .....	<b>18</b>
		<i>On-hook dialing</i> .....	<b>18</b>
<b>Important Safety Instructions</b> .....	<b>5</b>	Hands-free Mode .....	<b>18</b>
Technical Amendments .....	<b>7</b>	<i>Direct dialing</i> .....	<b>18</b>
<b>Installation</b> .....	<b>8</b>	<i>Switching During a Call</i> .....	<b>19</b>
Package Contents .....	<b>8</b>	Taking Calls .....	<b>19</b>
Setting up the Base Station and Charger Unit ....	<b>8</b>	<i>Handset is in the Base Station</i> .....	<b>19</b>
Connecting the Base Station and Mains Adaptor.	<b>9</b>	<i>Handset is not in the Base Station</i> .....	<b>19</b>
Connecting the Charger Unit .....	<b>10</b>	Prefix Dialing .....	<b>19</b>
Inserting the Batteries / Attaching the Belt Clip ..	<b>10</b>	Dialing from the Phone Book .....	<b>20</b>
Attaching the Headset .....	<b>11</b>	Call Log Operations .....	<b>20</b>
<i>Technical Data</i> .....	<b>11</b>	<i>Browse, Call Back, Delete, Save</i> .....	<b>20</b>
		Muting the Microphone .....	<b>20</b>
<b>Features</b> .....	<b>12</b>	Access a Call Waiting Line /	
		Holding and transferring calls (PABX).....	<b>21</b>
<b>Control Buttons</b> .....	<b>13</b>	Changing the Handset Volume .....	<b>21</b>
Control Buttons .....	<b>13</b>	Teleconference and	
Control Buttons (on Charger) .....	<b>14</b>	Intercom Call Transferring .....	<b>21</b>
		Entering a Dialing Pause (P) .....	<b>22</b>
<b>Menu Structure</b> .....	<b>15</b>	<b>Phone Book</b> .....	<b>22</b>
		Phone Book .....	<b>23</b>
<b>Using the Telephone</b> .....	<b>17</b>	Store Entries .....	<b>23</b>
Switching the Handset On / Off /		View Entries .....	<b>23</b>
Display Illumination .....	<b>17</b>	Edit Entries .....	<b>23</b>
		Delete Entries.....	<b>24</b>



## Contents

<b>Handset Settings</b> .....	<b>26</b>
Changing the Ringer Volume .....	<b>26</b>
Changing the Ringer Melody (external / internal) ....	<b>26</b>
Entering / Changing Handset Name .....	<b>26</b>
Saving a Prefix .....	<b>27</b>
Switching the Key Tone On / Off .....	<b>27</b>
Activating / Deactivating Automatic Call Answering	<b>28</b>
Activating / Deactivating Call Timer .....	<b>29</b>
Default Settings .....	<b>29</b>
Registering Additional Handsets .....	<b>30</b>
<b>Base Station Settings</b> .....	<b>31</b>
Barring Calls .....	<b>31</b>
Entering / Changing Emergency Number .....	<b>31</b>
Changing the Flash Time.....	<b>32</b>
Select Dial Mode .....	<b>33</b>
Changing the PIN.....	<b>33</b>
Default Settings .....	<b>34</b>
Delete HS.....	<b>34</b>
<b>Quick Reference</b> .....	<b>35</b>
Operation .....	<b>35</b>
Phone Book .....	<b>37</b>
Handset Settings .....	<b>38</b>
Base Settings.....	<b>39</b>
<b>Warranty</b> .....	<b>40</b>





## Important Safety Instructions

Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property:

Reduce risk of fire and shock by:

1. Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product slits as that may result in fire or shock.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the Warranty Service phone number found in the back of this user's guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas line.



Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read and understand all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.





8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the cordless phone on or near a TV, microwave oven, or VCR.
11. It is impossible to make emergency calls when the keypad lock is enabled.

## Technical Amendments

These Operating Instructions are issued for information purposes. Their content is not the subject of a contract.

All indicated data are merely nominal values. The described equipment and options may differ depending on requirements which are specific to each country.

This device is dedicated to be used in the analog public switched telecommunication network (PSTN).



<b>Package Contents</b>	<b>ME4052-1 Single Pack</b>	<b>ME4052-2 Twin Pack</b>	<b>ME4052 -3 Triple Pack</b>	<b>ME4052-4 Quad Pack</b>
Base Station	1	1	1	1
Mobile Handset	1	2	3	4
Mains Adaptor	1	2	3	4
Telephone Line Cord	1	1	1	1
Rechargeable Batteries type micro AAA	2	4	6	8
Charger Unit	0	1	2	3
User's Guide	1	1	1	1

Please check the contents of the package carefully. If something is missing or has become damaged in transit, you should NOT use the telephone. In such a case you should return to the dealer with your sales receipt or contact the Motorola's distributor directly. (For details, please refer to the Warranty section.)

Note: Retain the packaging of your appliance to prevent it from being damaged should you ever need to return it.

## Setting up the Base Station and Charger Unit

Place the base station and charger unit in an easily accessible location. Make sure that the location is stable and flat and that the surface is non-slip. When choosing the location, also make sure that all cables can be routed so as to prevent people tripping over them. Furthermore, avoid placing the base station and charger unit in the immediate vicinity of other electronic appliances such as microwaves, PCs or Hi-Fi's, for example.





 
Do not expose the base station and charger unit to direct sunlight. Do not allow the base station and charger unit to become wet. They should not be set up in rooms which are subject to condensation or corrosive steam or a high concentration of dust (e.g. cellars, garages or conservatories). The room temperature must be between 0°C and 35°C.

### Connecting the Base Station and Mains Adaptor

Insert the plug in the corresponding socket of the base station (it is not possible to mix them up as the socket and plug are designed to be reverse-polarity protected). Route the cable beneath the telephone towards the back. Insert the plug into the socket of the telephone plug of your telephone connection. Insert the mains adaptor in the wall socket. The base station is now ready for use.




The base station does not have a power switch. Make sure that there is a mains socket nearby and that the mains adaptor is easily accessible. Check that the voltage indicated on the mains adaptor corresponds to that of your mains current.

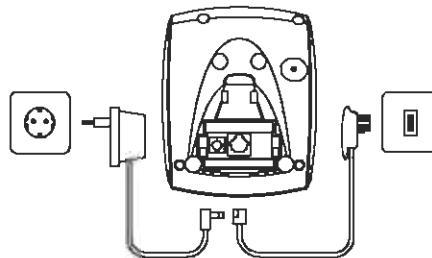

### Connecting the Charger Unit

 Insert the plug of the mains adaptor in the socket on the underneath of the charger unit. Plug the mains adaptor into the mains socket. The charger unit is now ready to use.

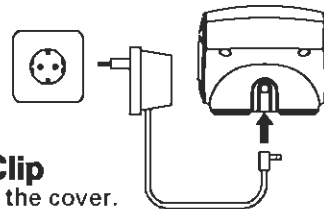

### Inserting the Batteries / Attaching the Belt Clip

Open the battery compartment, by pushing downwards on the cover. Insert the 2 x AAA (600mAh/1.2V) Ni-MH re-chargeable batteries supplied, observing the correct polarity.

**CAUTION : PLEASE DO NOT USE ALKALINE OR NON- RECHARGEABLE BATTERIES. IT MAY CAUSE PERMANENT DAMAGE TO THE UNIT AND VOID THE WARRANTY.**



The mobile handset will not operate if the batteries are inserted incorrectly. There is also a possibility that the handset may be damaged thereby.

Replace the cover on the battery compartment and push it upwards until it clicks into place. Place the handset in the base station. A confirmation beep and the charging indicator confirm that charging has begun.

**Note:** When used for the first time, allow the batteries to charge for at least 14 hours without interruption. If possible, only take the handset out of the base station when the charging process has ended. This will help to guarantee optimum operation.

 
**Note:** To ensure the battery charging properly, clean the charging contacts on the handset and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.

Attach the belt clip by pushing it into the opening provided on the rear of the housing. The clip will bend slightly until it clicks into place.





## Attaching the Headset

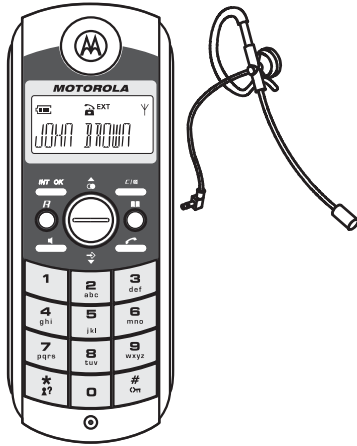

You can connect headsets to the mobile handset. The 2.5mm jack plug must be inserted fully into the jack socket on the right-hand side of the handset.

### Technical Data

Receiver impedance	32Ω
Microphone impedance	1.4Ω
Receiver output power	60mW
Plug	2.5mm jack plug
Microphone sensitivity	-54dB

Note: The headset is not included as standard.



## Features

Congratulations on your purchase of this high quality, cordless telephone set. The set offers the following features:

 
- Comfortable digital cordless phone with DECT Standards
- Call ID\* function with caller list for 20 numbers or names from phone book (dependent on network)
- Caller ID\* on Call Waiting (dependent on network)
- Alphanumeric LCD display
- Backlit display
- Phone book for 30 entries with names and numbers
- Extended redialing for 5 call numbers
- Microphone mute
- Battery and range warning tone
- Keypad lock
- 10 ringtone melodies
- Operator guidance in 10 languages
- Teleconference +
- Internal, free communication between handsets +
- Prefix dialing
- Automative call answering on/off
- Key input tone on/off
- Operation of up to 4 handsets
- Paging function from base station to handset
- Programmable call block
- Up to 100 hours standby
- Up to 10 hours continuous call time
- Operation with 2 standard AAA re-chargeable batteries
- Handsfree operation on handset

\* user must subscribe to the network's caller id service.  
+ more then one handset required.

DECT : Digital Enhanced Cordless Telecommunication = Standard for cordless telephones.



### Control Buttons

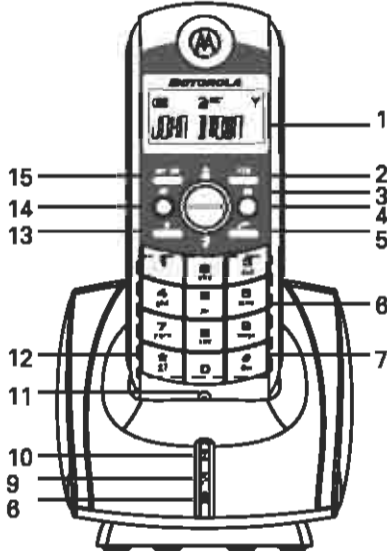


1. Display
2. Delete input / Muting function
3. Arrow keys for navigation in the menu, Menu key and Redial key
4. Phone book
5. Take call / End call key
6. Digit keys with letter imprint
7. Key lock
8. LED : Battery charging indicator
9. LED : Flashes with incoming calls. Flashes with calls not taken
10. Paging key (call handset)
11. Microphone
12. Key to view CALL LOG memory
13. Speakerphone (hands-free)
14. R (Flash) Key, access a Call Waiting Line / Hold and transfer calls when connected to PABX
15. OK key to confirm and for internal calls

- Indicates the battery charge status. Flashes when battery is empty.
- Indicates that the outside line is engaged.
- EXT** Indicates an incoming, external call.
- INT** Indicates an incoming, internal call.
- Flashes in the case of calls not taken (entries still available in the caller list).
- Key input lock is active.
- Indicates that the microphone muting is active.
- Indicates the ringing tone is deactivated.
- Lights up when the handset is registered on the base.
- Flashes if there is no radio communication contact.
- Indicates that further entries are present.

Control Buttons

13


### Control Buttons (on Charger)

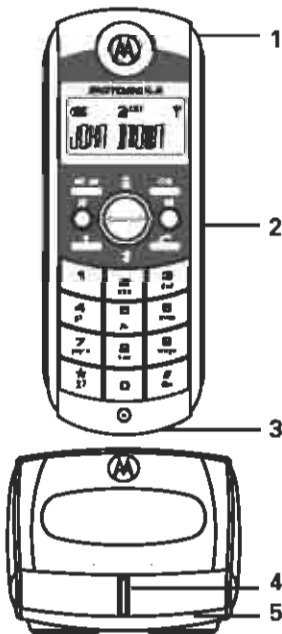 

1. Handset
2. Menu symbol
3. Charge contacts
4. Charging indicator
5. Charging station

Control Buttons

 14

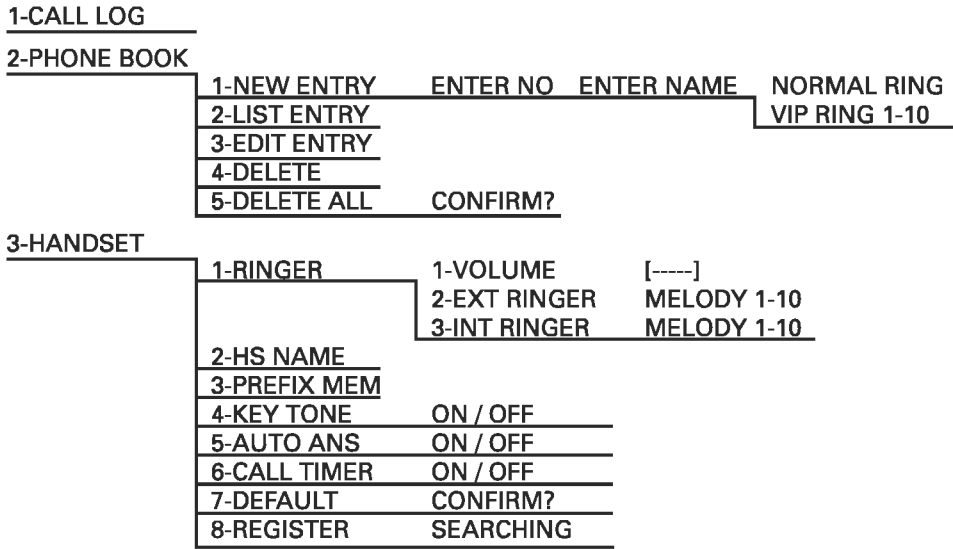


**Note:**

Navigate in the menu structure as follows:

Press the Menu key.

Then use the arrow keys to navigate through the menu or select the required menu item directly using the digit keys.

 Example: Enter MENU > 3 > to access '1-RINGER' > '2-HS NAME', then enter the HS Name.

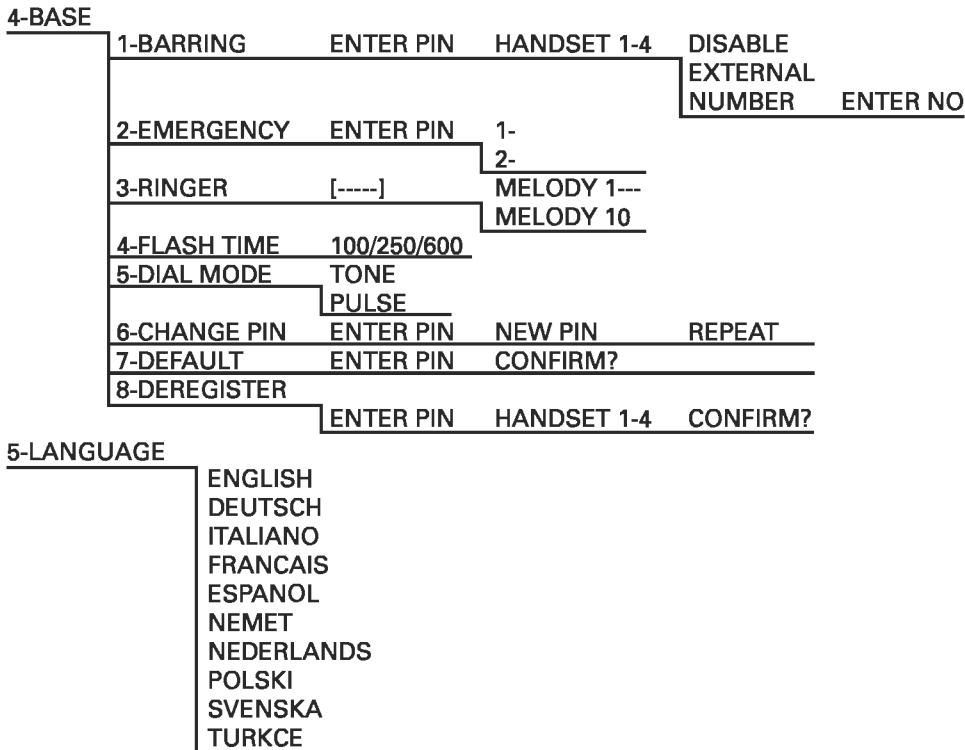





## Switching the Handset On/Off / Display Illumination

When the handset is placed on the base station or charging unit, it switches on automatically and starts to charge up. Allow the batteries to be charged for 14 hours without interruption the first time they are charged. The telephone does not have an On/Off switch.

Note: The display illumination switches on automatically when the handset is removed from the charging station or pressing any key. It also lights up when calls are received. It goes out automatically when no key has been pressed for 10 seconds.

## Selecting the Language

Ten different languages are available for selection for each handset. Proceed as follows to select a language:

1. Press the key repeatedly until menu item LANGUAGE appears.
2. Press the *INT/OK* key to confirm the item.
3. Press or as often as necessary to select the required language.
4. Press the *INT/OK* key to confirm the selection.

## Making Internal Calls

If more than one handset is registered on the base station, internal calls can be made free of charge.



1. Press the *INT/OK* key.
2. Press the number of the required handset (1..4). Carry out the conversation.
3. Press the key to end the call.

 
Note: If an external call is received during an internal call, short acoustic signals are issued (call waiting).

## Making External Calls

There are two ways to dial a number, namely direct dialing or on-hook dialing.



### Direct dialing

1. Press the key and wait for the dialing tone.
2. Dial the telephone number and complete the call.
3. Press the key to end the call.



### On-hook dialing

  1. Dial the telephone number.
2. Delete any incorrect entries by pressing the *CI/☒* key.
3. Press the key. The number entered is dialed and a connection established. Carry out the conversation.
4. Press the key to end the call.



## Hands-free Mode

There are two methods with which to have telephone conversations in hands-free mode, namely using direct dialing or by switching over during the call.





### Direct dialing

1. Dial the call number and press the key to start dialing.
2. Carry out the conversation.
3. Press the key to end the call.

### Switching During a Call

1. Dial the call number and press the key to start dialing.
2. Carry out the conversation.
3. Press the key to switch hand-free mode on or off.
4. Press the or key to adjust the handset volume.
5. Press the key to end the call.

## Taking Calls

When an external call is received, all the handsets registered and the base station ring.

### Handset is in the base station

1. Take the handset from the base station; a connection is automatically established (when the AUTO ANS function is active). Otherwise, press the key.
2. Carry out the conversation.
3. Press the key to end the call.

### Handset is not in the base station

1. Press the key. Carry out the conversation.
2. Press the key to end the call.



## Prefix Dialing

1. Press the 0 key for two seconds.
2. Supplement the call number and press the key to establish a connection.

Note: The prefix number (e.g. an access code) must have been programmed beforehand. Refer to "Handset Settings".

## Dialing from the Phone Book

1. Press the key; the first entry in the phone book appears.
2. Press the or key to select the required subscriber from the phone book. Alternatively, enter the first letter of the name required.
3. Press the key. The number is dialed. Carry out the conversation.

## Call Log Operations

### Browse, Call Back, Delete, Save

If calls have been received in your absence, these are collected in the CALL LOG memory when your telephone service has enabled this function.

1. Press the key as often as necessary until the CALL LOG menu appears.
2. Press the **INT/OK** key. Alternatively, press and hold the **\*1#?** key.
3. Press the or keys to browse through the CALL LOG memory.
4. Press the key to return the call.

Or





5. Press and hold the **CL** key two seconds to delete one or all the entries. Selection is made using the **▲** or **▼** key. Press the **INT/OK** key. Or
6. Press the **■** key to enter the subscribers in the phone book.
7. Enter the name.
8. Press the **INT/OK** key.
9. Press the **▲** or **▼** key to select the normal ring or VIP ring.
10. Press the **INT/OK** key.

Note: 1. The CALL LOG symbol and display indicator only disappear after browsing through all the entries. 2. It is only possible to enter subscribers in the phone book who are not already entered.

### Changing the Handset Volume

 
You can adjust the handset volume during a call (external or internal), the volume level is displayed. There are 5 different volume levels.

#### During a call:

1. Press the **▲** or **▼** key to adjust the handset volume.

### Muting the Microphone

1. Press the **CL** key to switch the microphone on or off during a call.



### Access a Call Waiting Line / Holding and transferring calls (PABX)

When on an external call, press **R** key to access a Call Waiting Line when you hear the call waiting prompt signal. Press **R** key again to toggle between the two calls.

When on an external call (PABX line)

1. Press **R** key to put the call on hold.
2. Dial the number of the extension.



3. Press **R** key again if you would like to take back the call, or **☎** to transfer the call.

Note: If several handsets are registered on the base station and a call should be put on hold or transferred, press the **INT/OK** key instead of **R**.

### Teleconference and Intercom Call Transferring

After having received an external call, it is possible to include a second handset in the conversation (three-way conference).



1. Press the **INT/OK** key and enter the number of the corresponding handset (e.g. 2) which should be included in the call.
2. The external caller is kept on hold. As soon as handset 2 takes the call, press **☎** key to transfer the call to handset 2.  
Or
3. The external caller is kept on hold. as soon as handset 2 takes the call, press and hold **#** key to activate the teleconference.
4. By pressing the **☎** key, any of the handsets can be disconnected from the teleconference and the other handset continues with the external call.

### Entering a Dialing Pause (P)

If the MOTOROLA telephone is connected to a PBX system, it may be necessary to insert a dialing pause. To do this, press the **▲** key after entering the relevant digit, e.g. 0, for an outside line (0P...). A 'P' appears in the display indicating a pause. The pause can also be entered when programming numbers in the phone book.





## Phone Book

The MOTOROLA telephone can store up to 30 entries in the phone book with name and call number.

### Store Entries

1. Press the key as often as necessary until the PHONE BOOK menu appears.
2. Press the *INT I OK* key.
3. Press the *INT I OK* key.
4. Enter the number (max. 25 digits).
5. Press the *INT I OK* key.
6. Enter the name (max.10 characters).

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L. Delete incorrect entries by pressing the *CL* key.

7. Press the *INT I OK* key.
8. Select the ringing tone with the or key.
9. Press the *INT I OK* key.

Note: If certain phone book entries should appear at the start of a list, e.g. "FIRE", enter a space before the name " FIRE". The space is entered by pressing the **1** key.

### View Entries

1. Press the key repeatedly until PHONE BOOK appears.



2. Press the *INT I OK* key.
3. Press the or key to select List Entry.
4. Press the *INT I OK* key.
5. Press the or key to select the required entry.

Note: if there is no entry in the phone book, "MEM EMPTY" will display.

6. Press the *INT I OK* key to view the number.  
Or  
Press the key to dial the number.

### Edit Entries

1. Press the key repeatedly until PHONE BOOK appears.
2. Press the *INT I OK* key.
3. Press the or key to select Edit Entry.
4. Press the *INT I OK* key.
5. Press the or key to select the required entry.

Note: if there is no entry in the phone book, "MEM EMPTY" will display

6. Press the *INT I OK* key.
7. Enter the number.
8. Press the *INT I OK* key.
9. Enter the name.
10. Press the *INT I OK* key.
11. Press the or key to select the normal ring or VIP ring.
12. Press the *INT I OK* key.





## Delete Entries

1. Press the key as often as necessary until the PHONE BOOK menu appears.
2. Press the or key to select Delete / Delete All.
3. Press the or key to select the phone book entry. Alternatively, enter the first letter of the name required.
4. Press the *INT/OK* key to confirm the input.

Note: The delete process can be stopped at any time prior to confirmation of it by pressing the key several times. If all the entries should be deleted, select DELETE ALL instead of DELETE at Pt. 2.



## Changing the Ringer Volume

1. Press the key repeatedly until HANDSET appears.
2. Press the *INT/OK* key twice.
3. Press the or key to select VOLUME.
4. Press the *INT/OK* key.
5. Press the or key to select the ringer volume.  
(0-5 level, level 0 means ringer off)
6. Press the *INT/OK* key to confirm the setting.

## Changing the Ringer Melody (external/internal)

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT/OK* key twice.
3. Use the or key to select the required submenu (EXT RINGER or INT RINGER).
4. Press the *INT/OK* key.
5. Use the or key to select the required melody.
6. Press the *INT/OK* key to confirm the setting.

## Entering/Changing Handset Name

It is possible to assign a name to each handset. This name is then displayed when the phone is in Standby mode.





1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the HS NAME submenu.
4. Press the *INT I OK* key.
5. Enter/Change the name of the handset (e.g. MOBIL 1).

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L, for example.

6. Press the *INT I OK* key to confirm the input.

### Saving a Prefix

It is possible to save prefix numbers in the handset. This number is then recalled after pressing the 0 key for two seconds.

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the PREFIX MEM submenu.
4. Press the *INT I OK* key.
5. Enter the prefix number (e.g. access code of the subscriber you call most frequently).
6. Press the *INT I OK* key to confirm the input.

### Switching the Key Tone On/Off

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.



3. Press the or key to select the Key Tone.
4. Press the *INT I OK* key.
5. Press the or key to select the setting.
6. Press the *INT I OK* key to confirm the input.

### Activating/Deactivating Automatic Call Answering

The automatic call answering function enables the incoming call to be taken immediately if the handset is removed from the base station. It is not necessary to press the call key after removing the handset from the base station.

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the AUTO ANS submenu.
4. Press the *INT I OK* key.
5. Use the or key to switch automatic call answering on or off.
6. Press the *INT I OK* key to confirm the input.





## Activating/Deactivating Call Timer

It is possible to display the duration of a call on the handset. The timer starts when the conversation begins.

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the CALL TIMER submenu.
4. Press the *INT I OK* key.
5. Use the or key to switch the call timer on or off.
6. Press the *INT I OK* key to confirm the setting.

## Default Settings

The handsets can be reset to the default settings. In doing so, all the settings which you have changed are returned to their default values. The phone book entries are retained.

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the Default.
4. Press the *INT I OK* key.
5. Press the *INT I OK* key to confirm input.

Note: The handset is reset to its default settings.



## Registering Additional Handsets

Further handsets can be registered on the base station. They must support the GAP standard, however, it is possible that some of the handset functions will not be available.

1. Press the key as often as necessary until the HANDSET menu appears.
2. Press the *INT I OK* key.
3. Press the or key to select the REGISTER submenu.
4. Press the *INT I OK* key.
5. Press and hold the key on the base station until the acknowledgement signal is heard, then enter the PIN when requested. (Default setting = 0000)
6. Press the *INT I OK* key.

Note: After the connection has been established, the name and number of the handset (the next available number if less than 4 are already registered) appear in the display.





## Barring Calls

The following options are available for selection for barring calls:

Option	Description
DISABLE	All telephone calls are possible.
EXTERNAL	All external calls are barred.
NUMBER	Define a number which should be barred, e.g. 0190.

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the BARRING submenu.
4. Press the *INT I OK* key.
5. Enter 0000. Note: (Factory setting is 0000).
6. Press the *INT I OK* key.
7. Use the or key to select the handset which should be barred.
8. Press the *INT I OK* key.
9. Use the or key to select an option.
10. Press the *INT I OK* key.

## Entering/Changing Emergency Number

Emergency numbers are free of any restrictions, i.e. they can still be called even if barring of any kind is set.

Note: It is impossible to make emergency calls when the keypad lock is enabled.



Before emergency numbers can be used, they must be stored. The emergency numbers can then be dialed manually or from the phone book if they are stored there.

Two different emergency numbers (maximum of five digits) can be programmed.

Example: Three-digit emergency number = 123. All numbers which begin with 123 are dialed even if the unit is only programmed for internal calls.

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the EMERGENCY submenu.
4. Press the *INT I OK* key.
5. Enter the PIN. Note: (Factory setting is 0000).

Note: It is recommended to enter emergency numbers in the phone book and to assign significant names (e.g. "DOC", "FIRE").

6. Press the *INT I OK* key.
7. Use the or key to select the emergency number to be changed and change it.
8. Press the *INT I OK* key.

## Changing the Flash Time

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the FLASH TIME submenu.
4. Press the *INT I OK* key.
5. Press the or key to select the required flash time.
6. Press the *INT I OK* key.







## Select Dial Mode

1. Press the key repeatedly until BASE appears.
2. Press the *INT I OK* key.
3. Press the or key to select Dial Mode.
4. Press the *INT I OK* key.
5. Press the or key to select Tone or Pulse.
6. Press the *INT I OK* key to confirm the selection.

## Changing the PIN

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the CHANGE PIN submenu.
4. Press the *INT I OK* key.
5. Enter the old PIN (0000).
6. Press the *INT I OK* key.
7. Enter the new PIN (e.g. 1111).
8. Press the *INT I OK* key.
9. Enter the new PIN again (e.g. 1111).
10. Press the *INT I OK* key.



## Default Settings

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the required DEFAULT submenu.
4. Enter the PIN.
5. Press the *INT I OK* key.
6. Press the *INT I OK* key to confirm.

## Delete HS

If several handsets are registered on one base station, they can deregister each other mutually. The last handset cannot be deregistered.

1. Press the key as often as necessary until the BASE menu appears.
2. Press the *INT I OK* key.
3. Press the or as often as necessary to select the DEREGISTER submenu.
4. Press the *INT I OK* key.
5. Enter the PIN. Note: (Factory setting is 0000).
6. Press the *INT I OK* key.
7. If necessary, use the or key to select the handset.
8. Press the *INT I OK* key.
9. Press the *INT I OK* key to confirm the selection.





## Operation

Selecting the language	/ 5-LANGUAGE / <b>INT I OK</b> /  or  / ENGLISH / <b>INT I OK</b>
Making internal calls	<b>INT I OK</b> / 1 ... 4
Making external calls	/ 030123... or 030123... /
Hands-free mode	/ 030123... or switch on/off during a call with
Taking calls	
End call	
Redialing	/  or  /
Prefix dialing	<b>0</b> press for 2 seconds
Dialing from the phone book	/  or  /  or
View call log entries	/ 1-CALL LOG / <b>INT I OK</b> /  or  / <b>CI</b>
Call call log entries	/ 1-CALL LOG / <b>INT I OK</b> /  or  /
Delete call log entries	/ 1-CALL LOG / <b>INT I OK</b> /  or  / press <b>CI</b> for 2 seconds / ERASE? / <b>INT I OK</b>
Delete all call log entries	/ 1-CALL LOG / <b>INT I OK</b> /  or  / press <b>CI</b> for 2 seconds / or  / ERASE ALL? / <b>INT I OK</b> / CONFIRM? / <b>INT I OK</b>



Muting	<b>CI</b> to switch on/off
Access Call Waiting Line	EXT Call / <b>R</b> / <b>R</b> again to get to first line
Hold, Transfer call (PABX)	<b>R</b> / Extension Number / <b>R</b>
Hold call, handset	<b>INT I OK</b> / 1 ... 4 / <b>INT I OK</b>
Forward call, handset	<b>INT I OK</b> / 1 ... 4 /
Teleconference	<b>INT I OK</b> / 1 ... 4 / press and hold <b>#</b>
Receiver/Microphone volume	/  or  /  or, during a call,  or
Insert dialing pause	press at relevant position
Key lock on/off	<b>#</b> press for 2 seconds



## Phone Book

Store entries	↵ / 2-PHONE BOOK / <b>INT I OK</b> / 1-NEW ENTRY / <b>INT I OK</b> / ENTER NO / 030123... / <b>INT I OK</b> / ENTER NAME / ABC... / <b>INT I OK</b> / NORMAL RING / <b>INT I OK</b>
Store VIP entries	↵ / 2-PHONE BOOK / <b>INT I OK</b> / 1-NEW ENTRY / <b>INT I OK</b> / ENTER NO / 030123... / <b>INT I OK</b> / ENTER NAME / ABC... / <b>INT I OK</b> / NORMAL RING / ↵ or ⬆ / VIP RING 1 - 10 / <b>INT I OK</b>
List entries	↵ / 2-PHONE BOOK / <b>INT I OK</b> / ↵ or ⬆ / 2-LIST ENTRY / <b>INT I OK</b> / ↵ or ⬆
Edit call numbers	↵ / 2-PHONE BOOK / <b>INT I OK</b> / ↵ or ⬆ / 3-EDIT ENTRY / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b> / 030123... / <b>INT I OK</b> / ABC... / <b>INT I OK</b> / NORMAL RING / <b>INT I OK</b>
Edit call numbers, VIP entries	↵ / 2-PHONE BOOK / <b>INT I OK</b> / ↵ or ⬆ / 3-EDIT ENTRY / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b> / 030123... / <b>INT I OK</b> / ABC... / <b>INT I OK</b> / NORMAL RING / ↵ / VIP RING 1 - 10 / <b>INT I OK</b>
Delete call numbers	↵ / 2-PHONE BOOK / <b>INT I OK</b> / ↵ or ⬆ / 4-DELETE / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Delete all call numbers	↵ / 2-PHONE BOOK / <b>INT I OK</b> / ↵ or ⬆ / 5-DELETE ALL / <b>INT I OK</b> / CONFIRM? / <b>INT I OK</b>



## Handset Settings

Ringer volume	↵ / 3-HANDSET / <b>INT I OK</b> / 1-RINGER / <b>INT I OK</b> / 1-VOLUME / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Ringer melody, external	↵ / 3-HANDSET / <b>INT I OK</b> / 1-RINGER / <b>INT I OK</b> / ↵ or ⬆ / 2-EXT RINGER / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Ringer melody, internal	↵ / 3-HANDSET / <b>INT I OK</b> / 1-RINGER / <b>INT I OK</b> / ↵ or ⬆ / 3-INT RINGER / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Change handset name	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 2-HS NAME / <b>INT I OK</b> / DECT... / <b>INT I OK</b>
Save prefix number	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 3-PREFIX MEM / <b>INT I OK</b> / 030... / <b>INT I OK</b>
Key tone on/off	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 4-KEY TONE / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Automatic call answering	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 5-AUTO ANS / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Call timer on/off	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 6-CALL TIMER / <b>INT I OK</b> / ↵ or ⬆ / <b>INT I OK</b>
Default settings	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 7-DEFAULT / <b>INT I OK</b> / CONFIRM? / <b>INT I OK</b>
Register handset	↵ / 3-HANDSET / <b>INT I OK</b> / ↵ or ⬆ / 8-REGISTER / <b>INT I OK</b> Press and hold Page key of Base for 2 seconds





### Base Settings

Barring, off and external	↵ / 4-BASE / INT I OK / 1-BARRING / INT I OK / ENTER PIN / 0000 / INT I OK / ↵ or ⬆ / INT I OK / ↵ or ⬆ / INT I OK
Barring, number	↵ / 4-BASE / INT I OK / 1-BARRING / INT I OK / ENTER PIN / 0000 / INT I OK / ↵ or ⬆ / INT I OK / ↵ or ⬆ / NUMBER / INT I OK / ENTER NO / 321... / INT I OK
Entering emergency numbers	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 2-EMERGENCY / INT I OK / ENTER PIN / 0000 / INT I OK / ↵ or ⬆ / 321... / INT I OK
Ringer volume and melody	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 3-RINGER / INT I OK / ↵ or ⬆ / INT I OK / MELODY / ↵ or ⬆ / INT I OK
Set flash time	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 4-FLASH TIME / INT I OK / ↵ or ⬆ / INT I OK
Changing the dialing mode	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 5-DIAL MODE / INT I OK / ↵ or ⬆ / INT I OK
Changing the PIN	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 6-CHANGE PIN / INT I OK / ENTER PIN / 0000 / INT I OK / NEW PIN / 1111 / INT I OK / REPEAT / 1111 / INT I OK
Default settings	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 7-DEFAULT / INT I OK / ENTER PIN / 0000 / INT I OK / CONFIRM? / INT I OK
Delete HS	↵ / 4-BASE / INT I OK / ↵ or ⬆ / 8-DEREGISTER / INT I OK / ENTER PIN / 0000 / INT I OK / ↵ or ⬆ / INT I OK / CONFIRM? / INT I OK



### WARRANTY INFORMATION

**MOTOROLA DOES NOT WARRANT ITS CORDLESS TELEPHONE PRODUCTS ("PRODUCT(S)") TO YOU, THE END-USER. A LIMITED WARRANTY FOR THIS PRODUCT IS PROVIDED TO YOU BY MOTOROLA'S DISTRIBUTOR ("DISTRIBUTOR") PURSUANT TO DOCUMENTATION INCLUDED WITH THIS PRODUCT. PLEASE CONTACT THE DISTRIBUTOR IF YOU EXPERIENCE PROBLEMS WITH THIS PRODUCT.**

**TO THE FULLEST EXTENT PERMITTED UNDER APPLICABLE LAW (A) MOTOROLA HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND RELATING TO THE PRODUCT THAT BIND THE MANUFACTURER, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY AGAINST INFRINGEMENT PROVIDED UNDER ANY LAW, AND (B) IN NO EVENT SHALL MOTOROLA BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR ANY OTHER PECUNIARY LOSS), OR FROM ANY BREACH OF WARRANTY, EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MOTOROLA SHALL NOT BE BOUND BY PRODUCT RELATED STATEMENTS NOT DIRECTLY MADE BY MOTOROLA NOR ANY WARRANTY OBLIGATIONS APPLICABLE TO THE DISTRIBUTOR.**





## WARRANTY INFORMATION

Alcom Electronics Pte Ltd. (Distributor) guarantees to you, the original purchaser, the digital cordless telephone and accessories which you have purchased from an authorised reseller (the "Products"), to be in conformance with the applicable specifications current at the time of manufacture for a term of 12 months from date of purchase of the Product(s) (Warranty Term). You must inform Distributor of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must immediately submit the Product for service to Distributor's Repair or Service Centre.

During the Warranty term, Distributor will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

For details, please contact :

Alcom Electronics Pte Ltd, 37 Kallang Pudding Road, #05-08, BLK-B Tong Lee Building, SINGAPORE 349315, PH : 65 - 68412668 FAX : 65 - 68412628

## HOW TO GET WARRANTY SERVICE?

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The digital cordless telephone should also clearly display the original compatible electronic serial number. Such information is contained with the Product.



You must ensure that all and any repairs or servicing is handled at all times by a Distributor's Service Centre in accordance with the Distributor's Service requirements. In some cases, you may be requested to provide additional information concerning the maintenance of the Products by Distributor's Service Centres only, therefore it is important to keep a record of any previous repairs, and make them available if questions arise concerning maintenance.

## CONDITIONS

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Distributor reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records. Repair, at Distributor's option, may include refashioning of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and digital cordless telephone that have been replaced shall become the property of Distributor.

Distributor does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Distributor will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Distributor which is attached to or used in connection with the Products.





When the Product is used in conjunction with ancillary or peripheral equipment not supplied for this digital cordless telephone by Distributor, Distributor does not warrant the operation of the Product/peripheral combination and Distributor will not honour any warranty claim where the Product is used in such a combination and it is determined by Distributor that there is no fault with the Product.

#### WHAT IS NOT COVERED BY THE WARRANTY

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. The following are examples of defects or damage not covered by this product warranty

- Defects or damage resulting from use of the Product in other than its normal and customary manner.
- Defects or damage from misuse, access to incompatible sources, accident or neglect.
- Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
- Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- Products disassembled or repaired other than by Distributor in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
- Defects or damage due to moist, liquid or spills of food.



- All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
- Products rented on a temporary basis.
- Periodic maintenance and repair or replacement of parts due to normal wear and tear.

Note: The talk-time, stand-by time and total life cycle of the rechargeable batteries for your digital cordless telephone will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your digital cordless telephone within the first two months from date of purchase.

The warranty for the rechargeable batteries becomes void if (i) the batteries are charged other than by original battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the digital cordless telephone for which it is specified.

Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint, assembly, sub-assemblies, displays and keyboards and any accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries is considered to be your responsibility and therefore Distributor will not provide the free Warranty repair service for these items.





Please make and retain a note of all data you have inserted into your Product for example names and phone numbers, before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process.

**OUT OF WARRANTY REPAIRS**

if you request Distributor to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Distributor may in its discretion carry out such repairs subject to you paying Distributor its fees for such a repair or it may refer you to an authorised third party to carry out such repairs.





**MOTOROLA**

User's Guide

**DIGITAL CORDLESS  
TELEPHONE**

*WITH \*CALLER ID AND  
HANDSET SPEAKERPHONE*



**Model ME4052 Series**  
Digital 1.8 GHz

