



Digital Cordless Telephone



Motorola C1LB+ For C1001LB+, C1002LB+, C1003LB+ and C1004LB+



Warning: Charge the handset for 24 hours before use.

Manufactured, distributed or sold by Suncorp Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.

Version 4 (SG)



Welcome...

to your new Motorola C1LB+ Digital Cordless Telephone!

- All handsets are fully cordless for locating anywhere within range.
50 Name and Number phonebook.
Bright backlit display.
Speakerphone for hands-free conversations.
Caller ID shows you who's calling and see details of the last 40 callers in a Calls list.
Redial up to 10 of the last numbers called.
Register up to 5 handsets to a single base and register each handset with up to 4 different bases.
Make internal calls and transfer external calls between handsets.
Choose from 10 different ringtones for internal and external calls as well as numbers stored in the phonebook.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Need help?

If you have any problems setting up or using your C1LB+, please contact Customer Services on (65) 68412668. Email: support@alcom.com.sg.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 6.5 hours talk time or up to 135 hours standby time on a single charge.

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. Batteries and handset may become warm during charging. This is normal.

All talk and standby times are approximate and depend on features selected and usage pattern.

Date and time

If you have subscribed to a Caller ID Service, the date and time is set automatically for all handsets when you receive your first call.

If you do not have a Caller ID service, you can set the date and time manually, see section '7. Clock & Alarm'.

Your C1LB+ is now ready for use.

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- C1LB+ base & cordless handset
2 x rechargeable Ni-MH battery cells
Power adaptor for the base
Telephone line cord

If you have purchased a C1LB+ multiple pack you will also have the following additional items:

- Cordless handset & charger
2 x rechargeable Ni-MH battery cells
Power adaptor for the charger


ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone. A holistic view that focuses on both social and environmental responsibility. A passion and a shared point of view.

The right thing to do.

- Meets and / or exceeds EMEA environmental regulatory requirements.
Eco friendly packaging with a minimum 20% post consumer recycled content.
Phone housing is built with a minimum of 25% post consumer recycled content plastic.
Energy efficient charger that meets EU Code of Conduct requirements.
ECO mode function which reduces the transmitted power and energy consumption.

2. Getting to know your phone

Overview of your handset

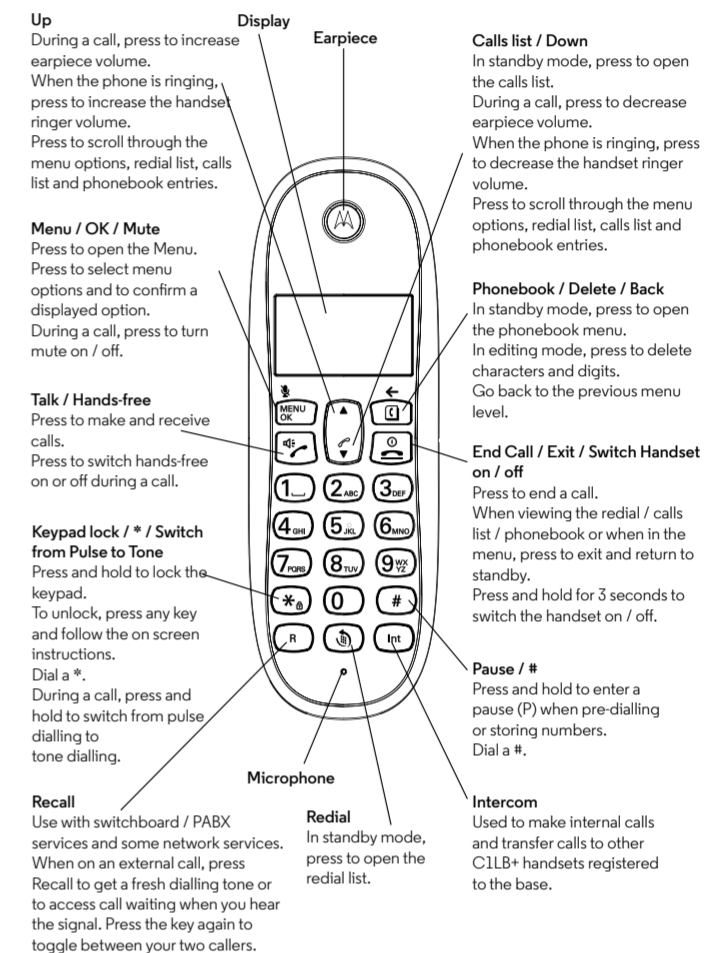

NOTE

If you prefer to press [END] when you lift up the handset to answer a call, you will need to switch Auto answer off.

3.3 Adjust the earpiece volume

During a call, press [UP] or [DOWN] to increase or decrease the volume. There are 5 levels to choose from.

3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.
1. During a call, press [MUTE]. The display shows MUTE and your caller cannot hear you.
2. Press [MUTE] again to resume your call.

3.5 Intercom

3.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

[int] icon is displayed to indicate an internal call.

1. Press [int] followed by the number (1-5) of the handset you want to call.

3.5.2 Receive an internal call

When you receive an internal call, [int] icon flashes and the handset number that is calling you is displayed.

1. Press [int] to answer the call.

3.5.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

- 1. Press [int] followed by the handset number (1-5) that you want to transfer to.
2. When the other handset answers, press [int] to complete the transfer.

NOTE

If there is no answer from the other handset and you wish to return to your external caller, press [int].

Your external call resumes automatically after 30 seconds if there is no answer.

3.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

- 1. Press [int] followed by the handset number (1-5) that you want to establish a conference call.

Enter the first letter of the name to search alphabetically.

The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll [UP] or [DOWN] to the entry you want.

- 3. Press [int] to dial or [int] to return to standby.

NOTE

When the name is displayed, you can switch between the name and number by pressing [int].

4.3 Edit a name and number

- 1. Press [int]. The display shows PHONEBOOK.
2. Press [int]. The display shows ADD ENTRY.
3. Scroll [UP] to MODIFY ENTRY and press [int].
4. Scroll [UP] or [DOWN] to the entry you want to edit, or search alphabetically and press [int]. The existing name is displayed.
5. Press [int] to delete the name if required, then enter the new name and press [int]. The existing number is displayed.
6. Press [int] to delete the number if required, then enter the new number and press [int].
7. Scroll [UP] or [DOWN] to select a new ringer melody and press [int]. The display shows ADD ENTRY.
8. Enter the next name and number entry you wish to store in your phonebook or press [int] twice to return to standby.

4.4 Delete an entry

- 1. Press [int]. The display shows PHONEBOOK.
2. Press [int]. The display shows ADD ENTRY.
3. Scroll [UP] to DELETE ENTRY and press [int].
4. Scroll [UP] or [DOWN] to the entry you want to delete, or search alphabetically and press [int]. The display shows CONFIRM ?.
5. Press [int] to confirm or [int] to cancel.

5. Handset settings

5.1 Handset ringer volume

You can adjust the ringer volume and set different volume levels for your internal and external calls. Choose from 5 volume levels or OFF.

- 1. Press [int], scroll [UP] to HANDSET and press [int].
2. Press [UP] or [DOWN] to select INT RING VOL or EXT RING VOL and press [int].
3. Press [UP] or [DOWN] to select the volume (1-5 or OFF).

Installing and charging the handset

- 1. Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery cells supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the base to charge for at least 24 hours continuously.
4. When the handset is fully charged, [int] icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

- 1. Plug the power adaptor into the socket marked [int] on the underside of the charger and plug the other end into the mains power wall socket.
2. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
3. Slide the battery cover back into place.
4. When the handset is fully charged, [int] icon will appear steady on the display. The display will show HANDSET and handset number (e.g. 2) to indicate that it is registered to the base.

IMPORTANT

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 300mA rechargeable batteries) supplied with your C1LB+.

Please do not use alkaline or non rechargeable batteries. It may cause permanent damage to the product and void the warranty.

BATTERY LOW WARNING

If [int] icon flashes on the display and you hear a warning beep every minute during a call, you will need to recharge the handset before you can use it again.

 

When charging, [int] icon will scroll on the display. Once fully charged scrolling will stop.

Flashes when battery is almost fully discharged.

This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

Underside of the base

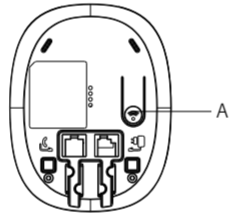

A Page

In standby mode, press to ring the handset(s). Press and hold to enter registration mode when registering handsets.

Navigating the menus

Your C1LB+ has an easy to use menu system.

Each menu has a list of options, which you can see on the menu map on the following page.

When the handset is switched on and in standby:

- 1. Press [int] to open the main menu.
2. Then use [UP] or [DOWN] buttons to scroll through the available options.
3. Press [int] to select an option. To return to the previous menu level, press [int]. To exit the menu and return to standby, press [int].

NOTE

If no buttons are pressed for 20 seconds, the handset returns to standby automatically.

- 3. Press [int]. The display shows ADD ?.
4. Press [int] again. The display shows NAME ?.
5. Enter the name and press [int]. The number is displayed.
6. Edit the number if necessary, then press [int].
7. Press [UP] or [DOWN] to select the ringer melody you want and press [int]. The number is stored.

3.7.3 Delete an entry

- 1. Press [int] to open the Redial list.
2. Scroll [UP] or [DOWN] to the entry you want and press [int]. The display shows DELETE ?.
3. Press [int] to confirm or [int] to cancel.

3.7.4 Delete the entire Redial list

- 1. Press [int] to open the Redial list.
2. Press and hold [int]. The display shows DELETE ALL ?.
3. Press [int] to confirm or [int] to cancel.

3.8 Lock / unlock the keypad

You can lock the keypad so that it cannot be operated accidentally while carrying it around.

NOTE

When the keypad is locked, you can still answer incoming calls and operate the handset as normal during the call. When the call ends, the keypad lock comes on again.

- 1. Press and hold [int]. [int] icon is displayed.
2. To unlock the keypad, press any key on your handset. The display shows PRESS *.
3. Press [int] within 5 seconds.

3.9 Paging / Find handset

You can alert a handset user that they are wanted or locate a missing handset.

Paging calls cannot be answered by a handset.

- 1. Press [int] on the base. All handsets registered to the base will ring.
2. To stop the ringing, press [int] on the base again or press any button on the handset.

4. Phonebook

You can store up to 50 names and numbers in the phonebook. Names can be up to 12 characters long and numbers up to 24 digits. You can also select different ringer melodies for the phonebook entries.

Menu map

Table with 3 columns: PHONEBOOK, HANDSET, DATE - TIME. Lists various menu options like ADD ENTRY, BEEP, DATE SET, etc.

3. Using the phone

NOTE

Your handset will automatically time the duration of all external calls. The call timer will display after the first 15 seconds of your call. When the call ends, the total duration of your talk time is shown for 5 seconds.

3.1 Switch the handset on / off

Press and hold [int] to switch the handset on or off.

3.2 Calls

3.2.1 Make a call

- 1. Press [int].
2. When you hear the dial tone, dial the number.

3.2.2 Preparatory dialling

- 1. Dial the number first. If you make a mistake press [int] to delete the last digit.
2. Press [int] to dial.

3.2.3 End a call

Press [int] or place the handset back on the base or charger.

3.2.4 Receive a call

When you receive an external call, the phone rings and [ext] icon flashes on the display.

- 1. If the handset is off the base then press [int] to answer the call, or if the handset is on the base simply lift the handset to answer the call.

4.1 Store a name and number

If the C1LB+ is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard access code (e.g. 9). When storing a number, press and hold [int] until the display shows P. You can then continue storing the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller instead of the number, save the full telephone number including the area code to your phonebook.

You can store multiple entries with the same number. However, to prevent unnecessary duplicated entries, you can only store the same name once.

- 1. Press [int]. The display shows PHONEBOOK.
2. Press [int]. The display shows ADD ENTRY.
3. Press [int]. The display shows NAME ?.
4. Enter the name and press [int]. The display shows NUMBER ?.
5. Enter the number and press [int]. The display shows MELODY 1.
6. Press [UP] or [DOWN] to select the ringer melody you want and press [int]. The display shows ADD ENTRY.
7. Enter the next name and number entry that you wish to store in your phonebook or press [int] twice to return to standby.

ENTERING NAMES

Use the keypad letters to enter names, e.g. to store TOM: Press [int] once to enter T.

Press [int] three times to enter O.

Press [int] once to enter M.

WRITING TIPS

Press [int] to delete the last character or digit.

Press [UP] or [DOWN] to move between characters.

Press [int] to insert a space.

Use [int] twice to insert a dash.

4.2 View or dial an entry

- 1. Press [int]. [int] icon is displayed.
2. Scroll [UP] or [DOWN] to the entry you want. OR

1. Getting started

IMPORTANT

Do not place your C1LB+ in the bathroom or other humid areas.

Location

You need to place your C1LB+ base within 1.5 metres of the mains power and telephone wall socket so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least 1 metre away from other electrical appliances to avoid interference. Your C1LB+ works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

HANDBET RANGE

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The [Y] icon on your handset indicates that you are within range of the base. When out of range of the base, the [Y] icon flashes. If you are on a call, you will hear a warning beep.

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Setting up


IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.

Connecting the base

- 1. Plug the telephone line cord into the socket marked [int] on the underside of the base.
2. Plug the power adaptor into the socket marked [int] on the underside of the base and plug the other end into the mains power wall socket. Switch on the mains power.

Handset LCD Display

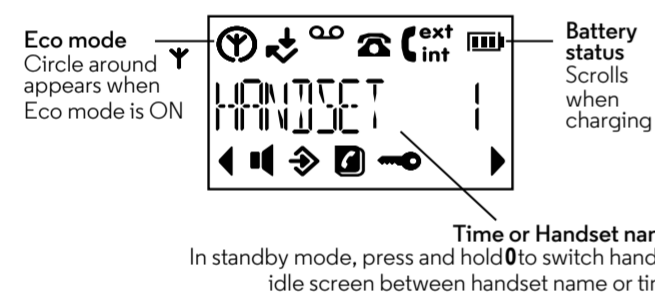

[ext] Flashes to indicate an incoming external call.

[int] External call in progress.

[int] Flashes to indicate an incoming internal call.

[int] Internal call in progress.

[int] 3-way call in progress or transfer an external call to another C1LB+ handset registered to the base.

[Y] Eco mode is ON.

[int] Flashes to indicate new voicemail messages received. Off when you have no voicemail messages.

[Y] Indicates signal strength.

Flashes when handset is not registered to the base or if you go out of range.

[int] Hands-free mode is ON.

[int] Menu is opened.

[int] Phonebook is opened.

[int] Flashes to indicate new calls list entries received.

[int] Answered call (when viewing the Calls list).

[int] Unanswered call (when viewing the Calls list).

[int] Keypad is locked.

[int] Displayed number is longer than 12 digits.

The approximate power levels of your battery are indicated as follows:

[int] Battery is fully charged.

[int] Battery is partially charged.

[int] Battery is running low.

- 2. When the other handset answers, press [int] to connect all three callers to begin the conference call. [int] icon is displayed.
3. If there is no answer from the other handset, press [int] to return to your external caller.
4. Press [int] to end the call.

3.6 Hands-free speakerphone

Hands-free lets you talk to your caller without holding the handset. It also enables other people in the room to listen to the conversation over the loudspeaker.

3.6.1 Make a hands-free call

- 1. Dial the number and then press [int] twice. [int] icon is displayed and you will hear the call over the handset loudspeaker.
2. Press [int] to switch the call between the earpiece and the loudspeaker.
3. Press [int] to end the call.

NOTE

During a hands-free call, press [UP] or [DOWN] to adjust the volume.

3.6.2 Answer a call hands-free

If the handset is on the base and auto answer is switched on, lift the handset and press [int].

If the handset is off the base and auto answer is switched off, press [int] twice to answer the call.

3.6.3 Switch to hands-free during a call

During a call, press [int] to put the call on the loudspeaker.

To switch hands-free off and return the call to the earpiece, press [int] again.

3.7 Redial

The last 10 entries dialled are stored in the redial list.

3.7.1 View or dial an entry

- 1. Press [int] to open the Redial list.
2. Scroll [UP] or [DOWN] to the entry you want.
3. Press [int] to dial the displayed entry or press [int] to return to standby.

NOTE

If the caller's number exactly matches an entry stored in the phonebook, the name is displayed. Press [int] to see the caller's number.

3.7.2 Copy a Redial list number to the phonebook

- 1. Press [int] to open the Redial list.
2. Scroll [UP] or [DOWN] to the entry you want.

- Press **[OK]** to confirm or **[Back]** to return to the previous menu.

NOTE

*When the phone is ringing, you can adjust the ringer volume by pressing **▲** or **▼**.*

5.2 Handset ringer melody

You can set different ringer melodies for your internal and external calls. Choose from 10 different ringer melodies.

You will hear a sample ring as you scroll to each ring melody.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**.
- Press **▲** or **▼** to select INT MELODY or EXT MELODY and press **[OK]**.
- Press **▲** or **▼** to select the ringer melody (1 - 10).
- Press **[OK]** to confirm or **[Back]** to return to the previous menu.

NOTE

If you subscribe to your network providers caller ID service, calls from the numbers that you have stored in the phonebook will ring using the ringer melody you have set when you store the entry.

5.3 Auto answer

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls can only be answered by pressing **[OK]**.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**.
- Scroll **▼** to AUTO ANSWER and press **[OK]**.
- Press **▲** or **▼** to select ON or OFF and press **[OK]** to confirm.

5.4 Handset name

If you are using more than one handset with your C1LB+ base, you can set a personalized name for each handset to easily distinguish between them. A name can be up to 10 characters long.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**.
- Scroll **▼** to NAME and press **[OK]**.
- Enter the new handset name and press **[MENU]** to confirm.
 - Delete the current name by pressing **[Back]**.

NOTE

*The handset name will only be displayed for approximately 20 seconds when no button is pressed. If you make a mistake, press **[Back]** to delete the last character or digit.*

*If you make a mistake, press **[Back]** to delete the last character or digit.*

7. Clock & alarm

If you have subscribed to Caller ID Service, the date and time will be set on all your handsets whenever a call is received. You can also manually set the date and time on the individual handsets.

7.1 Set the date

- Press **[MENU]**, scroll **▼** to DATE – TIME and press **[OK]**. The display shows DATE SET.
- Press **[OK]** to select.
- Enter the date (e.g. 12–08 for 12th of August) and press **[OK]** to confirm.

7.2 Set the time

- Press **[MENU]**, scroll **▼** to DATE – TIME and press **[OK]**.
- Scroll **▼** to CLOCK SET and press **[OK]**.
- Enter the time in 24 hour format (e.g. 18–30 for 6:30pm) and press **[OK]** to confirm.

7.3 Set alarm

Each handset can have a different alarm setting.

- Press **[MENU]**, scroll **▼** to DATE – TIME and press **[OK]**.
- Scroll **▼** to ALARM SET and press **[OK]**.
- Press **▲** or **▼** to select ON or OFF and press **[MENU]** to confirm.
- If you select ON, enter the time in 24 hour format (e.g. 07–30 for 7:30am) and press **[OK]** to confirm.

7.4 Switch off alarm ring

When the alarm sounds, press any button to switch it off.

NOTE

If you are using the handset to make a call when the alarm ring is due, you will hear a beep in the earpiece.

8. Caller ID and the Calls list

IMPORTANT

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be payable.

To ensure that the caller’s name is displayed, make sure you have stored the full telephone number, including the area code in the phonebook.

If the call is a withheld call, WITHHELD will be displayed. If the number is unavailable, UNAVAILABLE will be displayed.

- Press **[MENU]** to confirm. You will hear a confirmation beep and the display will return to standby.

NOTE

If you select AUTO, your handset will automatically search for and connect to the base with the strongest signal.

9.4 De-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

- Press **[MENU]**, scroll **▼** to SETUP and press **[OK]**.
- The display sows DEL HANDESET, press **[OK]**.
- Enter the 4 digit PIN code (default = 0000) and press **[OK]**.
- Enter the handset number that you want to de-register. You will hear a confirmation beep and the display will return to the previous menu.

10. Help

No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly.
- Check that the mains power is connected properly and switched on.

No display

- Check that the batteries are inserted correctly and fully charged. Use only approved rechargeable batteries supplied.
- Check that the handset is switched on. Press and hold **[OK]**.
- Reset the base by removing the batteries and disconnecting the mains power. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

Yicon flashes

- Handset is out of range. Move closer to the base.
- Make sure that the handset is registered to the base.
- Check that the mains power is connected properly and switched on.

Keypad does not seem to work

- Check that the keypad lock is not on.

■ icon is not scrolling during charge

- Adjust the handset slightly on the base.
- Clean the charging contacts with a cloth moistened with alcohol.
- Check that the mains power is connected properly and switched on.
- The battery is full. When the handset is fully charged, **■** icon will appear steady on the display.

*If you make a mistake, press **[Back]** to delete the last character or digit.*

Product disposal instructions

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority’s recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Suncorp Technologies Limited, 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong. (“SUNCORP”)

What Does This Warranty Cover?

Subject to the exclusions contained below, SUNCORP warrants that this Motorola branded product (“Product”) or certified accessory (“Accessory”) sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will SUNCORP do?

SUNCORP or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

5.5 Language

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**.
- Scroll **▼** to LANGUAGE and press **[OK]**.
- Press **▲** or **▼** to select your preferred language and press **[OK]** to confirm.

5.6 Key beep

When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**. The display shows BEEP.
- Press **[OK]** to select. The display shows KEYTONE.
- Press **[OK]** to select.
- Press **▲** or **▼** to select ON or OFF and press **[MENU]** to confirm.

5.7 Battery low warning beep

When the battery is almost fully discharged, you will hear a warning beep every minute during a call. You can switch these beeps on or off.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**. The display shows BEEP.
- Press **[OK]** to select.
- Scroll **▼** to LOW BATTERY and press **[OK]**.
- Press **▲** or **▼** to select ON or OFF and press **[MENU]** to confirm.

5.8 Out of range warning beep

If the handset goes out of range, you will hear warning beeps during a call. You can switch these beeps on or off.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**. The display shows BEEP.
- Press **[OK]** to select.
- Scroll **▼** to OUT RANGE and press **[OK]**.
- Press **▲** or **▼** to select ON or OFF and press **[OK]** to confirm.

5.9 Keypad lock using the menu

You can use the menu to lock the keypad.

- Press **[MENU]**, scroll **▼** to HANDESET and press **[OK]**.
- Scroll **▼** to KEYLOCK ? and press **[OK]** to confirm.
 - icon is displayed.

NOTE

*To unlock the keypad, press any button on the keypad, then press **[*#]** within 5 seconds.*

*If you make a mistake, press **[Back]** to delete the last character or digit.*

If the call is from an international number, INT’L will be displayed. If the call is from the operator, OPERATOR will be displayed. If the call is from a payphone, PAYPHONE will be displayed. If the call is from a ringback request, RINGBACK will be displayed.

8.1 Caller ID

If you have subscribed to a Caller ID Service, you will be able to see your caller’s number on your handset (provided it is not withheld) prior to answering the call. The display can show the first 12 digits or characters of the phone numbers and names.

If your caller’s name and number are stored in the phonebook and a number match is found, you will see the caller’s name on the display instead.

8.2 Calls list

The Calls list stores details of your last 40 received calls, including the phone number and date and time of the call.

The Calls list also alerts you when you have unanswered calls.

The caller’s details are stored in the Calls list whether or not you have answered the call. The list is shared by all handsets registered to the base. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

When a new call is received in the Calls list, **■** icon will flash on the display in standby mode to alert you. When you have viewed the new call, **■** icon disappears but **■** icon will remain.

8.2.1 View the Calls list

- Press **▼** to open the Calls list. If there are no calls in the list, the display shows EMPTY.
- Press **▲** or **▼** to scroll through the list.
 - If the call was answered, **■** icon is displayed as you scroll to the entry. If the call was unanswered, **■** icon is displayed as you scroll to the entry. When you reach the end of the list, the handset will beep.
 - If the caller’s number exactly matches an entry stored in the phonebook, the display will alternate between the name and the number. Press **[OK]** to see the caller’s number.
 - If the telephone number is longer than 12 digits, **■** icon is displayed. Press **[OK]** to see the remaining digits.
 - Press **[MENU]** again to see the time and date of the call.
 - Press **[MENU]** again to access the option to store the entry in your phonebook.

8.2.2 Dial a number in the Calls list

- Press **▼** to open the Calls list.
- Scroll **▲** or **▼** to the entry you want.
- Press **[OK]** to dial the displayed entry.

*If you make a mistake, press **[Back]** to delete the last character or digit.*

No Caller ID

- Check your subscription with your network operator.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

I have forgotten my PIN!

- Restore your C1LB+ to its default settings, see “6.7 Emergency default”.

Cannot register a handset to the base

- You can register up to a maximum of 5 handsets to a C1LB+ base. You must de-register a handset in order to register a new one.
- Check that you have entered the correct PIN code (default = 0000).
- Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Handset does not ring

- The handset ringer volume may be set to Off.

Noise interference on my phone or on other electrical equipment nearby

- Place your C1LB+ at least one metre away from electrical appliances or any metal obstructions to avoid any risk of interference.

11. General information

IMPORTANT

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Singapore.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

*If you make a mistake, press **[Back]** to delete the last character or digit.*

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or SUNCORP are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, SUNCORP or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

6. Base settings

6.1 Change base PIN code

Some functions are protected by a 4 digit PIN code which must be entered if you want to change the settings. The default PIN is 0000. You can change this to your own preferred number.

When you enter a PIN, the digits are shown as ****.

- Press **[MENU]**, scroll **▼** to SETUP and press **[OK]**.
- Scroll **▼** to PIN CODE and press **[OK]**.
- Enter the 4 digit PIN code (default = 0000) and press **[OK]**.
- Enter the new PIN and press **[OK]** to confirm.
- The display shows RETYPE. Re-enter the new PIN and press **[OK]** to confirm.

IMPORTANT

If you change the PIN code, please keep a record of the new number.

6.2 Dial mode

Your C1LB+ is set to tone dialling. You should only need to change this if connected to an older type of switchboard / PBX which requires pulse dialling.

- Press **[MENU]**, scroll **▼** to SETUP and press **[OK]**.
- Scroll **▼** to DIAL MODE and press **[OK]**.
- Press **▲** or **▼** to select TONE DIAL or PULSE DIAL and press **[OK]** to confirm.

6.3 Recall mode

Depending on your country and network operator, your C1LB+ has the recall time set as TIMED BR, 2 (600 ms). It is unlikely that you need to change this setting unless advised to do so.

- Press **[MENU]**, scroll **▼** to SETUP and press **[OK]**.
- Scroll **▼** to RECALL and press **[OK]**.
- Press **▲** or **▼** to select TIMED BR,1 (short flash time) or TIMED BR,2 (long flash time) and press **[OK]** to confirm.

6.4 Restore default settings

You can restore your C1LB+ to its default (original) settings.

All the handsets that are registered to the base will be retained.

IMPORTANT

Restoring your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press **[MENU]**, scroll **▼** to SETUP and press **[OK]**.

*If you make a mistake, press **[Back]** to delete the last character or digit.*

8.2.3 Copy a Calls list number to the phonebook

- Press **▼** to open the Calls list.
- Scroll **▲** or **▼** to the entry you want.
- Press **[MENU]** repeatedly until the display shows ADD ?.
- Press **[MENU]** again. The display shows NAME ?.
- Enter the name and press **[OK]**. The number is displayed.
- Edit the number if necessary, then press **[OK]**.
- Press **▲** or **▼** to select the ringer melody you want and press **[OK]**. The number is stored.

8.2.4 Delete an entry

- Press **▼** to open the Calls list.
- Scroll **▲** or **▼** to the entry you want and press **[Back]**. The display shows DELETE ?.
- Press **[OK]** to confirm or **[Back]** to cancel.

8.2.5 Delete the entire Calls list

- Press **▼** to open the Calls list.
- Press and hold **[Back]**. The display shows DELETE ALL ?.
- Press **[OK]** to confirm or **[Back]** to cancel.

9. Using additional handsets

You can register up to five handsets to your C1LB+ base to extend your phone system without having to install extension sockets for each new phone.

Each C1LB+ handset can be registered with up to four bases. You can then select the base you prefer to use. If you have purchased a C1LB+ multiple pack, all additional handsets come pre-registered to the base.

If you have purchased an additional handset separately, you must register it to your C1LB+ base before it can be used.

9.1 Registering an additional handset

NOTE

Handset batteries must be fully charged before you start to register. Hold your handset close to the base during the registration process. Handsets that were supplied with your C1LB+ base are already pre-registered.

On the base:

- Press and hold **[OK]** for 3 seconds until you hear two beeps. The base will remain in registration mode for 90 seconds.

*If you make a mistake, press **[Back]** to delete the last character or digit.*

*If you make a mistake, press **[Back]** to delete the last character or digit.*

- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user’s Guide.

- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

IMPORTANT

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this cordless phone immediately from an outlet if: