



**THIS EQUIPMENT IS NOT DESIGNED FOR MAKING EMERGENCY TELEPHONE CALLS WHEN THE POWER FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.**

Before operating this set, please read these instructions carefully.

### Package Contents

- 1 Handset
- 1 Base Station
- 1 Mains Power Adapter
- 1 Telephone Line Cord
- 2 Rechargeable Batteries for handset
- 1 User Guide

### Connection and Conditions for use:

You can connect your phone to a direct exchange line (DEL) on a local exchange with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect as an extension to a payphone. The ringer equivalence number (REN) of all equipment (phones, fax machines, modems, etc.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly. This phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

### Handset - Base Connection

- 1) When purchased, all handsets are already registered to the base unit and should link to it when they are all powered up.
- 2) To use your cordless handset and base unit together, you must be able to establish a radio link between them. The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors. Be aware that:
  - > Any large metal object, such as a refrigerator, mirror or filing cabinet, between the handset and the base unit may block the radio signal.
  - > Other solid structures, like walls, may reduce the signal strength.
  - > Other electrical equipment may cause interference and/or affect the range.
- 3) Do not place close to another telephone, a TV or audio equipment - it may cause interference.
- 4) Out of Range warning: If you hear a warning tone during a call, and/or the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit, so move nearer to the base unit within 20 seconds, otherwise the call may be cut off.

### TECHNICAL DETAILS

Standard	Digital Enhanced Cordless Telecommunication (DECT)
Frequency range	1.88 to 1.9GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; up to 50m indoors
Operating time	Standby: 100 hours. Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0°C to 40°C, Storage -20°C to 60°C
Electrical power	Base unit: Ten Pac - S004LV0600030 / S004LB0600030- input 100-240VAC 50/60Hz 150mA, output 6VDC 300mA
	Handset Battery Information: GPI, VTHC043C00, Type NiMH (Rechargeable battery) Voltage Rating 2 x AAA size NiMH 1.2V 400mAh CORUN, Ni-MHAAA400mAh 1.2V, Type NiMH (Rechargeable battery) Voltage Rating 2 x AAA size NiMH 1.2V 400mAh

### Caution

Risk of explosion if battery is replaced by an incorrect type. Do not use alkaline batteries which may leak and cause permanent damage to the handset and void warranty. Dispose of used batteries according to the instructions.

Every effort has been made to ensure high standards of reliability for your ADT3805 DECT. However, if something does go wrong, please **do not try to repair it yourself**, consult your supplier or the Helpline.

### TABLE OF CONTENTS

1	INSTALLING YOUR PHONE	6
1.1	CONNECTING THE BASE STATION	6
1.2	INSTALLING AND CHARGING THE BATTERIES	6
2	GETTING TO KNOW YOUR PHONE	7
2.1	OVERVIEW OF THE HANDSET	7
2.2	DISPLAY ICONS AND SYMBOLS	8
2.3	MENU STRUCTURE	10
2.4	TEXT AND DIGIT ENTRY TABLE	10
3	USING YOUR PHONE	12
3.1	MAKE A CALL	12
3.2	MAKE A CALL FROM DIRECT MEMORY KEYS (M1-M3)	12
3.3	ANSWER A CALL	12
3.4	AUDIO BOOST FEATURE	12
3.5	END A CALL	13
3.6	ADJUST EARPIECE AND HANDSFREE VOLUME	13
3.7	MUTE A CALL	13
3.8	TURN OFF THE HANDSET RINGER	13
3.9	TURN ON THE KEYPAD LOCK	13
3.10	LAST NUMBER REDIAL	13
3.11	FIND THE HANDSET	14
3.12	MAKE AN INTERNAL CALL	14
3.12.1	INTERCOM ANOTHER HANDSET	14
3.12.2	CALL ALL HANDSETS	14
3.12.3	TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET	14
3.12.4	MAKE A 3-WAY CONFERENCE CALL	15
4	PRIVATE PHONEBOOK / CONTACTS	16
4.1	ADD A NEW PHONEBOOK ENTRY	16
4.2	SEARCH A PHONEBOOK ENTRY	16
4.3	VIEW A PHONEBOOK ENTRY	16
4.4	EDIT A PHONEBOOK ENTRY	16
4.5	DELETE A PHONEBOOK ENTRY	16
4.6	DELETE ALL ENTRIES FROM THE PRIVATE PHONEBOOK	17
4.7	CHECK THE PHONEBOOK USAGE	17
4.8	SET THE FAST DIAL NUMBERS	17
5	CALLER DISPLAY (NETWORK DEPENDENT)	18
5.1	VIEW THE CALL LOG	18
5.2	STORE A CALL LOG NUMBER INTO THE PHONEBOOK	18
5.3	DELETE AN ENTRY IN THE CALL LOG	18
5.4	DELETE ALL ENTRIES FROM THE CALL LOG	18
5.5	VIEW THE DETAILS OF A CALL LOG ENTRY	18

### TABLE OF CONTENTS

6	PHONE SETTINGS	19
6.1	CLOCK SETTINGS	20
6.2	ALARM SETTINGS	20
6.3	HANDSET SETTINGS	20
6.4	BASE SETTINGS	23
6.5	REGISTRATION	25
6.6	RESET YOUR PHONE	25
7	TROUBLESHOOTING	26
8	DECLARATION OF CONFORMITY	27
9	WARRANTY AND SERVICE	28

### IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- 1) Read and understand all the instructions.
  - 2) Follow all warnings and instructions marked on the product.
  - 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
  - 4) Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
  - 5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
  - 6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
    - When the power supply cord or plug is damaged or frayed.
    - If the product does not operate normally by following the operating instructions.
    - If the product has been dropped and the cabinet has been damaged.
    - If the product exhibits a distinct change in performance.
  - 7) NEVER use your cordless telephone outdoors during a thunderstorm - unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
  - 8) Do not use the telephone to report a gas leak in the vicinity of the leak.
  - 9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
  - 10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
  - 11) Do not use third party charging bays. The batteries may be damaged.
  - 12) Please ensure the batteries are inserted in the correct polarity.
  - 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

### GETTING TO KNOW YOUR PHONE

#### 1 INSTALLING YOUR PHONE


##### 1.1 Connecting the base station

- 1) Plug the power adapter & line cord into the base station.
- 2) Plug the power adapter into a 240Vac, 50Hz mains socket, & the other end of the line cord into your telephone line socket.

Warning: Always use the line cord provided in the box. Other line cords may not be compatible and may not work.

Warning: Only use the power adapter supplied. Others will result in non-compliance with the safety specification EN60950, and will invalidate any approval given with this apparatus.


Warning: The Base unit needs mains power for normal operation, not just for charging the handset batteries.

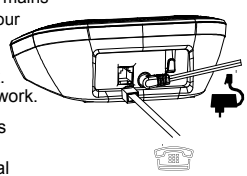

##### 1.2 Installing and charging the batteries

- 1) Slide open the battery compartment cover.
- 2) Place the 2 batteries with the correct polarity, as shown.
- 3) Slide the battery compartment cover back.
- 4) Put the handset on the base and charge for 15 hours before first time use. The handset beeps when charging starts.

Warning: Only use AAA size NiMH rechargeable batteries. Do not use alkaline batteries which may leak and cause permanent damage to the handset and void warranty.

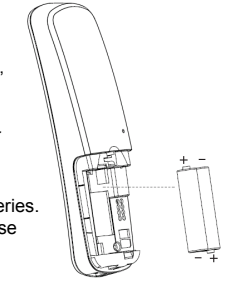


##### 1.3 If you have a Broadband Line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems. In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband provider.

### GETTING TO KNOW YOUR PHONE

#### 2 GETTING TO KNOW YOUR PHONE

##### 2.1 Overview of the Handset

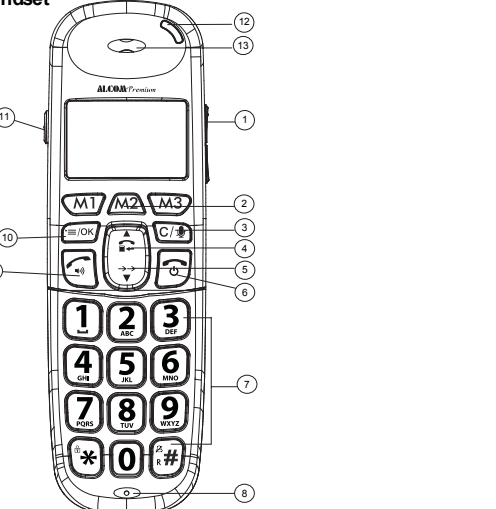

1. **▲ UP/↓DOWN**  
During a call: Press to increase or decrease the earpiece volume.
2. **M1/M2/M3 - DIRECT MEMORY KEYS**  
In idle mode: Press and hold to dial the stored number.  
In main menu mode: Press to go back to idle screen.  
In sub-menu mode: Press to go back to previous level.
3. **MUTE A CALL**  
In sub-menu mode: Press and hold to go back to idle screen.  
In editing / redialing mode: Press to clear a character / digit.  
In editing / redialing mode: Press and hold to delete all the characters / digits.  
During a call: Press to mute / unmute the microphone.
4. **UP/CALL LOG**  
In idle mode: Press to access the call log.  
In menu mode: Press to scroll up the menu items.  
In Contacts list / Redial list / Call List: Press to scroll up the list.

### GETTING TO KNOW YOUR PHONE

#### 5. DOWN/REDIAL LIST

In idle mode: Press to access the redial list.  
In menu mode: Press to scroll down the menu items.  
In Contacts list / Redial list / Call List: Press to scroll down the list.  
During a call: Press to end a call and go back to idle mode.  
In menu / editing mode: Press to go back to previous menu.  
In menu / editing mode: Press and hold to go back to idle screen.  
In idle mode: Press and hold to power off the handset.  
In idle mode (when the handset is powered off): Press and hold to power on the handset.

#### 7. ALPHANUMERIC KEYPAD - \* (STAR), # (HASH)

Press to insert a digit / character / \* / #  
1-9 keys in idle mode: Press and hold to dial out pre-stored fast-key memories.  
\* key in idle mode: Press and hold to enable or disable the keypad lock.  
\* key during a call (in Pulse mode): Press to switch to tone mode.  
Press R to access call waiting line (second call) when you hear the signal.  
Press the key again to toggle between your two callers.  
# key in idle mode: Press and hold to turn on / off the # key in idle mode: Press and hold to turn on / off the handset ringer.  
0 key in idle / redialing / number editing mode: Press and hold to insert a pause.  
# key in Call Log mode: Press to review caller's number if applicable.

#### 8. MICROPHONE

**TALK ON/SPEAKERPHONE**  
In idle / redialing mode: Press to make a call. Press again to turn on the speakerphone.  
In Redial list / Call List / Contacts entry: Press to make a call to the selected entry in the list. Press again to turn on the speakerphone.  
During ringing: Press to answer a call. Press again to answer with speakerphone.

#### 10. MENU

In idle mode: Press to access the main menu  
In sub-menu mode: Press to confirm the selection  
During a call: Press to access Intercom/ Phonebook/ Redial List/ Call Log

#### 11. AMPLIFY

During a call: Press to turn on or off the audio boost.

#### 12. LED

Steadily on when audio boost is turned on.  
Flashes when incoming call.


#### 13. EARPIECE

Flashes when incoming call.

### GETTING TO KNOW YOUR PHONE

#### 2.2 Display Icons and Symbols

The screen display gives you information on the current status of the telephone.

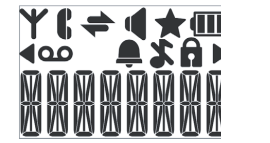

Steady on when the handset is within range of the base. Flashes when the handset is in marginal range of the base. Off when out of range of the base or cannot communicate with the base.

Steady on when a call is in progress. Flashes when there is an incoming call.

On when the speakerphone is turned on. Flashes during intercom ringing.

On when a new call is viewed in the Call Log. Flashes during intercom ringing.

On when the handset ringer is switched off. Steady on when an alarm is set. Flashes when the alarm time has been reached.

On when the keypad is locked. On when you have a new Voice Mail message. (This service is not usually available from Singapore network providers.)

Indicates when there are more characters or numbers in front of those being displayed. Indicates when there are more characters or numbers after those being displayed.

Full battery power level. 2/3 battery power level. 1/3 battery power level.


Flashes when low battery power level is detected, needs charging. Cycle when, battery is charging.

### GETTING TO KNOW YOUR PHONE

#### 2.3 Menu Structure

In idle mode, press <MENU> to go to CONTACTS, the first option in the menu list. Refer to the following for the menu structure.

Press <UP> or <DOWN> to go to other options in the menu list. Press <MENU> to enter a sub-menu or function. Press <CLEAR> to go back to the previous level.

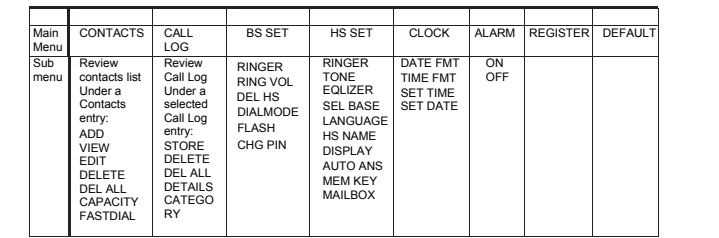

#### 2.4 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the contacts and renaming your handset. In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text with the <UP/DOWN> keys to amend the text entry.
3. Press <CLEAR> to delete the last character.
4. Press and hold <CLEAR> to delete the entire text string.

#### 2.4.1 English Character Set

Key Press	Alphanumeric Editing (For contacts name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	T	2							2
3	Δ	E	Z	3							3
4	H	O	I	4							4
5	K	L	M	5							5
6	N	S	O	6							6
7	P	R	X	7							7
8	T	Y	Q	8							8
9	X	W	D	9							9
0				0							0 (Pause)
#	#	-	-	#	?	?	?	?	?	?	#

#### 2.4.2 Greek Character Set

Key Press	Alphanumeric Editing (For contacts name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	T	2							2
3	Δ	E	Z	3							3
4	H	O	I	4							4
5	K	L	M	5							5
6	N	S	O	6							6
7	P	R	X	7							7
8	T	Y	Q	8							8
9	X	W	D	9							9
0				0							0 (Pause)
#	#	-	-	#	?	?	?	?	?	?	#

#### 2.4.3 Russian Character Set

Key Press	Alphanumeric Editing (For contacts name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	T	2							2
3	Δ	E	Z	3							3
4	H	O	I	4							4
5	K	L	M	5							5
6	N	S	O	6							6
7	P	R	X	7							7
8	T	Y	Q	8							8
9	X	W	D	9							9
0				0							0 (Pause)
#	#	-	-	#	?	?	?	?	?	?	#

#### 2.4.4 English Character Set

1. In idle mode, press <CLEAR> and the registered handset numbers will display.
2. Press <9> to ring to all registered handsets.
- 3.12.3 Transfer an External Call to another handset  
During an external call:
  1. Press <MENU> and <UP/DOWN> to select INTERCOM.
  2. Press <MENU> and <UP/DOWN> to select STORE.
  3. Press <MENU> and then modify the number, if necessary.
  4. Press <MENU> to show RING 1.
  5. Press <UP/DOWN> to browse the ring tone list. The respective ring tone will be played if you browse the ring tone list. (Note: the selected ring tone will only be played if you subscribe to Caller Display and the incoming number matches the stored number.)
  6. Press <MENU> to confirm the selected ring tone and to save the entry.
- 3.10.3 Delete a Redial Number  
1. Follow Steps 1 and 2 in section 3.10.1.  
2. Press <MENU> and <UP/DOWN> to select DELETE.  
3. Press <MENU> to confirm and the entry will be deleted.
- 3.10.4 Delete all Redial List entries  
1. Follow Steps 1 and 2 in section 3.10.1.  
2. Press <MENU> and <UP/DOWN> to select DELETE.  
3. Press <MENU> to confirm and the entry will be deleted.
- 3.7 Mute a Call  
You can talk to someone nearby without letting the caller hear you during a call. During a call: Press <CLEAR> to mute the microphone and "MUTED" will display on the screen. Your caller cannot hear you. Press <UP/DOWN> to unmute the microphone.
- 3.8 To Turn the Handset Ringer Off  
In idle mode, press and hold the <#> key to turn off the handset ringer. The ringer off icon will be displayed. When the ringer is off, press and hold the <#> key to turn on the handset ringer. The ringer off icon will turn off.
- 3.6 Adjust Earpiece and Handfree Volume  
There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of the earpiece and handfree volumes. During a call: Press <UP/DOWN> to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.
- 3.1 Turn on the Keypad Lock  
In idle mode, press and hold the <#> key to turn on the keypad lock. The keypad lock icon will be displayed. Note: You can still use the <TALK ON> key to answer a call when the handset is ringing. In keypad lock mode, press and hold the <#> key to turn off the keypad lock. The keypad lock icon will turn off.
- 3.10 Redial the last number  
You can redial any of the 5 last numbers called. If you have stored a name in the phonebook to go




**5 CALLER DISPLAY (NETWORK DEPENDENT)**

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call Log. The number will be shown the screen when the phone is ringing. If the number matches with one of the entries in your Contacts be list, the caller's name stored in the Contact list will be displayed alternately with the number and the handset will ring with the ring tone associated with that contacts entry.

If the call is from someone who withheld their number, e.g. by dialling 141, WITHHELD will display. If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, OUT AREA will display. If you've got new Caller Display records, the handsets will display X CALLS in standby mode, where X is the number of new calls. The new calls indication will remain until all the new call records have been viewed, and each handset has to clear its own new calls.

**5.1 View the Call Log**

All received calls are saved in the call log with the latest call at the top of the list. When the call log is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a  at the top of the display.

- Press <UP> to access the call list.
- Press <MENU> then <UP/DOWN> to show CALL LOG and then <MENU> to select it.
- Press <UP/DOWN> to select the desired entry.
- Press <#> to view the caller's number if applicable.
- Press <MENU> then <UP/DOWN> to show DETAILS, and then <MENU> to display the date of the call. Press <#> to see the time of the call, and press <MENU> to return to the name or number.

**5.2 Store a Call Log Number into the Contacts**

- Follow Steps 1 and 2 in Section 5.1.
- Press <MENU> and <UP/DOWN> to show STORE.
- Press <MENU> and then to enter the name.
- Press <MENU> and the selected call log number is displayed.
- Edit the number if necessary.
- Press <MENU> and <UP/DOWN> to select the ringtone.
- Press <MENU> to store the entry in the Contacts list, and return to the Call Log.

**5.3 Delete an entry from the Call Log**

- Follow Steps 1 and 2 in Section 5.1.
- Press <MENU> and <UP/DOWN> to show DELETE.
- Press <MENU> to confirm.

**5.4 Delete all Call Log entries**

- Follow Steps 1 and 2 in Section 5.1.
- Press <MENU> and <UP/DOWN> to show DEL ALL.
- Press <MENU> to display CONFIRM?
- Press <MENU> to confirm. All entries will be deleted and the display will show EMPTY.

**5.5 Call Log Category**

You can set the handset to record all received calls or only missed calls in the Call Log.

- Follow Steps 1 and 2 in Section 5.1.
- Press <MENU> and <UP/DOWN> to show CATEGORY.
- Press <MENU> and then <UP/DOWN> to show ALL or MISSED.
- Press <MENU> to confirm the chosen option.

18

**6.4.5 Change the Recall(Flash) Time**

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are SHORT (the default value of 100ms), MID (300ms) or LONG (600ms).

- Press <MENU> and <UP/DOWN> to select BS SET.
- Press <MENU> and <UP/DOWN> to select FLASH.
- Press <MENU> and <UP/DOWN> to select your desired recall(flash) time (SHORT, MID, LONG).
- Press <MENU> to confirm.

**6.4.6 Change the SystemPIN Code**

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press <MENU> and <UP/DOWN> to select BS SET.
- Press <MENU> and <UP/DOWN> to select CHG PIN.
- Press <MENU> and the display shows OLD PIN?
- Press <MENU> and the enter the old system PIN.
- Press <MENU>, the display shows NEW PIN?, press <MENU> and enter your new 4-digit system PIN.
- Press <MENU>, the display shows CONFIRM?, press <MENU> and enter your new 4-digit system PIN again.

Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step5, you must enter your new PIN at step 5 again.

- Press <MENU> to confirm.

24

**6 PHONE SETTINGS**

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

**6.1 Clock Settings**

If you subscribe to the Caller Display service, the time and date settings will be updated automatically when you receive an incoming call, although you may need to set the correct year.

**6.1.1 Change the Date Format**

- Press <MENU> and <UP/DOWN> to show CLOCK.
- Press <MENU> and <UP/DOWN> to select DATE FMT.
- Press <MENU> and then <UP/DOWN> to choose a date format of either DDDMMYY or MMDDYY.
- Press <MENU> to confirm your choice.

**6.1.2 Change the Time Format**

- Press <MENU> and <UP/DOWN> to show CLOCK.
- Press <MENU> and <UP/DOWN> to select TIME FMT.
- Press <MENU> and then <UP/DOWN> to choose a time format of either 12HR or 24HR.
- Press <MENU> to confirm your choice.

**6.1.3 Set the Time**

- Press <MENU> and <UP/DOWN> to show CLOCK.
- Press <MENU> and <UP/DOWN> to select SET TIME.
- Press <MENU> and then to enter the time information in 24 hour format.
- Press <MENU> to confirm your setting.

Note: If time has been set before, the current time will display, otherwise, "HHMM" will display.

**6.1.4 Set the Date**

- Press <MENU> and <UP/DOWN> to show CLOCK.
- Press <MENU> and <UP/DOWN> to select SET DATE.
- Press <MENU> to enter the date information in the format you set in section 7.1.1.
- Press <MENU> to confirm your setting.

Note: If date has been set before, the current date will display, otherwise, "DDMMYY" will display.

19


**6.5 Registration**

**IMPORTANT:** When you purchase a ADT3805 system, all handsets are already registered to your base, so you do not need to register them.

Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to 5 handsets per base unit, with each handset's number (1 to 5) shown on its display.

Each handset can be registered to up to 4 different bases, but can only operate with one base at a time. (See 6.3.6 Select Base, for how to change between bases.)

- Press and hold <PAGE>  key on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press <MENU> and <UP/DOWN> to select REGISTER
- Press <MENU> to display BASE 1.
- Press <UP/DOWN> to select which base number you want to use. (Note: a \* will be shown next to any base numbers the handset is already registered with, and if selected the new registration will overwrite it.)
- Press <MENU> to display PIN?.....
- Enter the 4-digit system PIN (default is 0000).
- Press <MENU> to confirm, and the display will show SEARCH'G.

If the handset registration is successful, the display will change to standby mode with the new handset number and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. If the handset registration is unsuccessful, the <antenna icon> will still flash.


**6.6 Reset Your Phone**


You can reset your phone to the default settings. After reset, all your personal settings including your PIN numbers, the redial list and call log entries will be deleted, but but your phonebook remains unchanged, although the direct memory keys (M1-3) and the Mailbox (key 1) memory will be deleted.

- Press <MENU> and <UP/DOWN> to select DEFAULT.
- Press <MENU> and you are requested to enter the 4-digit PIN (default = 0000)
- Enter the 4-digit system PIN.
- Press <MENU> to show CONFIRM?
- Press <MENU> again to confirm the reset.


25

**6.2 Alarm Settings**

You can set an alarm time on this phone. When an alarm is set, the <  > is shown on the handset display.

When the alarm time is reached, the <  > and "ALARM ON " flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of 7 minutes. You can also press and hold <TALK OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to OFF, the alarm still sounds at VOLUME 1 level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the <  > and "ALARM ON " will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds <TALK OFF> to disable the alarm, the display will revert to the call duration
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

**6.2.1 Turn on/off the Alarm**

- Press <MENU> and <UP/DOWN> to select ALARM.
- Press <MENU> and <UP/DOWN> to show ON or OFF.
- Press <MENU> to confirm your choice.
- Press <MENU> to confirm your setting.

**6.2.2 Set the Alarm Time (if the Alarm is set to ON)**

- Follow Steps 1 to 4 in Section 6.2.1.
- Enter the alarm time in 24 hour format.
- Press <MENU> to display SNOOZE.
- Press <MENU> and <UP/DOWN> to show ON or OFF.
- Press <MENU> to confirm your setting.

**6.3 Handset Settings****7.3.1 Set the Ringer Melody for Internal Calls**

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select RINGER.
- Press <MENU> and <UP/DOWN> to select INT RING.
- Press <MENU> and <UP/DOWN> to select the ringtone you want to hear for internal calls.

Note: There are 10 ring tones, and each will play as you step through the list.

**6.3.2 Set the Ringer Melody for External Calls**

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select RINGER.
- Press <MENU> and <UP/DOWN> to select EXT RING.
- Press <MENU> and <UP/DOWN> to select the ringtone you want to hear for external calls.

Note: There are 10 ring tones, and each will play as you step through the list.

- Press <MENU> to confirm.

20

**7 TROUBLESHOOTING**

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Cause	Solutions
No dialling tone when pressing <TALK ON>SPEAKERPHONE> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord.	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the mains adapter is firmly plugged into the mains socket and into the base station. c. Wait until the line is unoccupied. d. Use the original line cord supplied.
When connected to a PBX, no and/or wrong connection after dialling.	Dialling prefix is needed.	Insert the dialling prefix
"SEARCH'G" is displayed.	a. Base station out of range. b. Base station not connected to mains. Service not activated or wrong operator or wrong dialling mode setting.	a. Reduce the range. b. Connect base station to mains. Check your Subscription with network or change the dial mode. Recharge battery
The call does not work.	Service not activated or wrong operator or wrong dialling mode setting.	Check your Subscription with network or change the dial mode.
No display.	Empty battery	Recharge battery


If the fault persists:

- Disconnect all other phones connected to the same telephone line and try to make a call.
- If the call now works the fault is with the other phones.
- Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket. If this works the line is ok.
- If the call does not work, and you are using a two-way socket adapter, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

This telephone is not equipped with a grounding function! Therefore, some of the functions may be limited when used in PBX systems.

26

**6.3.3 Set the Ringer Volume**

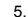- Press <MENU> and <UP/DOWN> to select HS SET.
  - Press <MENU> and <UP/DOWN> to select RINGER.
  - Press <MENU> and <UP/DOWN> to select RING VOL
  - Press <MENU> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including OFF).
- Note: The respective ringer volume will be played during your selection. If OFF is selected, the ringer off icon:  will be displayed after confirming.

**6.3.4 Set Alert Tones**

Three different alert tones are set on by default, but can be turned off, if desired. Key Tone - a single beep is emitted when you press a key.

Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select KEY TONE / LOW BATT / OUTRANGE
- Press <MENU> and <UP/DOWN> to turn tones ON or OFF.
- Press <MENU> to confirm.

**6.3.5 Set the Equalizer**

The phone has three different frequency range filters (NORMAL, BASS, TREBLE) that you can set, to adjust the sound in the earpiece to suit your preference.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select EQLZER.
- Press <MENU> and <UP/DOWN> to select NORMAL, BASS or TREBLE.
- Press <MENU> to confirm the setting.

**6.3.6 Select Base**

If you have registered the handset to more than one base, you can select any one of them to use with your handset. Note: you can only use the handset with one base at any one time.

- Press <MENU>OK> and <UP/DOWN> to select HS SET.
- Press <MENU>OK> and <UP/DOWN> to select SEL. BASE.
- Press <MENU>OK> and <UP/DOWN> to select the desired base.
- Press <MENU> to confirm>Note: the handset may take a short while to search for the new base.

**6.3.7 Set the Handset Language**

The language used on the handset display may be changed from English, if required.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select LANGUAGE.
- Press <MENU> and <UP/DOWN> to select the desired language.
- Press <MENU> to confirm.

21

**8 DECLARATION OF CONFORMITY**

**Binatone Electronics International Limited**  
Floor 23A, 8 Des Voeux Road West, Hong Kong  
Tel: (852) 2802 7388 Fax: (852) 2802 8138

**Binatone**

**EC Declaration of Conformity**

We the manufacturer / Importer : Binatone Electronics International Limited  
Floor 23A, 8 Des Voeux Road West, Hong Kong  
Tel: (852) 2802 7388 Fax: (852) 2802 8138

Declare our sole responsibility that the following product

Type of equipment: Digital cordless telephone  
Model Name: Binatone BB3805 Series, Speakeasy 3805 Series  
Country of Origin: China  
Brand: Binatone/AEG

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**.  
Assessment of compliance of the product with the requirements relating to the essential requirements according to **Commission regulation (EC) implementing regulation 1275/2008 + amendment 801/2013** and the following standard:

Radio Spectrum: EN 301406: V2.1.1(2009-07);  
EMC: EN 301489-6:V1.4.1(2015-05);  
EN 301489-1:V1.9.2(2014-09);  
EN5022:2010  
EN5024:2010  
EN 61000-3-2: 2014  
EN 61000-3-3: 2013  
Electrical Safety: EN 60950-1:2006 + A11:2009+A1:2010+A12:2011+A2:2013  
Health: EN50360:2001+A1:2012  
EN50385:2002

Manufacturer / Importer

(Signature of authorized person)

22 AUG 2016  
Date

  
Patrick Cheung  
Senior Product Manager

27

**6.3.8 Rename the Handset**

The handset name, displayed in the standby mode (default HS), can be changed to any other name of up to 6 letters.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select HS NAME.
- Press <MENU> and enter the name, of up to 6 letters for your handset.
- Press <MENU> to confirm.

**6.3.9 Choose the Information to be displayed in Idle**

You can choose to display the time or handset name in your idle screen.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select DISPLAY.
- Press <MENU> and <UP/DOWN> to select HS NAME or TIME.
- Press <MENU> to confirm.

**6.3.10 Set the Auto Answer**

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select AUTO ANS.
- Press <MENU> and <UP/DOWN> to turn ON or OFF the auto answer feature.
- Press <MENU> to confirm.

**6.3.11 Set the Direct Memory Keys**

There are three direct memory keys M1, M2 and M3. You can store a number of up to 20 digits into each of these keys and dial them directly from idle mode, by pressing and holding the key for more than 2 seconds.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select MEM KEY.
- Press <MENU> and <UP/DOWN> to select the desired memory key from M1, M2 and M3.
- Press <MENU> to enter a new number or edit the number stored already.
- Press <MENU> to confirm

**6.3.12 Set the Mailbox Number**

You can store a number of up to 20 digits, which can be dialled out directly from idle mode by pressing and holding the digit <1> key for more than 2 seconds. This may be used to store your network voice mail number, such as 1571, for easy access to that service.

- Press <MENU> and <UP/DOWN> to select HS SET.
- Press <MENU> and <UP/DOWN> to select MAILBOX.
- Press <MENU> and then enter a new number or edit the mailbox number.
- Press <MENU> to confirm.

22

**9 WARRANTY AND SERVICE**

The ADT3805 DECT comes with 12 months warranty from the date of purchase shown on your sales receipt. This warranty does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

**Please keep your dated sales receipt. This is your proof of purchase.**

You should also keep the original packaging material.

In the unlikely event that you need to return your ADT3805 DECT to our Repair Centre,

**While the unit is under Warranty or after warranty,**

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your ADT3805 DECT , using the original packaging.
- Bring the complete unit along with the sales receipt to our service centre during operating hours. Our address and operating hours are stated in our website as seen below. Remember to include the mains adapter.
- Service and spare part charges may apply for out of warranty units.

For more Information on Warranty and Product support contact

**Alcom Electronics Pte Ltd-Singapore(Head Office)**

Phone: (65) 68412668

Fax: (65) 68412628

**Alcom Communications Sdn Bhd-Malaysia (Branch Office)**

Phone: (60) 3 7803 7676

Fax: (60) 3 7803 0660

Email: support@alcom.com.sg

Website: [www.alcomonline.com](http://www.alcomonline.com)

Due to continuous product development all features and specifications are subject to change without prior notice.

28