

ALCOM
Quality Lifestyle

SLIM Telephone



AT2322
USER'S MANUAL

GENERAL INTRODUCTION

Thank you for purchasing this telephone. Please read the manual carefully for proper use.

SAFETY INSTRUCTION


When using your telephone, please follow these basic safety precautions to reduce the risk of fire, electric shock or injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the products.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. If service or repair work is required, contact your qualified technician.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.

FUNCTIONS

- Pulse/Tone dialing
- Last number redial
- Mute function
- Pause and flash function
- Ringing volume HI/LO for selection
- Desk/wall mountable
- Incoming ringing LED indicator

LOCATION DESCRIPTION

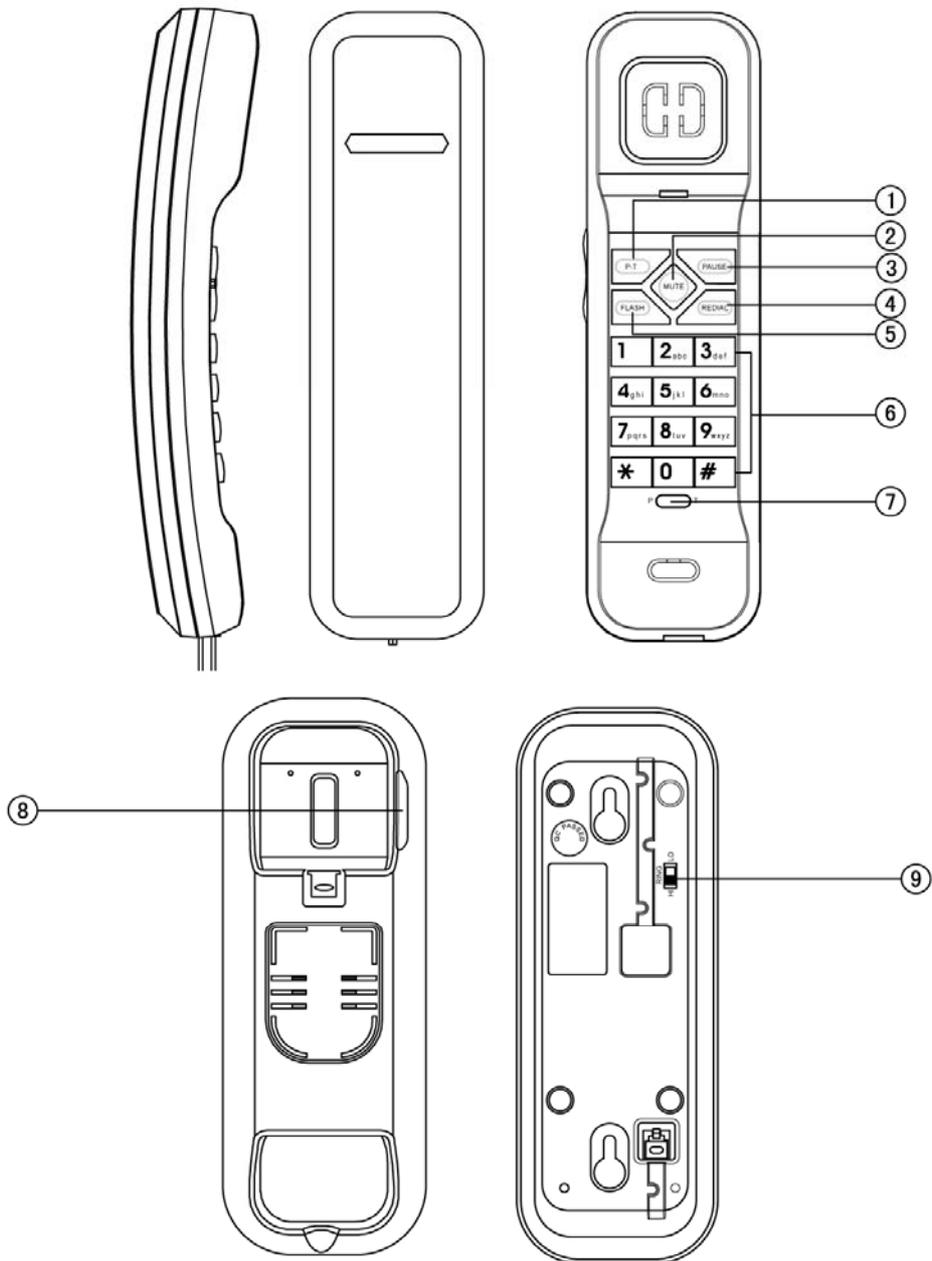

① P-T

② MUTE

③ PAUSE

④ REDIAL

⑤ FLASH

⑥ NUMERICAL KEY

⑦ P/T SWITCH

⑧ RING INDICATOR

⑨ RING(HI-LO) SWITCH

OPERATION**1) Preparation**

- 1.1 Connect the line plugs into phone line jack and the other plug to connect to the wall jack.
- 1.2 Insert the handset coil cord into the phone jack at the bottom.
- 1.3 Set the dial mode according to local network, while **T** refers to Tone dialing and **P** refers to pulse dialing.

2) Receiving

As it rings, pick up the handset from the cradle to answer, and put back the handset to hang up to end the conversation.

3) Dialing

Pick up the handset, dial the desired number when you hear the dialing tone. If you hear a ring back tone, the line has got through. If you hear a busy tone, you could press the hook switch then press **REDIAL** to dial it out again after some time. You could repeat the above process till getting the line through.

4) Redial

Pick up the handset, press the **REDIAL** button, the unit will redial the last number automatically.

5) Pause

The key is used for inserting a 3.6s pause in the dialing process. If you want to dial out from the extension phone, press PABX code (normally "0" or "9") + **PAUSE** + desired number, then you could just press **FLASH** key and then press **REDIAL** to dial out again when the dialed number is busy.

6) Flash

When you dial a number and the line is busy, press **FLASH** key and then press **REDIAL** key to dial it out again.

Press **FLASH** button to answer call waiting line(second call). Press **FLASH** button again to get back to the first line.

7) Pulse/Tone

Slide the mode switch to **T** for tone dialing while **P** for pulse dialing accordingly.

8) Mute

When making a phone call, if you need to talk with someone else beside you and you don't want the other party to hear your conversation, press and hold **MUTE** key. To return to conversation, release the **MUTE** key.

9) Wall Mountable

The phone can place on the Desk or Wall mounted.

Before mounting it on wall, pull out the handset backer near hook switch, and then

insert it again in reverse. So the backer can hold and keep the handset not to drop down.

10) Ringing volume

There are two levels for the ringing volume control: **HI & LO** for selection. If you don't want ringer to be loud during incoming calls, slide the RING switch which is located at the bottom of the unit to **LO** position.

Please note ringer cannot be set to OFF.

11) P-T key function

If use pulse dialing mode, during a conversation, to change the dial mode, for example, to use the special services that need tone dialing mode, press **P-T** key to change the dial mode to TONE temporary, it returns to PULSE dialing model when hang up.

12) Ring indicator

When there is an incoming call the RING Indicator will Flash.

TROUBLESHOOTING

Trouble	Check	Solution
No dial tone	Whether the handset cord or line cord is connected	Connect them properly or change the line cord or handset cord accordingly.
Cannot dial any call but can receive calls	Check if you have chose the correct dialing system required by your Telephone service provider	Choose the correct dialing mode using the P/T switch
Noise	Please check if the line cord or wall plug is moistured.	Replace the Line cord or change the wall socket accordingly.
Ring once only while still can make a call	Please check the line connection ,check if too many phones are connected in the same line, or the wall socket or Tel line cord is moistured.	

Note: Due to continuous product development all features and specifications are subject to change without prior notice

For more Information on Warranty and Product Support in Singapore please call (65) 68412668 or Fax to (65) 68412628.

Email: support@alcom.com.sg

Website: www.alcomonline.com

Please register your warranty online at <http://www.alcomonline.com/warranty.html>