

ALCOM

Quality Lifestyle

APD7100



User's Guide


Part 1

Digital Photo Frame


Safety precautions

Safety Symbols

Make sure to follow the directions below to prevent accidents and damage to the product.

 **Warning:** Failure to follow the accompanying directions may lead to serious injury or death.

1. Insert the power plug correctly until it is firmly in place. Failing to do so, may cause fire.
2. Do not use a damaged power plug, cord or outlet, as this may cause electric shock or fire.
3. Do not touch the power plug with wet hands, as this may cause electric shock.
4. Do not connect more than one appliance to a single outlet, as an overheated outlet may cause fire.
5. Do not use force to pull the power cord. Don't place anything heavy on the power cord, as this may cause electric shock or fire.
6. Make sure to disconnect the power plug from the outlet before moving the product. Make sure to disconnect the connection cables from other devices as well. Moving the product without disconnecting the power cord may damage it while moving, and may cause electric shock or fire.
7. Only use the AC/DC adaptors provided with the photo frame. Details of AC/DC Adaptor listed below:
Model NO. SSA-12W-05 UK 060150F, Input: 100-240V~, 50/60Hz, 0.5A Output: 6V \equiv 1500mA.

 **Attention:** Failure to follow the accompanying directions may lead to minor personal injury or property damage.

1. Hold and pull out the plug by its body when disconnecting it from the outlet, as pulling the plug out by the cord may cause it to be damaged.
Failing to do so, may cause fire, or the product may not turn on normally.
2. Ensure that the power plug is disconnected before cleaning the product.
Failing to do so, may cause electric shock or fire.
3. Do not let water come into contact with or enter the power adapter, as this may cause electric shock or fire.
Do not use the product outdoors in snowy or rainy weather, or near any water. When cleaning the floor with water, avoid any water contact with the power adapter.
4. Do not place the power adapter near a heater, as this may cause fire.
5. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Installation

 **Warning:**

1. When installing the product on a cabinet or shelf, do not let the front end of the product project beyond its front edge. Failing to do so, may cause the product to fall, resulting in a product malfunction or personal injury.
2. Do not place the power cord near a heater, as the power cord may melt, causing electric shock or fire.

3. Do not install the product in a car or a location exposed to oil, smoke, moisture, water, or rainwater. Any contact of these materials with the product may cause electric shock or fire.
4. Disconnect the power plug when there is thunder or lightning. Failing to do so, may cause electric shock or fire.

 **Attention:**

1. Place the product down gently when installing it. Failing to do so may cause product damage or personal injury.
2. Do not install the product in a location easily reached by children. As the product may fall and cause personal injury.
3. Under the environment with radio frequency interference, the unit may generate a tone and it would resume to normal operation when the interference stops.
4. Under electrostatic discharge environment, the device might be malfunctioned. Please power reset the device if it happens.



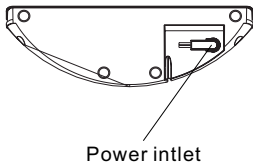
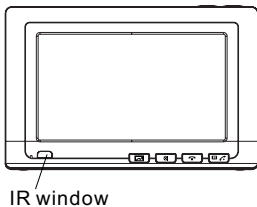
Correct Disposal of this product	
 	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

Photo frame and remote control Layouts

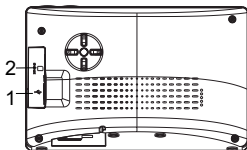
Bottom Panel:



Front Panel:



Back Panel:



1. USB connection jack: Connect to USB drive external memory
2. SD (Secure Digital) / MMC (MultiMedia Card) / MS (Memory Stick) card slot

Note:

1. USB port is only for connection with USB drive. Connection to PC will damage the unit.
2. Performance is not guaranteed when connected with other USB devices like Cell phones, Mp3 player.

Top Panel:

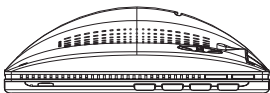










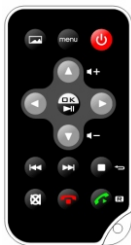















Photo frame Key Descriptions:

	Up /VOL+ key
	Down/ VOL- key
	Left or Previous photo during photo playback
	Right or Next photo during photo playback
menu	Return to Menu Selection Screen
	Stop/ Return
	Ok /Pause
	Shortcut key for immediate photo playback
	Mute
	Phone off
	Phone on or Flash the line

Remote control Key Descriptions:



	Power on/off the unit
	Up /VOL+ key
	Down/ VOL- key
	Left or Previous photo during photo playback
	Right or Next photo during photo playback
	Next picture during photo playback / next page
	Previous picture during photo playback / previous page
menu	Return to Menu Selection Screen
	Stop/ Return
	Ok /Pause
	Shortcut key for immediate photo playback
	Mute the MIC
	Phone off
	Phone on

Basic Operation

1. Power on/off

POWER ON: Plug in the adaptor to the AC outlet, and then insert the DC plug into the photo frame. The LCD panel will light on.

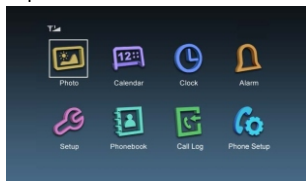
POWER OFF: Pull out the DC plug on the photo frame.

Also can use the **POWER** button on the **REMOTE** to **ON/OFF** the unit.

2. Main Menu Screen

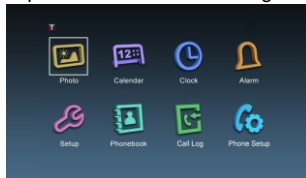
When power is on, the main menu screen will show up. User can press **menu** key at any time to enter the main menu screen.

When the digital photo frame with Base linked:

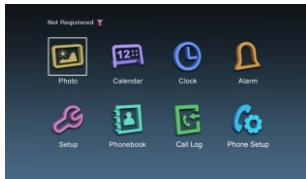


Note: The number “1” indicates the handset number. It can be 1 to 6.

When the digital photo frame is out of range:






When the digital photo frame is not registered:




3. View photo


CAUTION: Please Insert or Remove the MEMORY CARD when the photo frame is switched OFF.

Select [Photo] icon by navigator key and press  (on the photo frame) or  (on the remote control) to enter photo application, or press the  button to enter photo application.

If user set “Auto-play” to “ON”, it will enter the slide show mode automatically; if user set “Auto-play” to “OFF”, it will enter file manager or thumbnail mode. If there are no photos, it will return to main menu.


Photo frame buttons:

 : Return to main menu screen


 : Confirm to play or to pause the picture


 : Previous photo


 : Next photo

 : Stop to play the picture.

Remote control buttons:

 : Return to main menu screen

 : Previous photo / Previous page

 : Next photo / Next page

 : Flip horizontal

 : Flip vertical



: Left rotation



: Right Rotation



: Confirm to play or to pause the picture



: Stop to play the picture

4.Show Calendar and set:

Select [Calendar] icon by navigator key in the main menu and press (on the photo frame) or (on the remote control) to proceed, it will Display Calendar or set and the LCD screen will show as below:



There are three selections, using navigator key and press (On the photo frame) or (on the remote control) to proceed.



- Display: Display the current calendar.
- Set Date: Set the current date using the navigation keys
- Exit: Exit Calendar Application.

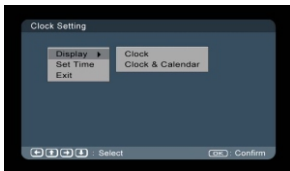
Display screen of calendar



During calendar display screen, user can press ▲ or ▼ button to scroll year and press ◀ or ▶ button to scroll month.

5.Show time and set

Select [Clock] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed, the LCD screen will show as below:



There are three selections:

- Display
- Set Time
- Exit

Display:

- Clock: Display clock only as shown below:



- Clock & Calendar: Display clock with calendar:



Set time:

- User can use navigation keys to change the time.



Note: Time should be set in 24 Hour Format. When power is

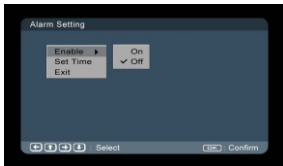
switched OFF using the POWER button CLOCK will still remain running, however if the adaptor is unplugged or switched OFF you have to reset the CLOCK time again.

Exit:

- Exit Clock Application.

6.Alarm Menu

Select [Alarm] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed, the LCD screen will show as below:



There are three selections:

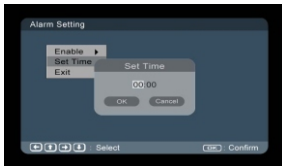
- Enable
- Set Time
- Exit

Enable:

- On: Enable alarm function
- Off: Disable alarm function

Set time:

- User can set the alarm time by the navigation keys:

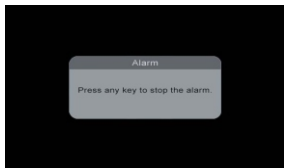


Exit:

- Exit Alarm Application.

When ALARM sounds:



If the alarm is set and the time is reached for the alarm, the polyphonic tone will ring and the following screen will be shown as up:

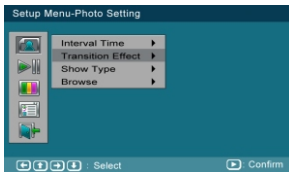


User can press any key to exit the alarm mode and end the alarm tone or it will be off automatically after 5 minutes of continuous alert.






Note: When the photo frame is on a call or during registration, the alarm will defer response.



7.Setup Menu

Select [Setup] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed, the LCD screen will show as below:



There are 5 selections:

-  : Photo Setting
-  : Auto-Play
-  : Display setup
-  : Custom setup
-  : Exit

By navigator key, and press  (on the photo frame) or  (On the remote control), you will setup the functions.






Menu Structure:

1st layer	2nd layer	3rd layer
Photo Setting		
	Interval Time	-5 sec -10 sec -15 sec -30 sec -1 min -3 min -Off
	Transition Effect	-No Effect -Blind Vertical -Blind Horizontal -Colouration Vertical -Colouration Horizontal -Block 1 -Block 2 -Block 3 -Block 4 -Block 5 -Block 6 -Block 7 -Block 8 -Block 9 -Fade In Fade Out -Random
	Show Type	-Fit Screen -Full Screen
	Browse	-Thumbnail -File Manager






Auto-Play		
	Photo	-ON -OFF
Display setup		
	Brightness	-7 ... 0 ...+7
	Contrast	-7 ... 0 ...+7
	Saturation	-7 ... 0 ...+7
Custom setup		
	Language	- English - Francis - Deutch - Italiano - Espanol - Portugues - Nederlands
	Style	- Style1 - Style2 - Style3 - Style4
	Repeat Mode	- Off - One - Folder - All
	Factory default	- Confirmed
Exit		

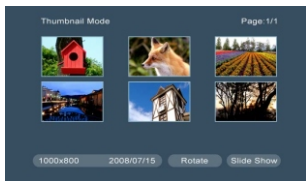
7.1 Photo setting:

- Interval time: The time during playing photos, there are various selections.
- Transition Effect: The format for playing photos. There are 14 effects and totally 16 selections.
- Show Type: The type of photo display. There are 2 selections: full screen and fit screen.
- Browse: The display format for managing photos. There are 2 selections: file manager or thumbnail.



- File Manager Mode: If you set the browse method to file manager, when you are playing photos, press    (on the photo frame) or   (on the remote control), the following screen will be shown. On the left side, the selected photo will be shown:





- Thumbnail: If you set the browse method to thumbnail, when you are playing photos, press    (on the photo frame) or   (on the remote control), the following screen will be shown:



Rotate photos during thumbnail mode:

Step1: Select [Rotate] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step2: Select one photo by navigator key and press  (on the photo frame) or  (on the remote control) to rotate the selected photo.

7.2 Auto-Play setting:

- Photo: If it is set to “ON”, when user select the Photo feature in the main menu, it will enter the slide show mode automatically. If user set it to “OFF”, it will enter thumbnail or file manager mode for user viewing the photo.

7.3 Display Setup:

- Contrast: User can set the contrast of LCD
- Brightness: User can set the brightness of LCD
- Saturation: User can set the saturation of LCD



7.4 Custom setup:

- Language: User can set the language of menu.
- Style: There are 4 selections:
- Repeat Mode: For showing photos.
 - Off: turn off the repeat mode
 - One: repeat playing the selected photos once
 - Folder: repeat all the photos in this file folder
 - All: Repeat all the photos.
- Factory default: All the settings return to default settings.

Exit: Exit the Setup Application.

8.Phonebook Menu

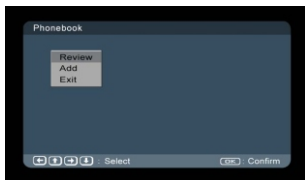
The photo frame can store up to 40 entries in the phonebook with name, number and picture.(Name or Number should not exceed more than 16 characters each.)

Select [Phonebook] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed.

Note:

1. Only JPEG files can be added into the phonebook.
2. Insert external memory with photos to the digital photo frame before adding or editing phonebook. Otherwise, the number cannot be saved.



Screen after entering Phonebook application:

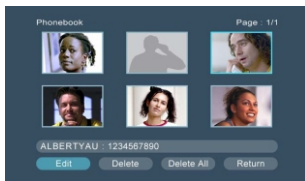


There are three selections:

- Review: review the phonebook record
- Add: add new entry into phonebook
- Exit: return to main menu

8.1 Phonebook Review Menu



Select [Review] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed, the LCD screen will show as below:







There are four selections:



- Edit: edit the selected entry.
- Delete: delete the selected entry.
- Delete All: delete all entries.
- Return: return to Phonebook application screen.

8.1.1 Edit Menu

Step1: Select one entry during phonebook review screen and press  (on the photo frame) or  (on the remote control).



Step2: Select [Edit] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.



Step3: Select digits or characters by navigator key and press  (on the photo frame) or  (on the remote control) to input name or number.



Step4: Select [Save] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Note: Replacing the picture in any entry is not possible.
Please delete the entry and add again with a new picture.



8.1.2 Delete record



Step1: Select one entry during phonebook review screen and press  (on the photo frame) or  (on the remote control).



Step2: Select [Delete] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step3: Select [OK] by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.



8.1.3 Delete All records

Step1: Select one entry during phonebook review screen and press  (on the photo frame) or  (on the remote control).



Step2: Select [Delete All] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.



Step3: Select [OK] by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

8.2 Add phonebook menu



Step1: Select [Add] icon by navigator key and press  (on the photo frame) or  (on the remote control) to

proceed.

Step2: Select digits or characters by navigator key and press  (on the photo frame) or  (on the remote control) to input name or number.



Step3: Select [Save] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step4: Press button  (on the photo frame) or  button (on the remote control) to select one photo.

Step5: Select [Save] icon by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

9.Call log Menu

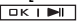 

The photo frame can store up to 30 call logs.

Select [Call Log] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed. The following screen will be shown.



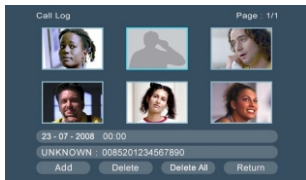
There are four selections:

- All Calls: including all missed and received calls
- Missed calls: not answered calls (including Call-waiting CID*)
- Received calls: answered calls (including Call-waiting CID*)
- Exit

The photo frame can't save the logs for calls without CID*. If user select [All Calls] or [Missed calls], [Received calls] and press  (on the photo frame) or  (on the remote control), the LCD screen will show like below.

NOTE: Caller ID, Call Waiting Caller ID and Call Waiting are



network features and must be subscribed in order to function. Above functions may not be possible if you link the PHOTO FRAME to another BASE UNIT of a different manufacturer.







There are four selections:



- Add: save the call log to phonebook
- Delete: delete the selected call log
- Delete All: delete all call logs
- Return: return to Call log screen.



9.1 Add call log to phonebook

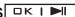 

Step1: Select one log during call log review screen and press  (on the photo frame) or  (on the remote control) during call log review screen.

Step2: Select [Add] by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.



Step3: Select digits or characters by navigator key and press  (on the photo frame) or  (on the remote control) to input number or name.



Step4: Select [Save] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.



Step5: Select one photo by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step6: Select [Save] icon by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.



9.2 Delete one call log



Step1: Select one log during call log review screen and press  (on the photo frame) or  (on the remote control) during call log review screen.



Step2: Select [Delete] icon by navigator key and press  (On the photo frame) or  (on the remote control) to proceed.

Step3: Select [OK] by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

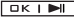 

9.3 Delete All call logs

Step1: Select one log during call log review screen and press  (on the photo frame) or  (on the remote control) during call log review screen.

Step2: Select [Delete All] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step3: Select [OK] by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

10. Phone Setup Menu



Select [Phone Setup] icon by navigator key in the main menu and press  (on the photo frame) or  (on the remote control) to proceed.



There are four selections;

- Registration: link with cordless system
- Ringer Pattern: select ringer pattern
- Ringer Loudness: select current loudness
- Exit: Return to main menu.






10.1 Registration

Step1: Select [Registration] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step2: Select digits by navigator key and press  (on the photo frame) or  (on the remote control) to input PIN.



Note: The default PIN is “0000” and the PIN code must be 4 digits.



Step3: Press and hold  the key on the base for about 15 seconds.

Step4: Select [Save] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed, the LCD screen will show “Searching...”



If the DPF registries succeed, the LCD screen will show “OK”.

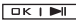 

10.2 Ringer Pattern

Step1: Select [Ringer Pattern] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step2: Select desired ring pattern by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

10.3 Ringer Loudness

Step1: Select [Ringer Loudness] icon by navigator key and press  (on the photo frame) or  (on the remote control) to proceed.

Step2: Select desired ring loudness by navigator key and press  (on the photo frame) or  (on the remote control) to confirm.

11.Operation about incoming call

11.1 LCD display during a call

The photo frame will stop any existing operations during an incoming ring, the photo frame will return to its previous operation after the call is ended.

Case 1: For an incoming call if the number matches with the phonebook, the displayed name will be the phonebook name instead of the caller ID name*. The LCD screen will show as below.

NOTE for CID name : Caller ID name information from the operator is network dependent and is not available in all countries. Please check with your network provider for availability of this service. However name will be displayed if incoming number is matched with your phone book entry if any.



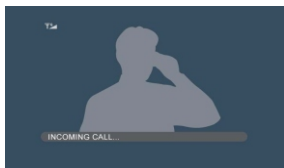
Case 2: For an incoming call if the number does not match with the phonebook, the unknown picture and the CID name* will show as below.



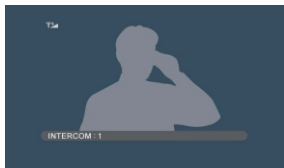
Case 3: For an incoming call if the caller ID name is absent or somehow unavailable, the LCD will show as below.





Case 4: If there is an external call without Caller ID, the LCD will show as below.





Case 5: If there is an internal call, the LCD will show as below.



11.2 Answering call

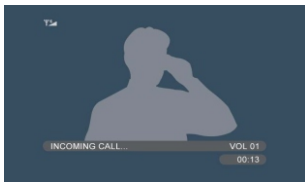
If there is an external call, user can press  (on the photo frame) or  (on the remote control) to answer the call, the LCD screen will show as below.




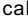 


User can press  (on the photo frame) or  (on the remote control) to mute the MIC, the LCD screen will show as below:



If there is an external call without CID, after answering the call, the LCD screen will show as below.



User can press  or  to adjust the speakerphone volume during a call, and can press  (on the photo frame) or  (on the remote control) to end the call.



11.3 Call Transfer



User can transfer an external call from a handset to the photo frame. When the handset initiates the transfer, the LCD screen will show as INTERCOM: 1.

Note: The photo frame can't initiate a call transfer. This function may not work when used with other base and handset.

11.4 Call Waiting*

If there is another incoming call while you are talking on the phone, the LCD will show the information of the second call.

1. User can press  (on the photo frame) or  (on the remote control) to answer the second call, and the first call will be on hold.

2. User can press  (on the photo frame) or  (on the remote control) swap caller1 and caller2.

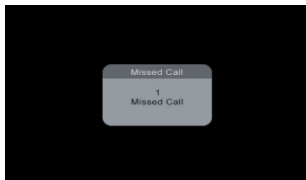
Note: Call Waiting is a network dependent feature. Please check with your service provider for availability of this service and subscribe if necessary.



For the call-log handling in call-waiting case:

- Unanswered the second call: logged in missed call list
- Answered the second call: logged in received call list
- Calls without CID will not be logged

11.5 Missed calls Display

If there are missed calls, the following screen will be shown.





User can press any key (except ) to return the main menu, if user press  , the unit will power off.

Two types of memory inside photo frame:

- SDRAM for program running = 64Mbits;
- Flash for storing photos in Phonebook = 32Mbits.

Troubleshooting Guide

PROBLEMS	CHECK ITEM	SOLUTIONS
The digital photo frame can't power on.	Is the power plug inserted properly?	Insert the power plug properly.
Nothing happens even if you operate the photo frame	_____	Unplug the power plug and insert the power plug again.
Nothing happens even if you operate the photo frame with the remote control	_____	Move closer to the digital photo frame. Replace a new battery of remote control.
No images on the screen.	Is the power plug inserted properly?	Insert the power plug properly.
	Is a memory card inserted properly?	Insert a memory card properly.
	Does the digital photo frame support the file format?	A file that is not compatible with the digital photo frame may not be able to be displayed.
Panel too dark	Check the setting whether set a lower brightness or set a lower contrast?	Reset the brightness or contrast to level 0.

<p>Can't add record to phonebook.</p>	<p>Is a memory card inserted properly? Is there no JPEG file in the memory card?</p>	<p>Insert a memory card properly. Copy some JPEG files to the memory card from the computer or other devices.</p>
<p>The LCD display “” The LCD display “Not Registered ”</p>	<p>Is the digital photo frame outside the base station range? Is the digital photo frame not registered? Does the base station not work?</p>	<p>Move closer to the base station. Register the digital photo frame. Unplug and then plug the power adapter to the power outlet and the other end into the power jack on base bottom.</p>
<p>Can not registration with the base.</p>	<p>Is the digital photo frame and base station prepare for registration?</p>	<p>Unplug and then plug in the power adapter and re-enter into the registration mode.</p>

Part 2

Cordless Phone



CAUTION:

Rechargeable batteries are included with this DECT phone. Never use non-rechargeable batteries! Use of improper batteries will void the warranty and risk the danger of explosion.

Introduction

Important Safety Notes

Please observe the following to ensure reliable operation of the telephone:

- Read this manual thoroughly and observe the operating instructions and information provided.
- Place the base station on a non-slip surface and lay the connection cables so they cannot be the source of an accident.
- Do not expose the equipment to extreme temperatures or high relative humidity and protect it from direct sunlight and dusty conditions.
- Clean the equipment with a soft, damp cloth. Do not use any solvents or aggressive cleaning agents.
- Only connect approved accessories.
- Only use the power plug supplied.
- Never open the unit. Opening the unit annuls claims under the terms of guarantee and exposes the person to the risk of an electric shock.
- Repairs to defective units should only be carried out by service centers recommended by the sales outlet.
- We recommend removing the batteries if the equipment is not to be used for longer periods.
- Only replace the batteries with types recommended by us. Dispose of defective batteries according to the applicable local laws (not in household waste). We assume no liability for damage caused by using the equipment for unintended purposes.

Exemption from Liability

We cannot guarantee the information which relates to the technical properties or that contained in this document is correct. The product and its accessories described in this document are subject to constant improvement and further development. For this reason, we reserve the right to

modify components, accessories, technical specifications and related documentation of the product described herein without notification.

Intended Use

This telephone is designed for communicating within a telephone network. Any other use is considered unintended use. Unauthorized modifications or reconstruction not described in this manual is not permitted.

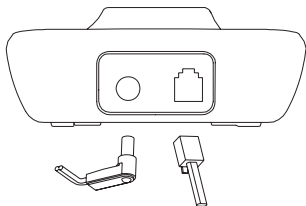
Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in User's Guide.
- Keep batteries out of children.
- Remove batteries if storing over 30 days.

Connecting the Base Station and Power Plug

Connecting the plugs to the corresponding sockets in the base station (they can not be connected incorrectly because the sockets and plugs are designed prevent reverse poling). Lay the cable under the telephone to the rear. Plug the telephone line in the telephone connection socket. Insert the power plug at the other end in the power outlet. The base station is now ready to operate.

Only use the connection cable supplied.



AC power outlet

Phone jack

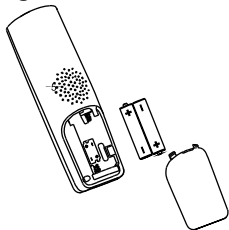


CAUTION:

Plug the adapter to the socket outlet that near the equipment and shall be easily accessible. Only use the power supplies listed in the user instructions. Using other power supplies may damage the unit.

Getting Started

Install and Charge the Batteries



Insert two pieces rechargeable AAA batteries in the compartment, ensuring correct polarity and close the compartment.

- Please wait for 30 seconds after removing the old batteries when change and install a new pair battery.
- Place the handset in the base station to charge for 16 hours prior for first use. If you don't properly charge the phone, battery performance will be compromised.
- Use only with provided batteries.

⚠Warning: The handset will not work and may be damage if wrong batteries are used or inserted incorrectly.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instruction. Use only the batteries listed in user-instruction for recycling in your country..

If batteries are empty, handset LCD will not display and the handset will not respond to any key. Handset is then required to put back on Base Station / Charger cradle to charge. If handset is not charged full before use, handset may emit battery low alert tone and battery level indicator will show empty.

Feature List

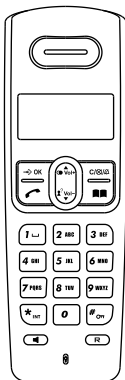
1. Comfortable digital cordless phone with DECT Standards
2. 25 Names and number phone book
3. Caller ID* and Caller ID on Call Waiting
4. Incoming 20 name/number call log
5. Multi-language menu
6. 10 Ringtone melodies
7. Ringer on/off
8. 10 Last number redial
9. 5 level ring volume
10. Real time clock display
11. Handset can be named
12. Automatic call answering
13. Key input tone on/off
14. Keypad lock
15. Teleconference+
16. Internal free communication between handsets+
17. Battery status icon low battery warning
18. Up to 100 hours standby
19. Up to 10 hours continuous talk time
20. Out of range warning
21. Recall/Hold
22. Speakerphone
23. Tone and pulse dialing


 
 





 

+ More than one handset require

 
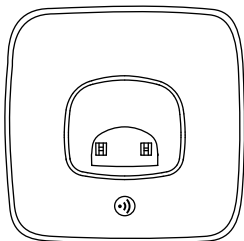
* Subscription may be required. Please contact your network provider.

DECT: Digitally Enhanced Cordless Telephone Standard for Cordless telephones.

Handset and Base Layouts















 Vol+	Redial / Up / Increase volume key
 Vol-	Caller ID/Down/ Decrease volume key
 OK	Menu / OK key
 C/⊗/⊗	Cancel / Mute/ Ring off key
 R	Flash key
	Phone book key
	Talk on/ Off key
 * _{INT}	Asterisk /INT key
 # _{ON}	Hash /Keypad lock key
	Speaker Key



LCD Display






Icon	Description
	Aerial icon
	Phone icon
	Key lock icon
	No ring icon
	Microphone mute icon
INT	Intercom call indicator




	Battery level indicator
	Phonebook icon
	Menu icon
	Voice mail waiting indicator (VMWI icon)
	Caller ID icon
	Alarm icon
	Speaker icon

Basic Operation

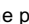 
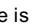 
Make a Call

1. Press the  or  key, wait for a dial tone, then dial the desired number.
2. After finishing the conversation, press  key or place the cordless handset into the charger.
The talk timer will be shown for about 2 seconds before return to idle mode.

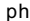 
Pre-dialling




1. When the handset is in idle mode, dial the desired number.
2. Press **C/⊗/B** key to cancel the wrong digit, dial the correct one again.
3. Press the  or  key, the number will be automatically dialled out.
4. After finishing the conversation, press  key or place the cordless handset into the charger.
The talk timer will be shown for about 2 seconds before return to idle mode.

Adjust the Receiver or Speaker Volume



While the phone is in talk mode, press  or  key on the handset to adjust the receiver or speaker volume of the handset. There are 5 possible volume selections for handset speaker and receiver. The display will show the current volume level during adjusting.

Answer a Call


When the phone rings, the icon  will flash and the LCD on the handset will show "CALL". If you have subscribed to Caller ID service from your local telephone company, the incoming call information will be shown.

1. Press the  or  key to answer a call.
2. After finishing the conversation, press  key place the cordless handset into the charger.


Auto Answer

If you set on the "AUTO TALK", just need to pick up the cordless handset from the charger to answer the call directly, needn't press  or  key.






Handset Speaker Phone

Press  key to activate or deactivate the handset speaker.

Dialing from the Phone Book

Press  button when in standby mode, the first entry in the phone book appears.



Note: If there is no record in phone book, "PB EMPTY" information will display

1. Press  or  key to select the required record from the phone book.
2. Press  or  key to dial the number.
3. After finishing the conversation, press  key or place the cordless handset into the charger to terminate the call.

Intercom

You can make an intercom between any two handsets (if

you have more than one handset).

1. When the handset is in idle mode, press and hold ***_{INT}** key, "INT-NUMBER?" will be shown, dial the called handset number to call.
2. The called handset will ring and the LCD will show the calling handset's name and number.
3. Press  or  key in the called handset to answer.

Call Transfer

The function allows you to transfer an external call from a handset to another handset.

1. When the caller on line, press and hold ***_{INT}** key on the calling unit and dial the handset number for transfer. The line will be put on hold.
2. After the called unit answers the call, the intercom will begin between the two handsets.
3. If you want to transfer the call to the called unit, end the call at the calling unit. The call will be automatically transferred to the called unit.

Note: If the called unit doesn't answer the intercom call within 30 seconds, the calling unit will return to the talk mode with the caller.

Call Waiting

If you have subscribed to the service of CID on Call waiting, the telephone will show the phone number of another incoming call while you are talking on the phone.

1. Press **R** key to put the current call on hold and talk with the second caller.
2. Subsequent presses of **R** key will toggle you between these 2 callers.

Caller information of this second call will be stored in the call log.

Three-way Conversation

You may have a 3-way conversation using the intercom and external line.

1. When the caller on line, press and hold ***_{INT}** key on the calling unit and dial the handsets number. The line will be put on hold.
2. After the called unit answers the call, the intercom will begin between the two handsets.
3. Press **→/OK** key on the handset to enter menu, then press **▲Vol+** or **▼Vol-** key to select "CONFERENCE", press **→/OK** key on the handset to confirm. The three-way conference will begin between the two handsets and the caller.

Note: Only the calling unit can operate the "CONFERENCE".

Muting the Ringer volume

Press and hold **C/⊗/⊗** key in idle mode to activate or deactivate the handset Ringer. The **⊗** icon turns on or off.

Muting the Microphone

Press **C/⊗/⊗** key can switch the microphone on or off during a call. The **⊗** icon turns on or off.

Paging the Handset

If a handset has been misplaced, it is possible to call all the handsets.

Short press **Page** key on the base to station.

To stop the page call:

Short press any key on the handset or press **page** key briefly on the base.

Switching the Key Lock On/Off

Press and hold **#_{ON}** key to activate or deactivate the key lock. The **ON** icon turns on or off.

Redial Function

The last 10 numbers you dialed out will be separately stored in handset redial memory.

Review and Dial Redial Record

1. When the handset is in idle mode, press **▲Vol+** key to

display the last redial record. If the redial record is empty, "EMPTY" will be shown.

2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select the desired redial number.
3. Press \hookrightarrow or \blacktriangleleft key, the telephone number is automatically dialed out.

Save Redial Number

1. When the handset is in idle mode, press \blacktriangle Vol+ key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select the desired redial number.
3. Press \rightarrow /OK key to enter menu, press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "SAVE NUMBER", press \rightarrow /OK key on the handset, the selected number will be shown, press \rightarrow /OK key, "ENTER NAME" will be shown and input the desired name. You must input the name, otherwise the record can't be saved.
4. Press \rightarrow /OK key to save.

Delete a Single Redial Record

1. When the cordless handset is in idle mode, press \blacktriangle Vol+ key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select the desired redial number.
3. Press \rightarrow /OK key to enter menu, press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "DELETE?", press \rightarrow /OK key, "CONFIRM?" will be shown.
4. Press \rightarrow /OK key to confirm.

Delete All Redial Records

1. When the handset is in idle mode, press \blacktriangle Vol+ key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select the desired redial number.
3. Press \rightarrow /OK key to enter menu, press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "DELETE ALL?", press \rightarrow /OK key, "CONFIRM?" will be shown.
4. Press \rightarrow /OK key to confirm.

Note: In the redial function menu, If you want to return to the redial list, press C/ⓧ/Ⓝ key.

Caller ID Service

The caller's information will be displayed and recorded if you have subscribed to Caller ID service from your local telephone company.

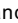 
When the telephone rings, the caller's information will be displayed on the handset LCD display. This information includes the phone number and name (if supported). The handset can store up to 20 calls for later review (up to 16 digits and 16 characters for each record). When the memory is full, a new call automatically replaces the oldest call in the memory.


Note:

If the caller's information includes Date/Time, the Date/Time will be stored with the record.


If the caller number is same as one of phonebook memory, the matched name stored in the phonebook memory will be displayed.


The handset will prompt user if there is unanswered call.

When the handset is in idle mode, “?” will be displayed prior to other display information.


If you reviewed all the missed calls from handset, the display “?” will be disappeared.



Note:

1. If you reviewed all the missed calls from one handset, the display “?” will still show on other handsets.

2. Press  INT key to toggle the display between name and number.


Review Caller ID Record

1. When the handset is in idle mode, press  key to display the information for the last call received.

2. Press  or  key to review all call records.

3. When you scroll to the end, “--(GO BACK)--” will be shown.


Note:



 
 



 


 
1. The “?” icon will turn on if the call is a missed call.

2. “EMPTY” will be displayed for 2 seconds and return to idle mode if you have not received any call.

Edit and Dial Call Record


 
 

 

 
 

You can edit the call record so as to dial back.

1. When the handset is in idle mode, press  key.


 
 
 


 

2. Press  or  key to select the desired record.
3. Press  key to enter menu.
4. Press  or  key to select "SELECT", press  key.
5. Press  or  key to select the desired location and enter the number. To delete a digit before the cursor, press  Key.
6. After editing, press  or  key to dial out the edited number.

Note: you may edit the number and make the call, but the edited number cannot be saved in this option.


 
 
 


Save Call Record

1. When the handset is in idle mode, press  key.
2. Press  or  key to select the desired record.
3. Press  key to enter menu.
4. Press  or  key to select "SAVE NUMBER", press  key. The selected number will be shown, press  key, "ENTER NAME" will be shown and input the desired name. You must input the name, otherwise the record can't be saved.
5. Press  key to save.

Delete a Single Call Record

1. When the handset is in idle mode, press  key.
2. Press  or  key to select the desired record.
3. Press  key to enter menu.
4. Press  or  key to select "DELETE?", press  key, "CONFIRM?" will be shown.
5. Press  key to confirm.

Delete All Call Record

1. When the handset is in idle mode, press  key.
2. Press  or  key to select the desired record.
3. Press  key to enter menu.
4. Press  or  key to select "DELETE ALL?", Press key, "CONFIRM?" will be shown.
5. Press key to confirm.

Phone Book

The telephone can store up to 25 entries in the phone book with name and call number. When the function is supported by the telephone provider, the handset displays the name of the caller (when stored in the phone book).

Store Entries

1. Press **■** key to access phone book memory.
2. Press **→/OK** key to access phone book menu.
3. Press **▲Vol+** or **▼Vol-** key to select ADD NEW and press **→/OK** Key.
4. Enter number (max. 16 digits) and press **→/OK** key when finished
5. Enter name (max. 16 characters) and press **→/OK** key when finished.

Note:

1. When the capacity is full, MEMORY FULL will display.
2. Any incorrect input can be deleted by pressing **C/⊗/⊗** key.

Select Entries

Press **■** key to access phone book memory.

1. Press **▲Vol+** or **▼Vol-** key to scroll.
2. Press **→/OK** key to select a desired entry, and then press **▲Vol+** or **▼Vol-** to select the submenu "SELECT".
3. Press **→/OK** key to select the telephone number, you may edit the number and make the call, but the edited number cannot be saved in this option.

Edit Entries

Press **■** key to access phone book memory.

1. Press **▲Vol+** or **▼Vol-** key to scroll.
2. Press **→/OK** key to select a desired entry, and then press **▲Vol+** or **▼Vol-** to select the submenu "EDIT".
3. Press **→/OK** to start Number edition and press **→/OK** key again to start Name edition.
4. Press **→/OK** key to confirm.

Note: Press **C/⊗/⊗** key to delete any incorrect input.

Delete Entries

Press **■** **■** key to access phone book memory.

1. Press **⬆**Vol+ or **⬇**Vol- key to scroll.
2. Press **→/OK** key to select a desired entry, and then press **⬆**Vol+ or **⬇**Vol- to select the submenu "DELETE? "
3. Press **→/OK** key to delete the entry.
4. Press **→/OK** key again to confirm.

Delete All Entries

Press **■** **■** key to access phone book memory.

1. Press **⬆**Vol+ or **⬇**Vol- key to scroll.
2. Press **→/OK** key to select a desired entry, and then press **⬆**Vol+ or **⬇**Vol- to select the submenu "DELETE ALL?"
3. Press **→/OK** key to delete the entry.
4. Press **→/OK** key again to confirm.

Menu Operation

Handset Setting

Ring Melody

You may select one of the 10 available ringer tones for your incoming calls alert tone.

1. Press **→/OK** key.
2. Press **⬆**Vol+ or **⬇**Vol- key to select "SETUP HS" and press **→/OK** key.
3. Press **⬆**Vol+ or **⬇**Vol- key to select "RING MELODY" and press **→/OK** key.
4. Press **⬆**Vol+ or **⬇**Vol- key to select the desired ring melody, the selected melody will be sounded.
5. Press **→/OK** key to confirm the setting.

Ring Volume

You may select one of the 5 available volumes for your incoming calls alert tone. Ringer can be disable by pressing **C/ⓧ/ⓧ** key for 1.5 seconds in idle mode.

1. Press **→/OK** key.
2. Press **⬆**Vol+ or **⬇**Vol- key to select "SETUP HS" and press **→/OK** Key.

3. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “RING VOLUME” and press \rightarrow/OK Key.
4. Press $\text{Vol}+$ or $\text{Vol}-$ key to select the desired ring volume, the selected volume will be sounded.
5. Press \rightarrow/OK key to confirm the setting.

TONES

Low Battery

You may set the warning beep to “ON” when your cordless handset battery is low, so as to alert you to charge the battery.

1. Press \rightarrow/OK key.
2. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “SETUP HS” and press \rightarrow/OK key.
3. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “TONES” and press \rightarrow/OK key.
4. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “LOW BATTERY” and press \rightarrow/OK key.
5. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “ON” or “OFF”.
6. Press \rightarrow/OK key to confirm the setting.

No Coverage









 
You may set the warning beep to “ON” or “OFF” when the cordless handset is out of range.

1. Press \rightarrow/OK key.
2. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “SETUP HS” and press \rightarrow/OK key.
3. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “TONES” and press \rightarrow/OK key.
4. Press $\text{Vol}+$ or $\text{Vol}-$ key to select “NO COVERAGE” and press \rightarrow/OK key.
5. Press $\text{Vol}+$ or $\text{Vol}+$ key to select “ON” or “OFF”.
6. Press \rightarrow/OK key to confirm the setting.



Key Tone




 


 



You may set the key tone to “ON” or “OFF” when you press the keypad.

1. Press \rightarrow/OK key.
2. Press $\text{Vol}+$ or $\text{Vol}+$ key to select “SETUP HS” and press \rightarrow/OK Key.









 

3. Press  or -key to select “TONES” and press  key.
4. Press  or -key to select “KEY TONE” and press  key.
5. Press  or -key to select “ON” or “OFF”.
6. Press  key to confirm the setting.

Auto Talk

This option allows user to pick up the cordless handset from charger to answer the call directly when a call is coming, and no need press  or  key.

1. Press  key.
2. Press  or -key to select “SETUP HS” and press  key.
3. Press  or -key to select “AUTO TALK” and press  key.
4. Press  or -key to select “ON” or “OFF”.
5. Press  key to confirm the setting.






 
 


Alarm

1. Press  key.
2. Press  or -key to select SETUP HS and press  key.
3. Press  or -key to select ALARM and press  key.
4. Press  or -key to select “ON” or “OFF”.
5. Enter HH:MM in 24 hour format
6. Press  key to confirm.

Note: when Alarm time is reached, “ALARM ON” will be blinking and alarm sound will stop after around 1 minute.

Handset Name

You can set the cordless handset name that you like.

1. Press  key.
2. Press  or -key to select “SETUP HS” and press  key.
3. Press  or -key to select “NAME” and press  key.
4. Press  key to delete the current name.
5. Input the desired name using number key.
6. Press  key to confirm the setting.

Language

Your cordless handset has different display language, the name of each language setting is always spelt in its own language. (Default language is English.)

1. Press \rightarrow /OK key.
2. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "SETUP HS" and press \rightarrow /OK key.
3. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "LANGUAGE" and press \rightarrow /OK key.
4. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select LANGUAGE.
5. Press \rightarrow /OK key to confirm the setting.

Reset Handset

This option allows user to restore the cordless handset to the default setting.

1. Press \rightarrow /OK key.
2. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "SETUP HS" and press \rightarrow /OK key.
3. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "RESET" and press \rightarrow /OK key, the LCD will display "RESET?".
4. Press \rightarrow /OK key to confirm the setting.

Base Setting

Change PIN

PIN is your base's identification number, this function prevents setting being changed by others. The default setting is "0000". You may change the PIN. Please take note of the change so as to operate the unit normally.

1. Press \rightarrow /OK key.
2. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "SETUP BS" and press \rightarrow /OK key.
3. Press \bullet ▲Vol+ or $\text{I}^{\text{?}}\blacktriangledown$ Vol- key to select "CHANGE PIN" and press \rightarrow /OK key, the LCD will show "ENTER PIN".
4. Press number key to input the old PIN code and press \rightarrow /OK Key, the LCD will show "NEW PIN", prompt you to input a new PIN code.
5. Input the desired new PIN code and press \rightarrow /OK key, the

LCD will show “REPEAT PIN”, prompt you to input the new PIN code again.

6. Input the new PIN code again and press \rightarrow /OK key to confirm the setting.

Note:

1. The PIN code must be 4 digits.
2. “WRONG PIN” will be shown if the old PIN code you input is wrong, and then return to step 4.
3. If the new PIN code that you input two times is different, the change will fail, the display will return to step 5.

Ringer Melody (external / internal)

You may select one base ringer tones for your incoming calls alert tone.

1. Press \rightarrow /OK key.
2. Press \uparrow Vol+ or \downarrow Vol- key to select SETUP BS and press \rightarrow /OK key.
3. Press \uparrow Vol+ or \downarrow Vol- key to select RING MELODY and press \rightarrow /OK key.
4. Press \uparrow Vol+ or \downarrow Vol- key to select the desired ring melody, the selected melody will be sounded.
5. Press \rightarrow /OK key to confirm the setting.

Ringing Volume

You may select one of the 5 available volumes for your incoming calls alert tone.

1. Press \rightarrow /OK key.
2. Press \uparrow Vol+ or \downarrow Vol- key to select “SETUP BS” and press \rightarrow /OK key.
3. Press \uparrow Vol+ or \downarrow Vol- key to select “RING VOLUME” and press \rightarrow /OK key.
4. Press \uparrow Vol+ or \downarrow Vol- key to select the desired ring volume, the selected volume will be sounded.
5. Press \rightarrow /OK key to confirm the setting.

Dial Mode

You may set the dial mode to “TONE” or “PULSE” according to your needs. (The default setting is “Tone”).


1. Press \rightarrow /OK key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "SETUP BS" and press \rightarrow /OK key.
3. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "DIAL MODE" and press \rightarrow /OK key.
4. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "TONE" or "PULSE".
5. Press \rightarrow /OK key to confirm the setting.

Recall Time

You may select flash time from 100ms to 800ms according to your needs. The default setting is 600ms.

1. Press \rightarrow /OK key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "SETUP BS" and press \rightarrow /OK key.
3. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "RECALL TIME" and press \rightarrow /OK key.
4. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select the desired flash time.
5. Press \rightarrow /OK key to confirm the setting.

VMWI(Should be supported by your telephone service provider)

If you have subscribed to a voice messaging service, the  icon will display on the handset to alert you if you have a messages waiting.

To turn Visual Message Waiting Indication (VMWI) off

1. Press \rightarrow /OK key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "SETUP BS" and press \rightarrow /OK key.
3. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "VMWI" and press \rightarrow /OK key. "VMWI OFF?" will display.
4. Press \rightarrow /OK key to confirm the setting.

Reset Base

This option allows user to restore the base and Date/Time to the default setting.

1. Press \rightarrow /OK key.
2. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "SETUP BS" and press \rightarrow /OK key.
3. Press \blacktriangle Vol+ or \blacktriangledown Vol- key to select "RESET" and press \rightarrow /OK key,

the LCD will display "ENTER PIN".

4. Input the correct PIN code using number key, press \rightarrow /OK key to confirm, and the LCD will display "RESET?".
5. Press \rightarrow /OK key to confirm the setting.

Date / Time

You can set the Date/Time displayed in idle mode.

1. Press \rightarrow /OK key.
2. Press \bullet \uparrow Vol+ or \uparrow \downarrow Vol- key to select "DATE/TIME" and press \rightarrow /OK key.
3. Input the correct last two digits of year (range: 00-99) using number key, press \rightarrow /OK key to confirm the setting and enter month and date setting.
4. Input the correct month and date, the format is: date / month (date range: 01-30/31 , month range: 01-12), press \rightarrow /OK key to confirm the setting and enter time setting.
5. Input the correct time, the format is: hour/minute (hour range: 00-23, minute range: 00-59).
6. Press \rightarrow /OK key to confirm the setting.

Note: If the value you input is over the range during setting, you can't enter next setting by pressing \rightarrow /OK key, please enter the correct setting again.

Registration Register

Up to 6 cordless handsets can be registered to one base.

1. Press \rightarrow /OK key.
2. Press \bullet \uparrow Vol+ or \uparrow \downarrow Vol- key to select "REGISTRATION" and press \rightarrow /OK key.
3. Press \bullet \uparrow Vol+ or \uparrow \downarrow Vol- key to select "REGISTER" and press \rightarrow /OK Key, Press \bullet \uparrow Vol+ or \uparrow \downarrow Vol- key to select a base and press \rightarrow /OK key, the LCD will display "ENTER PIN".
4. Input the correct PIN code "0000" and press \rightarrow /OK key to begin to register the cordless handset, the LCD will display "SEARCHING".
5. Press and hold the **page** key for about 15 seconds.

Note:

1. "SUCCESSFUL" will be shown on handset LCD display if

the handset is registered to the base. Cordless handset number will be shown after it returns to idle mode.

2. "FAIL" will be shown on handset LCD display if the cordless handset is failed to registered to the base, register the handset again.

Select Base

This option allows user to select a base.

1. Press \rightarrow /OK key.
2. Press \uparrow Vol+ or \downarrow Vol- key to select "REGISTRATION" and press \rightarrow /OK key.
3. Press \uparrow Vol+ or \downarrow Vol- key to select "SEL BASE" and press \rightarrow /OK key, Press \uparrow Vol+ or \downarrow Vol- key to select a specific base or Auto.
4. Press \rightarrow /OK key to confirm the setting.

Remove Handset

This option allows user to remove the registered cordless handset from the base.

1. Press \rightarrow /OK key.
2. Press \uparrow Vol+ or \downarrow Vol- key to select "REGISTRATION" and press \rightarrow /OK key.
3. Press \uparrow Vol+ or \downarrow Vol- key to select "REMOVE HS" and press \rightarrow /OK key, the LCD will display "ENTER PIN".
4. Input the correct PIN code and press \rightarrow /OK key.
5. Press \uparrow Vol+ or \downarrow Vol- key to select the cordless handset you want to remove and press \rightarrow /OK key, the LCD will display "SAVED".

Note:

1. The removed handset LCD will show "SEARCHING". You must register it again before using it.
2. If the PIN code you input is wrong, "WRONG PIN" will be shown on cordless handset LCD.

Technical Specifications

Handset Operating Time: (average values*)	Approx. 10 hours talk time Approx. 100 hours standby
AC / DC Adapter	For Base adaptor Manufacturer: SIL Input: 230V AC / 50 Hz 30mA Output: 6 V DC, 250mA
Telephone connection	Appliance designed for connection to an analogue telephone line class TNV3 (telecommunications network voltage) as defined by the EN 60950 standard.
Rechargeable Battery	(For 2 alternative batteries) Model No.: GP45AAHC Manufacturer: GP Model No.: KH-AAAJ450 Manufacturer: Corun 1.2V DC 450mAh / Ni-MH, AAA x 2 or equivalent.

* For guidance only, depends on initial battery charge.

General Product Care

Simply wipe the base station with a damp cloth or an antistatic wipe. Never use a dry cloth as this can cause static discharge. Periodically clean the charge contacts on the handset, base and charger with a soft cloth.

Note: Due to continuous product development all features and specifications are subject to change without prior notice.


For more information on Warranty and Product Support in Singapore, please call:

(65) 68412668 or Fax to (65) 68412628

Email: support@alcom.com.sg

Website: www.alcomonline.com

Troubleshooting Guide

PROBLEMS	CAUSES	SOLUTIONS
Cannot register the handset	<p>The battery is not sufficiently charged.</p> <p>Handset and base station were not prepared for registration.</p>	<p>Charge the battery for 16 hours (see Battery Charging).</p> <p>Unplug and then plug in the power adapter.</p>
No display.	The battery has not been charged.	Charge the battery or replace them (see Battery Charging)
<p>No reactions to keystroke</p> <p>No radio connection to the base station:  blinking!.</p>	<p>The keypad is locked.</p> <p>The handset is outside the base station range.</p> <p>The handset is not registered.</p> <p>The base station does not work.</p>	<p>Press # key longer than 2 seconds.</p> <p>Move closer to the base station.</p> <p>Register the handset (see Registering Handset).</p> <p>Unplug and then plug the power adapter to the power outlet and the other end into the power jack on base bottom.</p>

Note: Due to continuous product development all features and specifications are subject to change without prior notice.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

