

User's Guide

Model: EX30014



SPEAKERPHONE WITH CALL WAITING/CALLER ID




Parts checklist

Your telephone package includes the items shown below.



Telephone base with mounting bracket attached

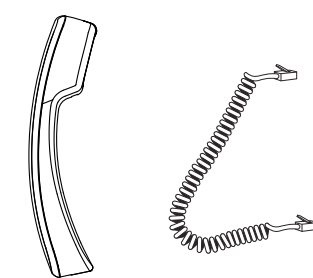

Handset Handset coiled cord




Telephone line cord



User's guide

1

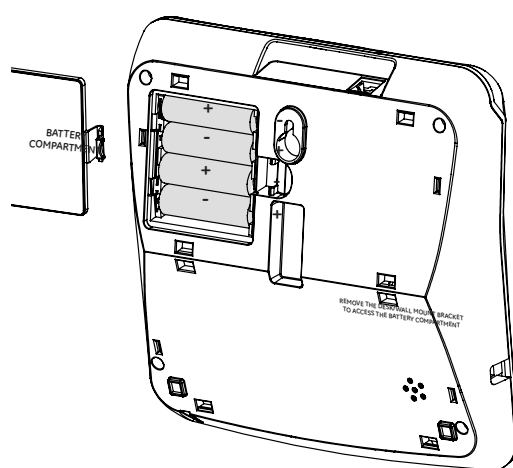

Installing on a desk or table

1. Choose an area near a telephone modular jack (RJ11C), and place your telephone on a level surface, such as a desktop or tabletop (for wall mounting, see instructions on page 5).
2. Make sure the rotating handset tab is rotated to the **DESK** position as shown in figure 1 below. You can use a coin or a small flat tool if needed.
3. Plug one end of the handset coiled cord into the jack on the bottom of the handset (near the mouthpiece) and the other end into the handset jack (on the left side of the base), then place the handset onto the base cradle.

3

Installing on a wall

1. Turn the rotating handset tab to the **WALL** position as shown in figure 3 below. You can use a coin or a small flat tool if needed.
2. Detach the mounting bracket by pressing on the top of the bracket. Turn the mounting bracket until the text **"THIS END UP FOR WALL USE"** is correctly oriented, and then replace the bracket onto the base as shown in figure 4.
3. Plug one end of the handset coiled cord into the bottom of the handset (near the mouthpiece) and the other end of the cord into the handset jack (on the left side of the base), then place the handset onto the base cradle.
4. Plug one end of the telephone line cord into the telephone jack at the top of the base and the other end into the modular telephone jack as shown in figure 4 below. Please Note: If you have DSL high speed Internet service, a DSL filter is required (not included). Contact your DSL service provider for more information about DSL filters.
5. Slip the mounting holes (on the bottom of the base) over the wall plate posts on the modular jack and slide the unit down firmly into place.

The unit is properly installed if you pick up the handset and hear a dial tone. If you do not hear a dial tone, re-check all installation steps.


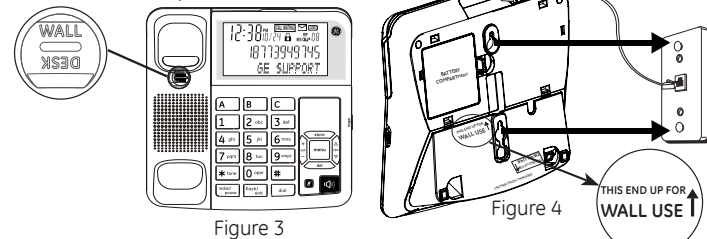


Figure 3

Figure 4

7

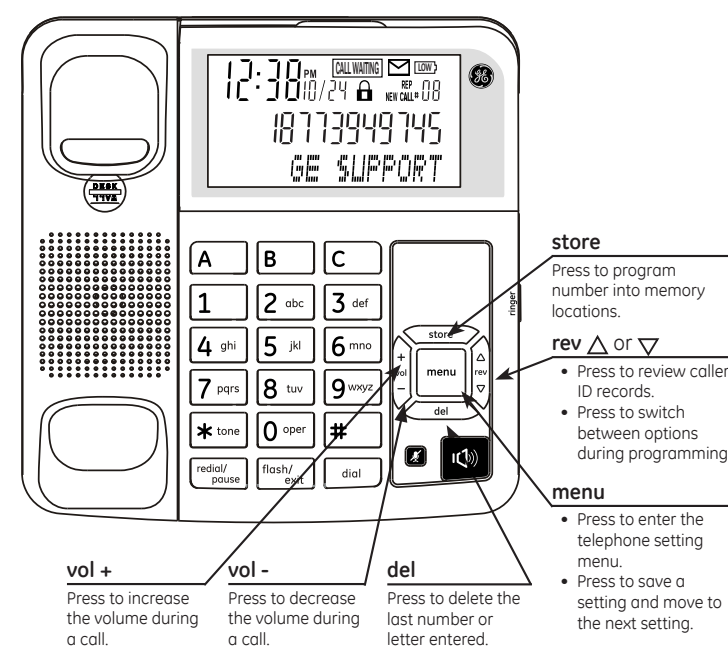

vol +
Press to increase the volume during a call.

vol -
Press to decrease the volume during a call.

del
Press to delete the last number or letter entered.

store
Press to program number into memory locations.


rev Δ or ∇
• Press to review caller ID records.
• Press to switch between options during programming.

menu
• Press to enter the telephone setting menu.
• Press to save a setting and move to the next setting.

9

Telephone Jack Requirements

To use this phone, you need an RJ11C type modular telephone jack installed on your line. If you do not have a modular jack, call your telephone service provider to find out how to have one installed. If you have DSL high speed Internet service, a DSL filter is required (not included). Contact your DSL service provider for more information about DSL filters.

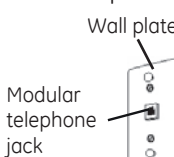

Wall plate

Modular telephone jack

Installing or replacing batteries

IMPORTANT: The caller ID records and memory location records will be lost approximately 90 seconds after the batteries are removed from the telephone. Please read the instructions before replacing the batteries and have the batteries ready for replacement.

Your telephone uses 4 AA-size alkaline batteries for receiving and storing caller ID records and for storing the numbers you use for memory dialing, pulse dialing, and redial.

1. Turn the telephone base over, and detach the mounting bracket by pressing on the top of the bracket.
2. Press on the tab to open the battery compartment cover on the back of the base. Insert 4 AA alkaline batteries (not included) into the compartment matching the engraving in the battery compartment as shown.
3. Replace the mounting bracket to the telephone base with the engraved texts **"THIS END UP FOR DESK USE"** correctly oriented.

CAUTION: If the telephone will not be used for an extended period of time, remove the batteries from the base to prevent possible leakage.

2

4. Plug one end of the telephone line cord into the **LINE** jack at the top of the base and the other end into a modular jack as shown in figure 2 below. Please Note: If you have DSL high speed Internet service, a DSL filter is required (not included). Contact your DSL service provider for more information about DSL filters.

The unit is properly installed if you pick up the handset and hear a dial tone. If you do not hear a dial tone, re-check all installation steps.

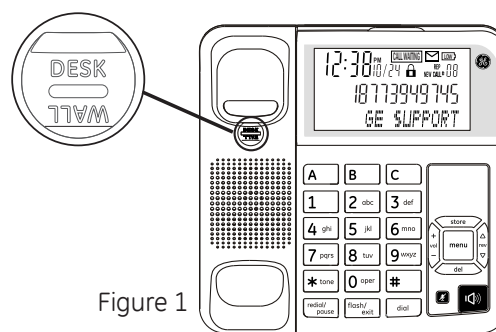


Figure 1


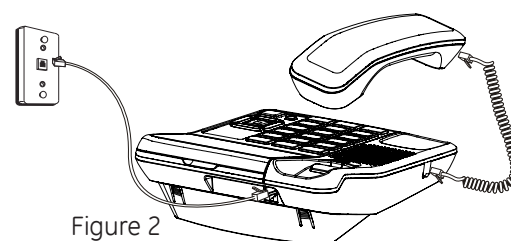


Figure 2

4

Telephone base layout

Rotating handset tab
Rotate to switch between desk/wall installation.

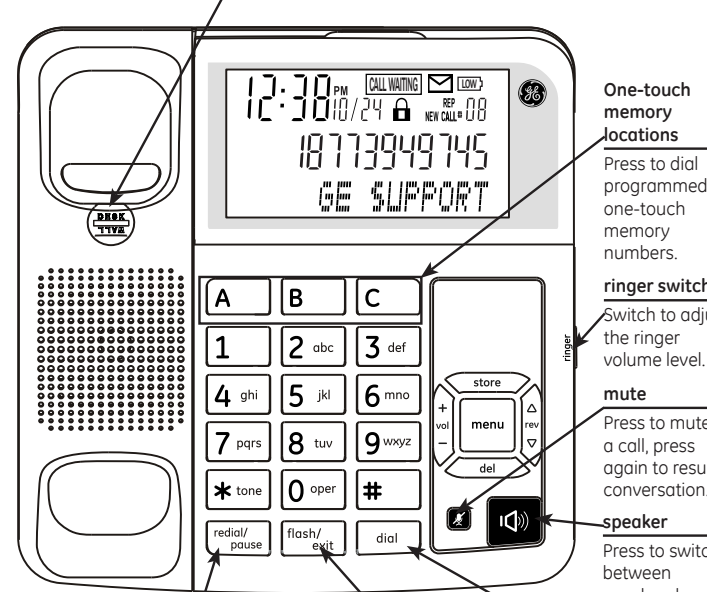

redial/pause

• Press to redial the last dialed number.
• Press to add a dialing pause when dialing or entering numbers into memory.

flash/exit

• During a call, press to answer a second incoming call if you receive a call waiting alert (if you have subscribed to the call waiting feature from your telephone service provider).
• During programming, press to cancel and return to idle mode.

dial

• Press to call numbers in the caller ID records.
• Press to call numbers in the memory locations.

One-touch memory locations
Press to dial programmed one-touch memory numbers.

ringer switch
Switch to adjust the ringer volume level.

mute
Press to mute a call, press again to resume conversation.

speaker
Press to switch between speakerphone and normal handset use.

Telephone operation

Placing a call

1. Lift the handset and listen for a dial tone.
2. Dial the number.
3. Return the handset to the base to end the call.

Speakerphone

The speakerphone works similarly to a two-way radio (also called FRS or "Walkie-Talkies") in that you can only listen or talk at one time. Stay within 2 to 3 feet of the phone so that you can be clearly heard by the caller.

The **speaker** indicator lights when the speakerphone is in use. You can adjust the speaker volume by adjusting the **vol +/-** buttons while the speakerphone is in use.

For best speakerphone performance, avoid the following:

- Areas with high background noise (the microphone might pick up these sounds and prevent the speakerphone from going into the receiving mode when you finish talking).
- Surfaces affected by vibration.
- Recessed areas such as in a corner, under a cupboard, or next to a cabinet, which can generate an echo effect.

1. Press **speaker** on the base and listen for a dial tone.
2. Dial the number.
3. Press **speaker** again to end the call.

Answering a call

1. Lift the handset when the telephone rings.
2. Return the handset to the base to end the call.

8

Speakerphone

1. Press **speaker** to answer a call when the telephone rings.
2. Press **speaker** again to hang up.

You may switch between speakerphone and normal handset use anytime during a call.

Speakerphone to Handset - Lift the handset to disable speakerphone. The speakerphone indicator turns off.

Handset to Speakerphone - Press **speaker**, and then return the handset to the base. The speakerphone indicator turns on and the handset is disabled.

Volume

You can adjust the volume of both the handset and the speakerphone.

While using the handset or speakerphone, press **vol +/-** to adjust the handset volume from level 1 to 4 or the speakerphone volume from level 1 to 8. A tone emits when the volume is adjusted to the maximum or minimum level.

Temporary Tone Dialing

This feature allows you to switch to touch-tone dialing temporarily when you are using pulse dialing service.

Press ***** to switch to tone dialing during a call. The telephone returns to pulse dialing after you hang up.

Flash

Press **flash/exit** during a call to access customer calling services such as call waiting or call transfer, which are provided by your telephone service provider.

Redial

Redial the last number you called by pressing **redial/pause** after you hear a dial tone.

NOTE: The redial memory stores the last number you dialed (maximum of 32 digits). All numbers, including numbers dialed to access voice-menu system, are recorded in the memory.

Mute

Press **mute** to mute the microphone during a call. You will hear the calling party but they will not hear you. Press **mute** again to resume conversation.

Telephone settings

NOTE: When you finish a setting, press menu to save and move to the next setting, or press flash/exit to return to idle mode.

Viewing the Set Up menu

You can view the Set Up menu structure as follows:

1. Place the handset in the cradle of the telephone base.
2. Press **menu**. The screen displays **DATE/TIME**.
3. Press **rev Δ** or **∇** to scroll the menu structure and view the submenus (**DATE/TIME**, **LANGUAGE**, **CONTRAST**, **LOCAL AREA CODE**, **LONG DIST CODE**, **LOCK**, **CHANGE PIN ?**, **T/P DIAL MODE**, and **FLASH TIME**).

NOTE: You may press the **del** key anytime to exit the Set Up menu. If no keys are pressed within 10 seconds, the phone automatically exists the Set Up menu and returns to the NO CALLS summary screen.

Setting date/time

You can set the date (month and day) and time (hour and minute) of the telephone unit.

1. Press **menu**. The screen displays **DATE/TIME**.
2. Press **menu** again to show the current hour setting.
3. Press **rev Δ** or **∇** to select the desired digits for hour setting:
 - **0 to 23** for 24-hour format
 - **1 to 12** for 12-hour format
4. Press **menu** to confirm your setting and move to the minute setting.
5. Press **rev Δ** or **∇** to select the desired digits for minute setting (**00 to 59**).
6. Press **menu** to confirm your setting and move to the month

11

setting.

7. Press **rev Δ** or **∇** to select the desired digits for month setting (**1 to 12**).
8. Press **menu** to confirm your setting and move to the day setting.
9. Press **rev Δ** or **∇** to select the desired digits for day setting (**01 to 31**).
10. Press **menu** to confirm your setting and move to the Time Format.
11. Press **rev Δ** or **∇** to select the desired time format setting (**12H** or **24H**).
12. Press **menu** to confirm your setting.

The date and time will be updated, every time a FSK Caller ID message has been received.

If a DTMF Caller ID has been received, then it will get the date and time from the system clock of the phone.

NOTE: The phone returns to idle mode if no key has been pressed for 10 seconds or if the delete key is pressed before the completion of the current operation. The phone will time out and return to idle mode without changing the current time.

Setting the language

You can select **ENGLISH**, **RUSSIAN**, **ROMANIAN**, **BULGARIAN**, **TURKISH**, **POLISH**, **GREEK**, **SPANISH** or **FRENCH** as the display language. The default setting is **ENGLISH**.

1. Place the handset in the cradle of the telephone base.
2. Press **menu**. The screen displays **DATE/TIME**.
3. Press **rev Δ** or **∇** until **LANGUAGE** appears.

12

visit our website

www.thehomephones.com



is a trademark of The General Electric Company, and is under license by CCT Tech Global Limited, Central, Hong Kong

Model EX30014
P/N: 905-30014204-00
EX.E Version 1.0 06/2011
Printed in China
© 2011 CCT Tech Global Limited

2

4

6

8

10

12

