

# User's Guide

## Model EX30040



Slim line corded phone with Tone/Pulse Dialing



visit our website:  
[www.thehomephones.com](http://www.thehomephones.com)

Model EX30040  
P/N: 830040-4200  
Version 1 11/2010  
Printed in China  
© 2010 CCT Tech Global Limited



is a trademark of  
The General Electric Company  
and is under license by  
CCT Tech Global Limited,  
Central, Hong Kong

## INTRODUCTION

Your telephone is designed to give you flexibility in use, and high quality performance. To get the most from your new telephone, please read through this user's guide.


If you have any questions or problems, read the Troubleshooting Tips for solutions.

## PARTS CHECKLIST

Your package contains the following items:



User's Guide

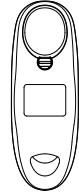

Base




Handset with cord

## BEFORE YOU BEGIN


### Telephone Jack Requirements

To use this phone, you need a RJ11C type modular telephone jack, (similar to the one pictured here), installed in your home. Call your local telephone company to have one installed.

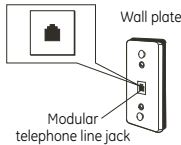


## INSTALLATION AND SETUP

Your telephone can be mounted on the wall or placed on a table. After you decide which type of installation you want, refer to the appropriate installation diagram.

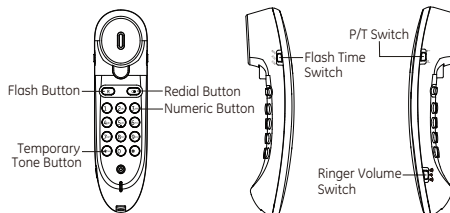


## INSTALLING THE PHONE

Connect the telephone line.

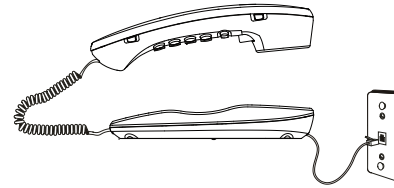


### Wall Mounting

Rotate the wall mount knob on the cradle 180° of the base as shown in the picture below.

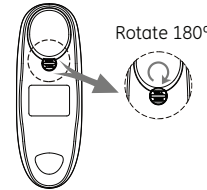


Plug the telephone line cord into a modular wall phone jack. Place the base unit on the wall plate (not included) as shown below.

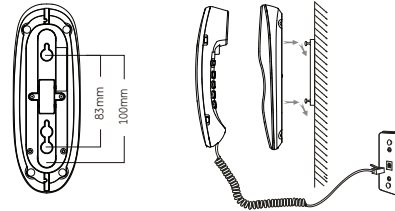

### Wrapping The Telephone Line Cord

Wrap the excess telephone line cord through the grooves under the base.

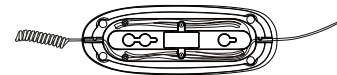

## PHONE OPERATION

### Making A Call

1. Lift the handset.
2. Dial the telephone number using the keypad.

### Receiving A Call

Lift the handset to answer a call.

### Ringer Volume Control

To adjust the ringer volume, use the ringer volume switch on the side of the handset.

### Flash Button

Press the FLASH button to access services such as call waiting or call transfer services provided by your local telephone company.

### Redial Button

Press the Redial Button to dial the last number dialed. (maximum redial digit : 32)

### Temporary Tone Feature (Pulse Mode)

Press the TONE button (\*) during a call to temporarily switch to Tone dialing for services require touch-tone dialing.

The telephone automatically returns to Pulse dialing after you hang up.

## TROUBLESHOOTING TIPS

### NO DIAL TONE/CANNOT DIAL OUT

- Make sure the hook switch is fully extended when handset is lifted from the cradle.
- Check TONE/PULSE is set to the correct position.
- Unplug the phone and plug it back in after 30 seconds.

### PHONE DOES NOT RING

- Check all connections are secure and not damaged.
- Avoid using too many extension phones on one line. Try unplugging some extension phones.

## CARE AND MAINTENANCE

To keep your phone in good operating condition, follow these guidelines:

- Avoid placing it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset and other rough treatment.
- Never use a strong cleaning agent or abrasive powder as this will damage the phone.
- Retain the original package in case you need to return it at a later date.



Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling center.