

USER GUIDE

Icarus 2000 system



Digital Cordless Telephone

THIS EQUIPMENT IS NOT DESIGNED FOR MAKING EMERGENCY TELEPHONE CALLS WHEN THE POWER FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.

Before operating this set, please read these instructions carefully.

Package contents

The package contains the following items:

- | | |
|--|---|
| Single | Twin |
| <ul style="list-style-type: none"> 1 Handset 1 Base station 1 Mains power adapter 1 Telephone line cord 2 rechargeable batteries 1 User manual | <ul style="list-style-type: none"> 2 Handsets 1 Base station 1 Mains power adapter 1 Telephone line cord 4 rechargeable batteries 1 User manual 1 Charger pod with a connected mains power adapter |
| Triple | Quad |
| <ul style="list-style-type: none"> 3 Handsets 1 Base station 1 Mains power adapter 1 Telephone line cord 6 rechargeable batteries 2 Charger pods with connected mains power adapters | <ul style="list-style-type: none"> 4 Handsets 1 Base station 1 Mains power adapter 1 Telephone line cord 8 rechargeable batteries 3 Charger pods with connected mains power adapters |

The maximum range between the base station and the handset is approximately 300 meters. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced.

The range indoors is normally less than outdoors, typically being up to 50 meters.

TECHNICAL DETAILS

Standard	Digital Enhanced Cordless Telecommunication (DECT)
Frequency	1.8GHz
Operating range	Up to 300m outdoors; up to 50m indoors
Operating time	Standby: 100 hours Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0°C to 40°C Storage -20°C to 60°C
Electrical power	HANDSET – 500mAh NIMH 1.2V rechargeable battery x 2, AAA size. Base Unit/Charge Pod Input 6V DC, 300mA

TABLE OF CONTENTS

1 IMPORTANT SAFETY INSTRUCTIONS	4
2 INSTALLING YOUR PHONE	6
2.1 CONNECTING THE BASE STATION	6
2.2 INSTALLING AND CHARGING THE BATTERIES	6
3 GETTING TO KNOW YOUR PHONE	7
3.1 HANDSET OVERVIEW	7
3.2 BASE STATION OVERVIEW	8
3.3 DISPLAY ICONS AND SYMBOLS	8
3.4 MENU STRUCTURE	9
3.5 TEXT AND DIGIT ENTRY TABLE	10
3.5.1 LATIN CHARACTER SET.....	10
3.5.2 POLISH CHARACTER SET.....	11
3.5.3 NORWEGIAN CHARACTER SET.....	11
3.5.4 GREEK CHARACTER SET.....	11
4 USING YOUR PHONE	12
4.1 MAKE A CALL	12
4.1.1 PREPARATORY DIALING.....	12
4.1.2 DIRECT DIALING.....	12
4.1.3 CALL FROM THE PHONEBOOK.....	12
4.1.4 CALL FROM THE CALL LIST.....	12
4.1.5 CALL FROM THE REDIAL LIST(ONLY AVAILABLE WITH CALLER DISPLAY).....	12
4.1.6 CALL TIMER.....	12
4.2 ANSWER A CALL	12
4.3 END A CALL	13
4.4 ADJUST EARPIECE VOLUME	13
4.5 MUTE A CALL	13
4.6 SET THE SILENT MODE	13
4.7 TURN ON THE KEYPAD LOCK	13
4.8 REDIAL THE LAST NUMBER	13
4.8.1 REDIAL A NUMBER FROM THE REDIAL LIST.....	13
4.8.2 STORE A REDIAL NUMBER INTO THE PHONEBOOK.....	14
4.8.3 DELETE A REDIAL NUMBER.....	14
4.8.4 DELETE THE ENTIRE REDIAL LIST.....	14
4.9 FIND THE HANDSET	14
4.10 MAKE AN INTERNAL CALL(FOR MULTI-HANDSET VERSIONS ONLY)	14
4.10.1 INTERCOM ANOTHER HANDSET.....	15
4.10.2 CALL ALL HANDSETS.....	15
4.10.3 TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET.....	15
4.10.4 MAKE A 3-WAY CONFERENCE CALL.....	15
5 PRIVATE PHONEBOOK	16
5.1 ADD A NEW PHONEBOOK ENTRY	16
5.2 SEARCH A PHONEBOOK ENTRY	16
5.3 VIEW A PHONEBOOK ENTRY	16
5.4 EDIT A PHONEBOOK ENTRY	17
5.5 DELETE A PHONEBOOK ENTRY	17
5.6 DELETE THE ENTIRE PRIVATE PHONEBOOK	17
5.7 CHECK THE PHONEBOOK USAGE	17
6 CALLER DISPLAY (NETWORK DEPENDENT)	18
6.1 VIEW THE CALL LIST	18
6.2 STORE A CALL LIST NUMBER INTO THE PHONEBOOK	18
6.3 DELETE AN ENTRY IN THE CALL LIST	19
6.4 DELETE THE ENTIRE LIST OF THE CALL LIST	19
7 PHONE SETTINGS	20
7.1 DATE AND TIME SETTINGS	20
7.1.1 CHANGE THE DATE FORMAT.....	20
7.1.2 CHANGE THE TIME FORMAT.....	20
7.1.3 SET THE TIME.....	20
7.1.4 SET THE DATE.....	20
7.2 ALARM SETTINGS	21
7.2.1 TURN OFF/THE ALARM.....	21
7.2.2 SET THE ALARM TIME.....	21
7.3 HANDSET SETTINGS	21
7.3.1 SET THE RINGER RINGTONE FOR INTERNAL CALLS.....	21
7.3.2 SET THE RINGER MELODY FOR EXTERNAL CALLS.....	22
7.3.3 SET THE RINGER VOLUME.....	22
7.3.4 SET ALERT TONES.....	22
7.3.5 SET THE HANDSET LANGUAGE.....	22
7.3.6 RENAME THE HANDSET.....	23
7.3.7 CHOOSE THE INFORMATION TO BE DISPLAYED IN IDLE.....	23
7.3.8 SET THE AUTO ANSWER.....	23
7.4 BASE SETTINGS	23
7.4.1 DE-REGISTER A HANDSET.....	23
7.4.2 CHANGE THE DIAL MODE.....	24
7.4.3 CHANGE THE FLASH(RECALL)TIME.....	24
7.4.4 CHANGE THE SYSTEM PIN CODE.....	24
7.5 REGISTRATION	25
7.6 RESET YOUR PHONE	25

1 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all the instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- Unless it is an emergency, avoid using the telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the supplied NIMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
- The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
- Do not use third party charging bays. Damage may be caused to the batteries.
- Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

3.5.2 Polish Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*										#
#	#										#

3.5.3 Norwegian Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*										#
#	#										#

3.5.4 Greek Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	K	L	M	5							5
6	N	O	P	6							6
7	Q	R	S	7							7
8	T	U	V	8							8
9	X	Y	Z	9							9
0	0										0, P (Pause)
*	*										#
#	#										#

4 USING YOUR PHONE

4.1 Make a Call

4.1.1 Preparatory Dialing

Enter the phone number and press <TALK ON> to connect to the line and dial the number. When entering the number, if you make a mistake, press <C> to delete digits.

4.1.2 Direct Dialing

Press <TALK ON> to connect to the line and then enter the phone number. (Note: if you enter a wrong digit you cannot correct it with the <C> key.)

4.1.3 Call from the phonebook

Press <MENU> and <UP/DOWN> to select PHONEBOOK and then press <OK> to access the phonebook and press <UP/DOWN> to select the desired phonebook entry.

4.1.4 Call from the Call List (only available with Caller Display)

Press <MENU> to access the Call List and press <UP/DOWN> to select the desired Call List entry.

Press <TALK ON> to dial out the selected Call List entry.

Note: You can also access the Call List by pressing <MENU/OK> twice.

4.1.5 Call from the redial list

Press <DOWN> to access the redial list and press <UP/DOWN> to select the desired redial number.

Press <TALK ON> to dial out the selected redial number.

Note: You can also access the Redial List by pressing the <REDIAL> key.

4.1.6 Call timer

Your handset automatically times the duration of every call.

The call timer is displayed 15 seconds after dialing, and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press <TALK ON> to answer a call.


Note: If AUTO ANSWER is set to ON, then lifting the handset off the base or charger will answer the call automatically, and no buttons need to be pressed.

3 GETTING TO KNOW YOUR PHONE

3.1 Handset Overview

LEFT SOFT KEY(MENU/OK)
In idle mode: Press to access the main menu.
In sub-menu mode: Press to confirm the selection.
During a call: Press to access Intercom/Phonebook/Redial List/Call List.

RIGHT SOFT KEY(CLEAR/BACK/MUTE/INTERCOM)
In idle mode: Press to go back to idle screen to access the main menu.
In sub-menu mode: Press to go back to previous level in sub-menu mode.
Press and hold to go back to idle screen in editing / pre-dialing mode.
Press and hold to delete all the characters / digits.
During a call: Press to mute/unmute the microphone.
In idle mode: Press to intercom another handset.

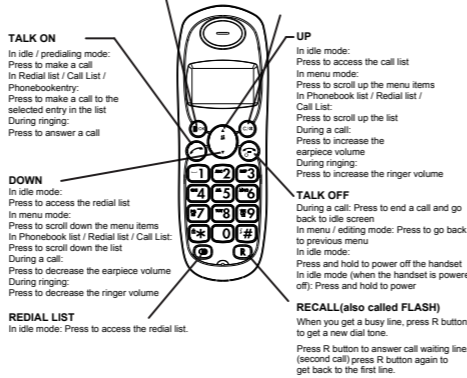

4.3 End a Call

During a call press <TALK OFF> to end the call.

OR

Put the handset on the base station or charger to end the call.

4.4 Adjust Earpiece Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for the earpiece to choose from for the earpiece volume.

4.1.2 Direct Dialing

Press <UP/DOWN> to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

4.5 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.

During a call: Press <C> to mute the microphone and <MUTED> will display on the LCD. Your caller cannot hear you. Press <C> again to unmute the microphone.

4.6 Set the Silent Mode

In idle, press and hold <HASH/#> to turn off the handset ringer. The <RINGER OFF> icon is displayed on the LCD.

Note: The display will still flash the Call icon and show CALL or the Caller Display number, when there is an incoming call, even if the ringer is turned off.

To turn the ringer back on, press and hold <HASH/#> again.

4.7 Turn on the Keypad Lock

In idle, press and hold <STAR/*> to turn on the keypad lock. The <KEYPAD LOCK> icon is displayed on the LCD.

Note: You can still use <TALK ON> to answer a call when the handset is ringing. To turn the keypad lock off, press and hold <STAR/*> again.

4.8 Redial the last number

You can redial any of the 5 last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead.

The most recent last number will display at the top of the redial list.

4.8.1 Redial a Number from the Redial List

1. In idle mode, press <DOWN> to access the redial list.

Note: If the redial list entry shows a name, press <HASH/#> to view the number of this entry.

2. Press <UP/DOWN> to browse the redial list.

3. Press <TALK ON> to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows <EMPTY>.

3.2 Base Station Overview

1. PAGE

Press the Page button on the base station to page your handset(s).


It will ring for approximately 60 seconds.

2. CHARGING CRADLE

The LCD display gives you information on the current status of the telephone.

3.3 Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

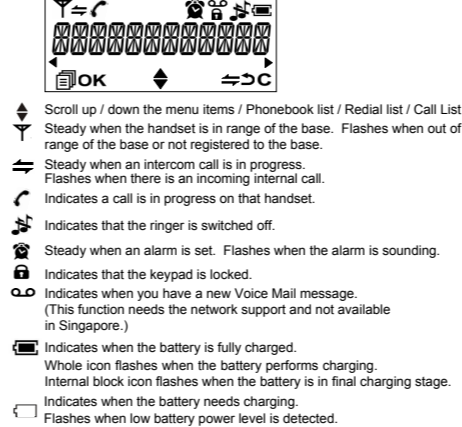

3. Press <MENU> and <UP/DOWN> to select **EDIT**.
4. Press <OK> to display the current name.
5. Edit the name and press <OK>.
6. Edit the number and press <OK>.
7. Press <UP/DOWN> to select the ringtone and press <OK> to confirm.

5.5 Delete a Phonebook Entry

In idle:

1. Press <MENU> and <UP/DOWN> to select **PHONEBOOK** and then press <OK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU> and <UP/DOWN> to select **DELETE**.
4. Press <OK> to confirm, and the entry will be deleted.

5.6 Delete the Entire Private Phonebook

1. Press <MENU> and <UP/DOWN> to select **PHONEBOOK** and then press <OK> to access the phonebook.
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.
3. Press <OK> to display <CONFIRM?>.
4. Press <OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

5.7 Check the Phonebook Usage

You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook.

1. Press <MENU> and <UP/DOWN> to select **PHONEBOOK** and then press <OK> to access the phonebook.
2. Press <MENU> and <UP/DOWN> to select **PB STATUS**.
3. Press <OK> to display how much of the phonebook is being used, for example <14/20 USED> means 14 entries are stored out of the total of 20 available spaces.

17

7.3.6 Rename the Handset

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**
2. Press <OK> and <UP/DOWN> to select **RENAME HS**.
3. Press <OK> and change the name of your handset, using <MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
4. Press <OK> to confirm.

7.3.7 Choose the Information to be Displayed in Idle

You can choose to display time or handset name in your idle screen.

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **HS DISPLAY**.
3. Press <OK> and <UP/DOWN> to select **HANDSET NAME** or **TIME**.
4. Press <OK> to confirm.

7.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **AUTO ANSWER**.
3. Press <OK> and <UP/DOWN> to turn on or off the auto answer feature.
4. Press <OK> to confirm.

7.4 Base Settings

7.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and "REGISTER" on the display.

Note: You cannot de-register the handset that you are currently using.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
3. Press <OK> and the display shows "PIN?".
4. Enter the 4-digit system PIN.
5. Press <OK> and the first handset number is displayed.
6. Press <UP/DOWN> to scroll through the list of registered handsets and select the number of the handset you want to de-register.
7. Press <OK> to confirm, and the chosen handset will be de-registered.

23

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, e.g. by dialling 141, **"WITHHELD"** will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, **"OUT OF AREA"** will display.

If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed.

6.1 View the Call List

All received calls are listed in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a <"> icon at the centre of the bottom line of the display.

1. Press <UP> to access the call list.
- OR Press <MENU> and <UP/DOWN> to show CALL LIST , then press **OK**.
2. Press <UP/DOWN> to select the desired entry.
3. Press <→> to view the caller's number if applicable.
4. Press <MENU>, <UP/DOWN> to show DETAILS, and then <OK> to display the date and time of the call. Press <OK> to go back to the previous screen.

6.2 Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 6.1.
2. Press <MENU> and <UP/DOWN> to show **ADD TO PB**.
3. Press <OK> and then enter the name.
4. Press <OK> and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press <OK> and <UP/DOWN> to select the ringtone.
7. Press <OK> to store the phonebook entry and return to the calls list.

18

7.4.2 Change the dial mode

You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises **PULSE** dialling.

Note: If PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**
2. Press <OK> and <UP/DOWN> to select **DIAL MODE**.
3. Press <OK> and <UP/DOWN> to select **TONE** or **PULSE** (The current setting is indicated by an asterisk to the right).
4. Press <OK> to confirm.

7.4.3 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are SHORT (100ms), MEDIUM (250ms) or LONG (the default value of 600ms).

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **FLASH TIME**.
3. Press <OK> and <UP/DOWN> to select your desired flash time (**SHORT**, **MEDIUM**, **SHORT**, **MEDIUM**, **LONG**, with the current setting indicated by an asterisk to the right).
4. Press <OK> to confirm.

7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press <OK> and enter the new system PIN again.
6. Press <OK> and enter the new system PIN again.

Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

7. Press <OK> to confirm

24

6.3 Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1 .
2. Press <MENU> and <UP/DOWN> to select **DELETE**.
3. Press <OK> to confirm.

6.4 Delete the entire list of the Call List

1. Follow Steps 1 and 2 in Section 6.1 .
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.
3. Press <OK> to display <CONFIRM?>.
4. Press <OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

7.5 Registration

If you have a multi-handset system, you already have more than one handset registered to your base unit.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

1. Press and hold <PAGE> on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed with in this time.

2. Press <MENU> and <UP/DOWN> to select **REGISTRATION**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press <OK> to confirm, and the display will show **SEARCHING**.

If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash.

7.6 Reset Your Phone

You can reset your phone to the default settings . After a reset, all your personal settings and call list entries will be deleted, but your phonebook remains unchanged.

1. Press <MENU> and <UP/DOWN> to select **DEFAULT**.
2. Press <OK> and you are requested to enter the 4-digit system PIN.
3. Enter the 4-digit system PIN.
4. Press <OK> to display **CONFIRM?**
5. Press <OK> to confirm, and the phone will be reset to its default settings.

7.7 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

7.1 Date and Time Settings

If you subscribe to Call Display the time and date settings will be automatically updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may need to set the year. (This is used to calculate the day for the time stamp on answering machine models only).

- 7.1.1 Change the Date Format
 1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
 2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
 3. Press <OK> and <UP/DOWN> to select **DATE FORMAT**.
 4. Press <OK> and <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
 5. Press <OK> to confirm.

- 7.1.2 Change the Time Format
 1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
 2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
 3. Press <OK> and <UP/DOWN> to select **TIME FORMAT**.
 4. Press <OK> and <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
 5. Press <OK> to confirm.

- 7.1.3 Set the Time
 1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
 2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
 3. Press <OK> and <UP/DOWN> to select **SET TIME**.
 4. Press <OK> and then enter the time information in 24 hour format.
 5. Press <OK> to confirm.

Note: If time has been set before, the current time will display, otherwise, **"HH:MM"** will display.

- 7.1.4 Set the Date
 1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
 2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
 3. Press <OK> and <UP/DOWN> to select **SET DATE**.
 4. Press <OK> and then enter the date information. The date entered will be in the date entered will be in the format you set in Section 7.1.1.
 5. Press <OK> to confirm.

Note: If date has been set before, the current date will display, otherwise, **"DD-MM-YY"** will display.

19

8 TROUBLESHOOTING

If you subscribe to Call Display the time and date settings will be automatically updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may need to set the year. (This is used to calculate the day for the time stamp on answering machine models only).

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

9 CLEANING AND CARE

You can set an alarm time on this phone. When an alarm is set, the <ALARM icon> is shown on the handset display. When the alarm time is reached, the <ALARM icon> and **"ALARM ON"** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.

C. During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.

D. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold **<TALK OFF>** to , while the alarm is sounding, the snooze function.

Note: A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.