

ALCOM Premium

ADT1308



Instruction Manual

INTRODUCTION

Thank you for purchasing our Alcom Premium Designer DECT phone ADT1308. This manual is designed to familiarize you with this phone. To get the maximum use of the phone, we suggest that you read this instruction manual carefully before using.

WHAT'S IN THE PACKING?

For Single Pack: Base Unit, Handset, Base power adaptor, Telephone line cord, Instruction Manual x1 and AAA rechargeable battery x 2

For Twin pack additional items: Handset, Charge cradle, AC adaptor x1 and AAA rechargeable battery x 2

IMPORTANT NOTICE:

1. Please charge the battery for at least 12 hours before using.
2. To keep the batteries charged, whenever you don't need to use the handset (such as overnight, or when you go out), leave the handset on the charge cradle.
3. When the unit is powered on initially, the date and time will be blinking, please set the date and time first

SAFETY INSTRUCTION

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

1. Read, understand and follow all warnings and instructions
2. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft damp cloth for cleaning.
3. Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
4. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
5. Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
6. Avoid moving or disconnecting this unit during a heavy storm, as there may be a remote risk of electric shock from lightning and thunder.
7. Unauthorized persons cannot open or service even if there is a defect with the unit. This will void the warranty, please send to service center for any defects.


FEATURES

- LCD 3 lines display and GAP Compatible
- Maximum 5 handsets can be registered to the same base unit, and maximum 4 bases per handset.
- 16 kinds of interface languages: English, German, French, Italian, Spanish, Portuguese, Russian, Turkey, Greek, Ukrainian, Polish, Hungarian, Swedish, Dutch, Danish, Norwegian
- Pre-dial and edit, Redial and pause
- 30 incoming numbers memories and 10 outgoing numbers memories
- 50 Phone book memories with 12 characters & 20 digits maximum
- Call transfer/Intercom call between two handsets and Conference between external call and two handsets
- 10 ringing tones for selection with Ringing tone/earpiece/hands-free volume adjustable
- Alarm clock
- Tone/Pulse dialing

- Flash time 100/300/600/1000ms selection
- LCD backlight
- Auto/manual call pickup/answer
- Call barring and Keypad lock
- Microphone mute
- IN USE and CHARGE LED indicator


LCD DISPLAY/LCD MAP/KEY PAD DESCRIPTION

LCD Map

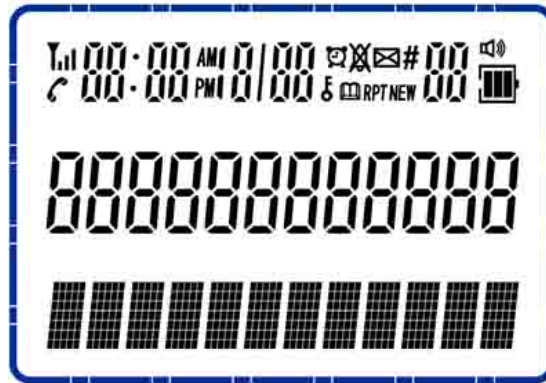




 
 


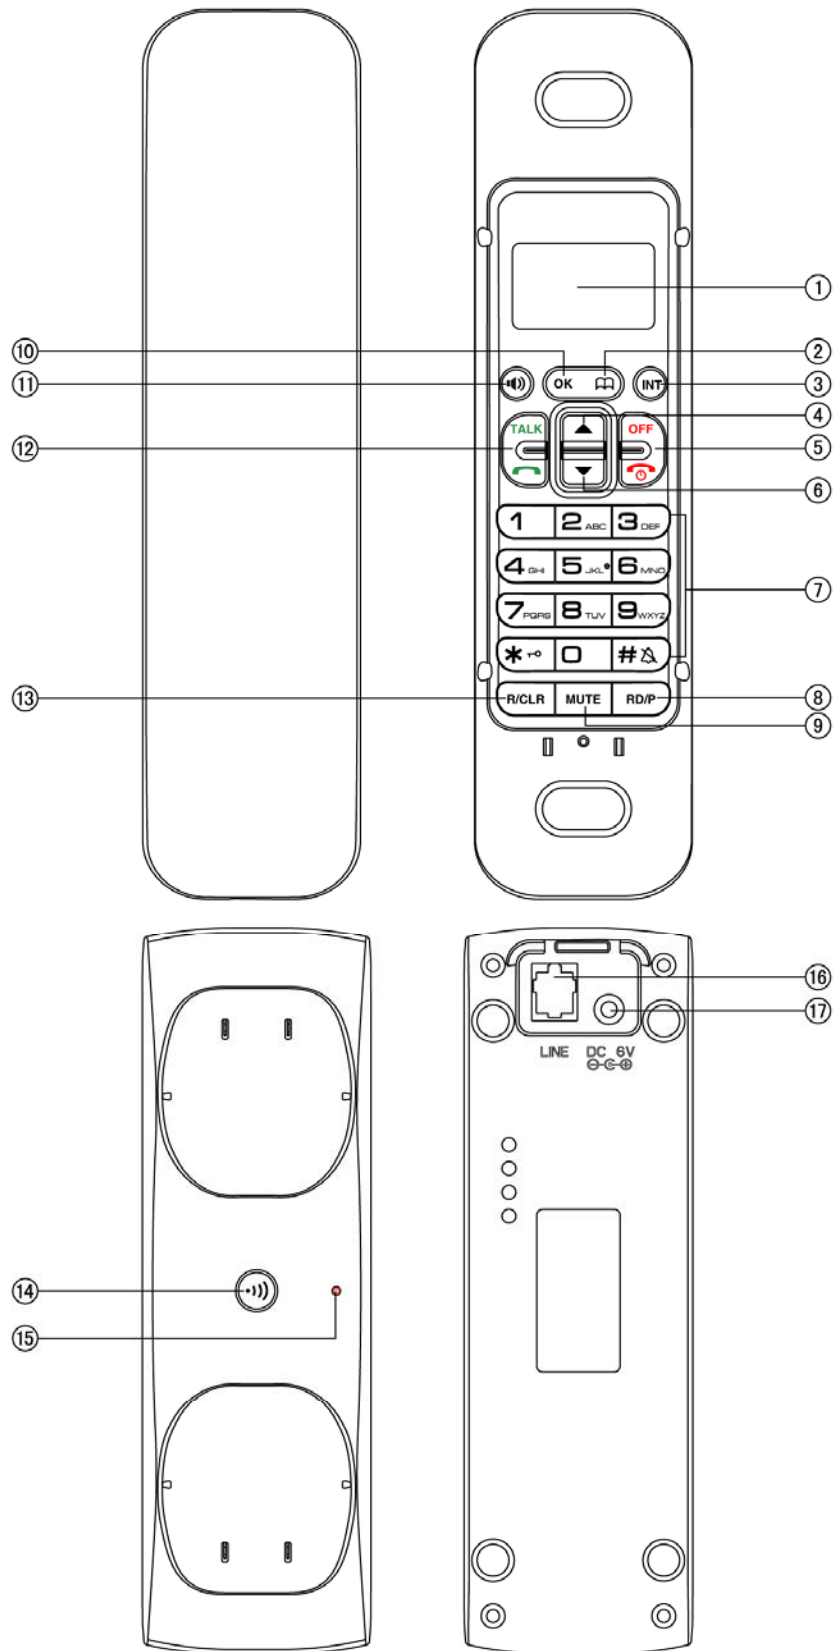Icon	Description	Function
	ANTENNA	The antenna icon will always be shown on the LCD, it indicates for Signal strength, flashes when registration to base is lost.
	OFF HOOK	The icon will be displayed when the user has pressed key
	KEYLOCK_IND	This icon will be displayed when the handset keypad is locked.
	ALARM_IND	The alarm icon will be shown as steady on when the alarm is set. The alarm icon will flash when the alarm is triggered.
	RING OFF	The icon will be displayed when external ring set to off.
	PHONEBOOK	Displayed when viewing the phonebook entries.
	VOICE MESSAGE	Displayed when a new voice message is received from the network.
RPT	Repeat CID	Displayed when the same missed calls received more than once.
NEW	NEW CID	Displayed when missed call hasn't been reviewed yet.
#	Sequence	When you press or key directly to scroll and review the numbers , it appears along with the digit to indicate the sequence of the call
	HANDSFREE	The icon will be displayed when press key to off-hook state.
	BATTERY	Displays charging indication and current battery status.
AM	A.M.	If time is morning 0 to 11:59:59' o'clock, the "AM" icon will be displayed.
PM	P.M.	If time is 12:00 to 23:59:59' o'clock, the "PM" icon will be displayed.

Key pad




- | | | | |
|--------|---------------------|--------|-----------------|
| ① LCD | ⑤ HANG UP/POWER OFF | ⑨ MUTE | ⑬ R/CLR |
| ② BOOK | ⑥ DOWN | ⑩ OK | ⑭ PAGE |
| ③ INT | ⑦ NUMERICAL KEY | ⑪ H.F | ⑮ IN USE/CHARGE |
| ④ UP | ⑧ RD/P | ⑫ TALK | ⑯ LINE |
| | | | ⑰ DC 6V |

Icon	Description	Function Definition
	TALK	When there is new call coming, press this key to receive the call.
	H.F	In standby mode press once to take the handset to hand free mode.
OK	SET/OK	Enter to the menu functions from idle mode; Confirming selections
	HANG UP /POWER ON(OFF)	In talk mode, press once to hang up the call; In standby mode, hold for 3 seconds to switch handset power on/off.
	Phonebook/BACK	This key is used to enter the phonebook both in standby mode and in talk mode; Exiting from a function during menu operation;
▲	UP	Scrolling up through lists and menu options; Increasing the volume; Review incoming number, outgoing number and phonebook number.
▼	DOWN	Scrolling down through lists and menu options; Decreasing the volume. Review incoming number, outgoing number and phonebook number.
R/CLR	Flash/Delete	The key is used to delete memory Delete the current input by a short pressing during menu edit. When on an external call, press R/CLR to get a fresh dialling tone or to access call waiting when you hear the signal. Press the key again to toggle between your two callers.
RD/P	Redial/Pause	The key will perform PAUSE function if pressed after any digit input both in talk mode and in standby mode. Redial the last dialed number, in off-hook state.
	Star/Lock	A Long press (3s) to activate/inactive keypad lock; To set up a conference call.
	Ring on/off	In addition to its use for text and number entry, Press and hold to switch the handset external call ring on/off
MUTE	Mute	In talk mode press the key to perform mute function.
	Page	Page the handset, Register the handset to a specified base.
INT	INT	To set up an internal call to another handset; To transfer an incoming call to another handset; To set up a conference call with an external line and an internal handset.

INSTALLATION

1. Plug the AC Adaptor output pin into the bottom of the base unit.
2. Plug the main adapter into mains socket with the switch on the socket set to off.
3. Switch on main power at the socket.
4. Take out the battery and open the battery compartment cover and insert batteries in the right polarity, then close the battery compartment cover. The battery position as follow:

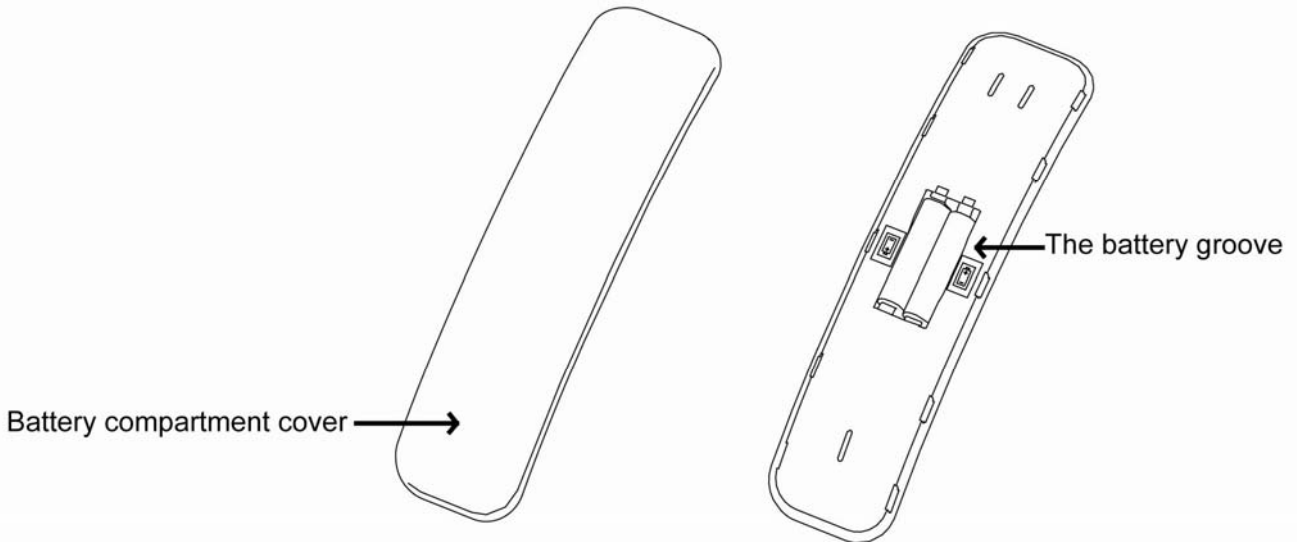

Warning: Use only approved rechargeable batteries supplied. Please do not use alkaline or non-rechargeable batteries. It may cause permanent damage to the product and void the warranty.

Menu Settings

In standby mode, press the **OK** key to enter the menu setting. Press **▲** or **▼** key to select the above items and then press **OK** key to enter, to go back to the previous menu by press **📖** key, to quit from setting menu by press **📞** key. The menu tree as follows

HANDSET MENU TREE	
PHONE BOOK	LIST
	NEW ENTRY
	EDIT RECORD
	DEL RECORD
	DELETE ALL
	MEM STATUS
CALL LOG	MISSED
	RECEIVED
	DIALED
BS SETTINGS	DELETE HS

	DIAL MODE	TONE
		PULSE
	FLASH TIME	100/300/600/1000MS
	MODIFY PIN	default 0000
	BS DEFAULT	default 0000
HS SETTINGS	ALARM	ON (SNOOZE ON/OFF)
		OFF
	RING SETUP	INT RING
		EXT RING
	TONE SETUP	KEY TONE
		BATTERY LOW
		RANGE ALARM
	LANGUAGE	
	HS NAME	
	AUTO ANSWER	ON
		OFF
	BARRING	default 0000
	DATE&TIME	
SELECT BASE	BASE 1,2,3,4 and AUTO	
HS DEFAULT	default 0000	
REGISTRATION	BASE 1(2,3,4)	

Note: The system will time out if you leave more than 30 seconds between key presses.

Handset Menu function 1: PHONE BOOK

Each individual Handset has its own phonebook, independent of each other handset.

Press **OK** key. Use **▲** or **▼** key to select **PHONE BOOK**. Then Press **OK** key to confirm.

➤ LIST

LCD displays **LIST**. This function allows the user to review the phone book record lists by using the **▲** or **▼** key.

When the desired number is show, press  or  key to dial out the number automatically.

➤ NEW ENTRY

Press **▲** or **▼** key to select **NEW ENTRY** item. This function allows the user to add an entry to the phone book.

1. Press **OK** key to enter. If a free phonebook entry is available, the cursor for the name flashes.
2. Enter the name using the numeric keys.

3. If you make a mistake, press **R/CLR** key to correct. Press **OK** key to confirm.
4. Enter the number and press **OK** key to confirm
5. Press **▲** or **▼** key to select the melody to be stored and press **OK** key to confirm.

Input method as follows:

press times key	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th
1	1	.	,	:	;	!	!	?	¿	*	#	&	%
2	A	B	C	2									
3	D	E	F	3									
4	G	H	I	4									
5	J	K	L	5									
6	M	N	O	6									
7	P	Q	R	S	7								
8	T	U	V	8									
9	W	X	Y	Z	9								
*	*												
0	space	0	-	+	=	-	()	“				
#	#												

➤ EDIT RECORD

Press **▲** or **▼** key to select **EDIT RECORD**. This function allows the user to modify a phonebook record.

1. Press **OK** key to enter, the first record in the phone book will be displayed.
 Press **▲** or **▼** key to select the designated record to change. Once a record has been selected, the

➤ DEL RECORD

Press **▲** or **▼** key to select **DEL RECORD**. This function allows the user to delete a phonebook entry.

➤ DELETE ALL

Press **▲** or **▼** key to select **DELETE ALL**. This function allows the user to delete all phonebook entries.



➤ MEM STATUS

Press **▲** or **▼** key to select **MEM STATUS**. If it shows 10/50, it means 10 records been stored out of 50 memories available in the phonebook.

Handset Menu function 2: CALL LOG

Press **OK** key, use **▲** or **▼** key to choose **CALL LOG**, press **OK** key to enter.

In **CALL LOG**

1. Press **OK** key to enter missed call lists, received call lists or dialed call lists.
2. The LCD will show the last record. (If no entries are available in the list, the LCD will be shown **EMPTY**).
3. Press **▲** or **▼** key to view other record.
4. When the desired number is shown, press  or  key to dial out the number automatically.

When the record is shown, press **OK** key, use **▲** or **▼** key to choose. Then press **OK** key to confirm.

1. **ADD TO PB** : this function allows the user to add an entry from the caller list to the phone book.
2. **DELETE** : this function allows the user to delete the currently selected entry from caller list.
3. **DELETE ALL** : this function allows the user to delete all numbers.

Note: In idle state, press **▲** key once to incoming records or press **▼** key to review outgoing records.

Handset Menu function 3: BS SETTINGS

 
 
The user is able to change the base setting in base settings menu, press **OK** key and use **▲** or **▼** key to select this item. Then you can do as below:

➤ DELETE ONE HANDSET

This function allows the user to delete a handset registration from the base.

1. Press **OK** key, the display will show **DELETE HS**
2. Press **OK** key to enter, the user will be prompted to enter the PIN code.
3. Input the correct 4-digit pin code using digit key (default PIN code is 0000). Press **OK** key to confirm.
4. Press **▲** or **▼** key to scroll the handset names/number list up and down.
5. Press **OK** key to confirm. The handset will be deleted from the base, and the display will show "UNREGISTERED".

DELETE ALL HANDSETS

1. Press and hold  key for 5s, **IN USE/CHARGE** LED will flash,
2. Press  key 7 times slowly, the **IN USE/CHARGE** LED flashes quickly.
3. Then **IN USE/CHARGE** LED will OFF and all the handsets would be unregistered from the base.

➤ DIAL MODE

The user can select to change the mode in which the base will dial.

1. Press **OK** key, then using **▲** or **▼** key to select **DIAL MODE**.
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select the **TONE** or **PULSE** dial mode.
4. Press **OK** key to confirm your selection.

Note: As required by your telephone lines or PABX systems you may need to change the dialing mode between Tone and Pulse.

➤ FLASH TIME

The user can select the flash time (100ms, 300ms, 600ms and 1000ms) to meet the telephone line or PABX requirement.

1. Press **OK** key, then using **▲** or **▼** key to select **FLASH TIME**.
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select the desired flash time from 100ms, 300ms, 600ms and 1000 ms.
4. Press **OK** key to confirm your selection.

➤ MODIFY PIN

Some functions (including handset delete and base default) require a PIN code. The default PIN is 0000, but you are able to change to your personal 4-digit PIN.

1. Press **OK** key, then using **▲** or **▼** key to select **MODIFY PIN**.
2. Press **OK** key to confirm, and the display shows **PIN?**
3. Enter the existing PIN code for the base and handset by using numerical keys, then press **OK** to confirm.
4. If the old code is validated, the display shows **NEW PIN**, enter a new PIN code (4 digits), press **OK** to confirm.
5. The display shows **REPEAT**, input the new PIN code again.
6. Press **OK** to confirm, the code will be stored with a confirmation tone.

➤ **BASE DEFAULT**

This function allows the user to restore the base setting to the factory default.

1. Press **OK** key, then using **▲** or **▼** key to select **BS DEFAULT**.
2. Press **OK** key to confirm.
3. The user will be prompted to enter the PIN code, the display shows **PIN?**, then press numerical keys to input code (default as 0000).
4. Press **OK** key to confirm. If the PIN code is validated all base settings will be returned to the factory default.


Handset Menu function 4: HS SETTINGS

The user is able to change a number of the settings for the handset to their own individual preferences.

Press **OK** key and use **▲** or **▼** key to select **HS SETTINGS**. Then you can do as below.


➤ **ALARM**

The user can set the alarm on the handset and adjust the alarm settings, to give an alert at a programmed time of every day.

1. Press **OK** key, the first sub-menu is **ALARM**.
2. Press **OK** key to confirm.
3. Press **▲** or **▼** key to select **ON** or **OFF**, selection of **OFF** will turn the alarm off, and the user will be back to the **ALARM** menu, selection of **ON** option will turn the alarm on, and the user will be requested to set the alarm time.
4. After selecting **ON**, press **OK** key to start the settings of alarm, "12-00" displayed with "12" is blinking.
5. Press **▲** or **▼** key to change the hours, press **OK** key to confirm, use the same method to select minutes, AM/PM.
6. After select the alarm time, press **OK** key, the user will be presented with a further option to select to **ON** or **OFF** to enable or disable the snooze function on the alarm by using **▲** or **▼** key.
7. Press **OK** key to confirm your selection.
8. When the alarm is set, the  will appear on the top of the display.

Notes:

1. In idle state, the alarm will ring at very sharp time you have set.
2. When alarm rings, you can switch it off by pressing any key of the handset.
When a call comes during the alarm it will be terminated.
3. Re-enter the alarm setting menu option and select **OFF**.

4. If the SNOOZE is set ON, the alarm will be repeated about every 5 minutes for about nine times, with the alarm icon continuing to flash. During the alarm, press any key except  key to stop the alarm, and will begin to ring after 5 minutes.
5. If the SNOOZE is set OFF, the alarm will sound once for 45 seconds.

➤ RING SETUP

The user is able to change the handset ringing on Internal calls and External calls. There are 10 ringer melodies and 5 different volume levels can be set.

1. Press **OK** key, then using **▲** or **▼** key to select **RING SETUP**.
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select the **INT RING** and **EXT RING** setup.
4. Press **OK** key to confirm.
5. Press **▲** or **▼** key to select the **MELODY** and **VOLUME** setup.


If select **MELODY**,


- a) Press **OK** key to confirm.
- b) Press **▲** or **▼** key to select desired melody, the corresponding melody sound can be heard with the selection.
- c) Press **OK** key to confirm your selection.

If select **VOLUME**,

- a) Press **OK** key to confirm.
- b) Press **▲** or **▼** key to select desired ringer volume **1- 5**, if you want to switch off select **OFF**
- c) Press **OK** key to confirm your selection.

Notes:

1. If you select ring OFF for INT RING, there will be no icon display on LCD, and when transfer call to this unit, it will not ring.
2. If you select ring OFF for EXT RING, there will be a ringing off icon  display on LCD and when there is an incoming call, the unit will not ring.

Shortcut key: press and hold **#**  key to switch the handset external call ring on/off.

➤ TONE SETUP

The user is able to change the handset tone settings.

1. Press **OK** key, then using **▲** or **▼** key to select **TONE SETUP**.
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select the **KEY TONE** and **BATTERY LOW, RANGE ALARM** setup.
4. Press **OK** key to confirm.
5. Press **▲** or **▼** key to select the **ON** or **OFF** to enable/disable the sounding of the beep respectively.
6. Press **OK** key to confirm your selection.

Notes:

1. If you turn the tone on for key tone, a beep for key tone will sound when a key is pressed on the handset.
2. If you turn the tone on for battery low warning, a beep will sound for battery low.
3. If you turn the tone on for the out of range warning, a beep will sound when the handset goes out of range

of the base unit.

➤ LANGUAGE

The handset will support up to 16 pre-defined languages.

1. Press **OK** key, then using **▲** or **▼** key to select **LANGUAGE**.
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select the language from **ENGLISH** (English), **DEUTSCH** (German), **FRANÇAIS** (French), **ITALIANO** (Italian), **ESPAÑOL** (Spanish), **PORTUGUES** (Portuguese), **РУССКОЕ** (Russian), **TÜRKÇE** (Turkey), **ΕΛΛΗΝΙΚΑ** (Greek), **УКРАЇНСЬКА** (Ukrainian), **POLSKI** (Polish), **MAGYAR** (Hungarian), **SVENSKA** (Swedish), **NEDERLANDS** (Dutch), **DANSK** (Danish) and **NORSK** (Danish). Each language will display in its own native translation.
4. Press **OK** key to confirm your selection.

➤ HANDSET NAME

The operation will allow the user to change the handset name

1. Press **OK** key. Using **▲** or **▼** key to select **HS NAME**,
2. Press **OK** key, when the function is selected, the screen will display the current handset name.
3. Enter the handset name.
4. If you make a mistake, press **R/CLR** key to correct.
5. Press **OK** key to confirm.

➤ AUTO ANSWER

The Handset can be set to answer an incoming call automatically by simply pick it up from the charging cradle.

The user is able to select to enable/disable this auto answer feature.

1. Press **OK** key. Using **▲** or **▼** key to select **AUTO ANSWER**,
2. Press **OK** key to enter.
3. Press **▲** or **▼** key to select **On** or **OFF**
4. Press **OK** key to confirm your selection. Exit from this sub-menu and return the user to the **AUTO ANSWER**.

➤ BARRING

You can set 4 numbers (up to 4 digits each) for call barring.

When the call barring is "ON", any numbers beginning with the programmed digits will not be able to be dialed out, and LCD will display **CALLS BARRED**

1. Press **OK** key. Using **▲** or **▼** key to select **BARRING**,
2. Press **OK** key the user will be prompted to enter the PIN code, input 4-digit code (defaulted as 0000).
3. Press **OK** key to enter, then using **▲** or **▼** key to select **ON** or **OFF**, press **OK** to confirm.
4. If select **ON**, the display shows **NUMBER 1**, press **▲** or **▼** to choose **NUMBER i(i=1~4)**.
5. Then press **MENU/OK** key to confirm, using the numerical key to input number (maximum 4 digits) which you want to bar. (For example: if you set barring number is 1234, then the numbers begin with 1234 will be not allowed to be dialed out, and LCD display **CALLS BARRED**.)

➤ **DATE & TIME**

The user is able to set the date and time on the handset, by selecting the following option.

1. Press **OK** key. Using **▲** or **▼** key to select **DATE&TIME**,
2. Press **OK** key and the last two digits of the year flashes.
3. Edit the year, month, date and time by pressing **▲** or **▼** key.
4. Press **OK** key to confirm the setting, and return to the **DATE & TIME** menu.

Notes:

1. When the unit is powered on initially, the date and time will be blinking, please to set the date and time first.
2. Date and time will be automatically set when the caller ID message is received in FSK mode.
3. Year must be set manually.

➤ **SELECT BASE**

The handset can be registered to more than one base (up to a maximum of 4), and you can select which base you want the handset to operate with.

1. Press **OK** key, then using **▲** or **▼** key to choose **SELECT BASE**.
2. Press **OK** key and the LCD displays **BASE 1 +**.
(If Base unit is already linked with a Handset it will be shown with "+").
3. Press **▲** or **▼** to select base (BASE 1~4) or AUTO.
4. Press **OK** to begin searching, if you hear a sound of "di-du-di", means linked successful.

➤ **HANDSET DEFAULT**

This function allows the user to restore the handset setting to the factory default.

1. Press **OK** key, then using **▲** or **▼** key select **HS DEFAULT**.
2. Press **OK** key to confirm.
3. The display shows **PIN?**, then key in the PIN code (default 0000).
4. Press **OK** key to confirm. If the PIN code is validated all handset settings will be returned to the factory default.

Handset Menu function 5: REGISTRATION

 
Maximum 5 handsets can be linked to the same base and Maximum 4 bases can be linked to the same handset by following the procedure below.

1. In standby mode, press **OK** key, then using **▲** or **▼** key select **REGISTRATION**.
2. Press **OK** key to enter. Press **▲** or **▼** key to select BASE from **BASE1**, **BASE2**, **BASE3** or **BASE 4**.
3. Press **OK** key to confirm, LCD displays **PIN?** Then enter the pin code (defaulted as 0000, if input wrong number, press **R/CLR** to delete).
4. When finished press **OK** key to confirm. LCD display **SEARCHING**, then press and hold ***11)** key in the BASE UNIT until you has get **DI-DU- DU-** sound. The handset and base have been registered successfully.

Notes:



1. If the handset fails to register with the base, it will return to standby mode.
2. You can repeat the above steps to register another handset for the same base, and the successfully



registered handset will displays **HS2** or **HS3** on the LCD according to the registration sequence.




3. Press  key on base unit to locate the handsets.

OPERATION

Speakerphone operation & volume control

Press  key once to obtain a dial tone, dial your number, when you hear the other party start your conversation. You can also answer an incoming call by pressing the  key once.

During the speakerphone operation, the user can adjust the speaker volume level by pressing the  or  key .Total 6 levels for selection.

If you press  key to use earpiece, you can press the  or  key to adjust the earpiece volume, total 5

Mute the MIC

During a call, press **MUTE** key once to mute the MIC and **MUTE** will show on LCD. Press **MUTE** key again to get back to the call and the **MUTE** will disappear.

Caller ID – type I & II

➤ TYPE I

After you have applied the caller ID service, you can see the caller party phone number during an incoming ring.

➤ TYPE II

During the conversation, the phone number of the incoming call of the second caller can be seen in the unit.

Note: Above caller ID services must be subscribed /supported by your telephone service provider.

Flash function

When a number is dialled and the line is busy, press **R/CLR** key and then press **RD/P** key to dial it out again or enter a new number.

When on an external call, press **R/CLR** to access call waiting (2nd Call) when you hear the signal.

Press the key again to toggle between your two callers.

Note: Above call waiting services must be subscribed /supported by your telephone service provider.



Pause

Press **RD/P** key will insert a time delay of 3.6 seconds in a dialing sequence.



Pre-dialing

The unit has pre-dialing function, you may enter and edit the number before dialing out.

The following procedure describes how to use this function:




1. In idle mode, enter the number you want to dial. For wrong entries you can press **R/CLR** key to correct the number.
2. Press  or  key once, the unit will dial out the number show on the LCD.

Redial function

1. Press  key or  key,
2. Press **RD/P** key, the last dialed number will be dialed again.

Intercom



The intercom feature is activated by pressing the **INT** key.

1. In idle mode, press **INT** key once.
2. The user will be prompted to select the number of the internal handset with which you wish to connect.
3. The destination handset will ring. Press  or  key to enter conversation mode. To end intercom mode, either handset can hang up the call by pressing  key.





Note: The destination handset will stop ringing if it is not answered within 30 seconds.

Call transfer

During a call it can be transferred to another handset by below procedure.

1. During a external call, press **INT** key once, you will be prompted to select the number of the internal handset with which they wish to connect.
2. The destination handset will ring with the melody defined for an internal call.
3. Press the  or  key of the other handset to accept the call.
4. The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be hanging up and the external call will now be connected to the second handset.
5. Or if the other handset does not answer, you can get back to the external call by pressing **INT** key again or you will automatically be reconnected to the outside call after 30 seconds.


3 Party conference call


1. When a call comes, on HS1 press  or  key
2. Then on HS1 press **INT** key once, you will be prompted to select the number of the internal handset with which you wish to connect, e.g. HS2
3. The destination handset (HS2) will ring.
4. On HS2 Press  or  key to accept call.
5. On HS1 Press the *** 10** key then the external caller and the 2 handsets can talk together.

Lock/Unlock the Keypad

To lock the keypad

Press and hold the *** 10** key for about 2 seconds.

You will hear a beep tone, the icon  will appear on the top of display, "HS LOCKED" will appear on LCD.

*Note: While the keypad is locked, all the keys will not function except  key to answer an incoming call and *** 10** key to unlock.*

To unlock the keypad

Press and hold the *** 10** key for about 2 seconds.

You will hear a beep tone, the icon  will disappear from the display and it will go back to idle mode.

Trouble shooting	
Problems	Actions
No Dial Tone	Check if the base unit is connected to the Telephone line and ensure the line is functional.
Not able to get through automated phone services. Eg. Phone banking	Please check if your phone is set to TONE dialing Set PULSE mode only for older type of phone lines. Please check with your operator for required setting
Only can receive calls. Cannot make outgoing calls.	Check if call barring is activated
The phone rings once then is interrupted, but dialing function works well.	Check if the connector of telephone line is moist.
	Check if too many paralleled phones are used together. Remove or replace some of them.
Noise during conversation	Check if the wall socket of telephone line is moist or rusty. Replace accordingly.
Phone does not ring for incoming calls	Check if the wall socket of telephone line is moist or rusty. Replace accordingly
	Check if RINGER is OFF
Handset has no display	Check if the rechargeable batteries are properly charged
	Check if the charging contacts are clean in both the handset and base.
“Base 1” blinks in handset	Check and make sure the AC adaptor for the base unit is ON and working
	Check if the registration with base is lost. If so register again with the base unit
	Check if you are out of range from the base unit. Move closer to the base unit.
Caller ID does not appear	Check if you have subscribed for Caller ID service and is active

Note: Due to continuous product development all features and specifications are subject to change without prior notice.

For more Information on Warranty and Product Support please call

Alcom Electronics Pte Ltd Singapore - Head Office

Phone: (65) 68412668

Fax : (65) 68412628

Email: support@alcom.com.sg

www.alcomonline.com

Alcom Networks Sdn. Bhd. Malaysia - Branch office

Phone: (60) 3-9286 2888

Fax : (60) 3-9286 3888

Email: support@myalcom.com

www.myalcom.com
