


MBP10 - Quick Start Guide

For a full explanation of all features and instructions, please refer to the User's Guide.


1 Setting up your digital baby monitor

A Removing the battery cover




- Turn the battery cover screw 90 degrees in a counterclockwise direction.
- Lift off the battery cover.

B Installing the batteries for the Parent unit

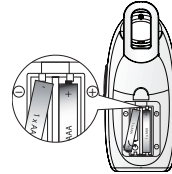


- Do not install non-rechargeable batteries! Use only AAA rechargeable batteries of the same type.
 - Insert the batteries as shown, replace the battery cover and turn the battery cover screw 90 degrees in a clockwise direction.
- Note: Charge the batteries for 15 hours before using without mains power.

C Connecting the power supply for the parent unit

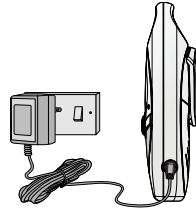



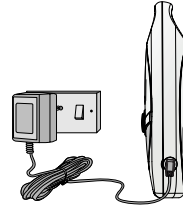

- Only use the enclosed adapter (6V DC/300mA).

D Connecting the power supply for the baby unit



- Only use the enclosed adapter (6V DC/300mA).

2 Basic operation of the keys

Parent unit		
	ON/OFF button	Press to switch on the unit. Press and hold to switch off the unit.
	UP/DOWN buttons	Press to increase/decrease the volume level.
Baby unit		
	ON/OFF button	Press to switch on the unit. Press and hold to switch off the unit.
	PAGING button	Press and hold for 2 seconds to start paging and locate parent unit.

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service at:
0845 218 0890 in the UK
(65) 68412668 in Singapore



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.
© Motorola, Inc. 2009. All rights reserved.

Printed in China
Version 1.0

