



motorola

Digital Cordless Telephone
Mobile Connectivity with Bluetooth® Wireless
Technology



Motorola IT.6

For IT.6.1, IT.6.2, IT.6.3 and IT.6.4



Warning: Charge the handset for 24 hours before use.

Welcome...

to your new Motorola IT.6 Digital Cordless Telephone!

- The Bluetooth feature allows you to wirelessly connect up to 2 mobile phones and 1 headset to the IT.6 and enjoy unique services and features.¹
- Make and receive calls either over the home line or mobile network using the IT.6 handset.¹
- Conveniently charge your mobile phone via a USB socket on the IT.6 base, while simultaneously taking mobile calls on the IT.6 handset (USB cable not included).
- While already on a call using the home line or mobile network, use the IT.6 handset to answer a second call from the other line (mobile network / home line) and hold a 3-way call between all 3 callers.
- Optimise the range around the home, by positioning the DECT base and mobile phone where the mobile signal is strongest.²
- Each handset stores up to 1000 name and numbers in the phonebook.
- Copy up to 500 contacts to the IT.6 base from each mobile phone connected, each contact can have up to 3 numbers and can be accessible from any handset.¹
- Synchronise with your mobile phones Caller ID information, so you can see who is calling your mobile from your IT.6 handset.
- Register up to 8 mobile phones to the DECT base with 2 active mobiles at one time.¹
- Speakerphone for hands-free conversations.
- ECO and intelligent charging features ensure that your IT.6 Digital cordless phone is not only kinder to the environment, but helps you save on energy bills too.
- ECO PLUS function turns off the transmitted power when the telephone is in standby mode.

Need help?

If you have any problems setting up or using your IT.6, please contact Customer Services on (65) 68412668. Email: support@alcom.com.sg. Alternatively, you may find the answer in the 'Help' section at the back of this guide.

¹Compatible Bluetooth mobile phone required.

²Mobile phone must be positioned within 10m of the IT.6 base.

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Got everything?

- Cordless handset
- Cordless base
- Power adaptor for the base
- Telephone line cord

If you have purchased a 1T.6 multiple pack you will also have the following additional items:

- Cordless handset & charger
- Power adaptor for the charger



ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone. A holistic view that focuses on both social and environmental responsibility. A passion and a shared point of view.

The right thing to do.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 10% post consumer recycled content plastic.
- Energy efficient performance (meets or exceed EU code of conduct performance requirements).
- ECO PLUS function turns off the transmitted power when the telephone is in standby mode, please refer to page 45.

1.	Getting started	8
2.	Getting to know your phone	12
3.	Bluetooth	19
3.1	Bluetooth wireless technology	19
3.2	Pair your IT.6 with your mobile	19
3.3	Manage your devices	20
3.4	Change the Bluetooth PIN	20
3.5	Set the phones Bluetooth name	20
3.6	Pair a Bluetooth headset.....	20
3.7	Sync or update the phonebook from a mobile.....	20
3.8	Manage the mobile phonebook privacy settings.....	21
3.9	Manage your mobile phone calls list.....	21
4.	Using the phone	22
4.1	Switch the handset on / off.....	22
4.2	Calls	22
4.2.1	Make a call.....	22
4.2.2	Preparatory dialling.....	22
4.2.3	Make a call using quickdial keys	22
4.2.4	End a call	22
4.2.5	Receive a call from the home line	22
4.2.6	Receive a mobile call on the cordless handset.....	23
4.2.7	Call a second external line with the home line / mobile network.....	23
4.2.8	Answer a second external line with the home line / mobile network	23
4.3	Adjust the earpiece volume.....	23
4.4	Mute.....	23
4.5	Intercom.....	24
4.5.1	Make an internal call	24
4.5.2	Receive an internal call	24
4.5.3	Transfer a call.....	24
4.5.4	3-way conference call	24
4.6	Hands-free speakerphone.....	25
4.6.1	Make a hands-free call	25
4.6.2	Answer a call hands-free	25
4.6.3	Switch to hands-free during a call	25
4.6.4	Adjust the hands-free volume.....	25
4.7	Redial	25
4.7.1	View or dial an entry.....	25
4.7.2	Copy a Redial list number to the phonebook.....	25
4.7.3	Delete an entry.....	26

4.7.4	Delete all entries	26
4.8	Lock / unlock the keypad	26
4.9	Paging / Find handset	26
5.	Phonebook	27
5.1	Store a name and number	27
5.2	View the details or dial an entry.....	28
5.3	Search an entry	29
5.4	Edit a name and number	29
5.5	Assign a ringtone	29
5.6	Assign a quickdial number	30
5.7	Clear a quickdial number	30
5.8	Access the phonebook during a call.....	30
5.9	Assign a birthday or anniversary.....	30
5.10	Assign a phonebook entry to the Call block list.....	31
5.11	Delete an entry	31
5.12	Delete all entries	31
5.13	Do Not Disturb (DND) exceptions.....	31
6.	Calls list	32
6.1	New calls alert	32
6.2	View different Calls lists.....	32
6.3	Dial a number in the Calls list	33
6.4	Copy a Calls list number to the phonebook	33
6.5	View the details of an entry.....	33
6.6	Assign a phonebook entry to the Call block list.....	34
6.7	Delete an entry	34
6.8	Delete the entire Calls list.....	34
7.	Date & Time	35
7.1	Date and time	35
7.2	Date format	35
7.3	Time format.....	35
8.	Do Not Disturb.....	36
8.1	Set DND mode	36
8.2	Turn Allow mode on / off	36
8.3	Set ring delay	36
8.4	Set the frequency.....	36
9.	Call block.....	37
9.2	View a number.....	37
9.3	Delete a number	37
9.4	Delete all numbers.....	37

10. Call Bar.....	38
10.1 Turn Call Bar on / off.....	38
10.2 Add or edit a number.....	38
10.3 Set the Call Bar PIN.....	38
11. Room Monitor.....	39
11.1 Switch Room Monitor On.....	39
11.2 Set the receiver unit.....	39
11.3 Change the monitor level.....	40
12. Alarm.....	41
12.1 Create an alarm.....	41
12.2 Switch alarm on / off.....	41
12.3 Set the alarm time.....	41
12.4 Set the frequency.....	41
12.5 Set the alarm ring.....	42
12.6 Edit alarm name.....	42
12.7 Delete an alarm.....	42
13. Sounds.....	43
13.1 Ringer volume.....	43
13.2 Ringtone.....	43
13.3 Set the sound profile.....	43
13.4 Key beep.....	44
13.5 Base beep.....	44
14. Settings.....	45
14.1 ECO mode.....	45
14.2 ECO PLUS.....	45
14.3 Handset name.....	45
14.4 Display settings.....	45
14.4.1 To change the display contrast.....	45
14.4.2 Set the backlight.....	46
14.5 Call settings.....	46
14.5.1 Auto conferencing.....	46
14.5.2 Set the different calling codes.....	46
14.5.3 Set the auto prefix.....	46
14.5.4 Recall mode.....	47
14.5.5 Dialling mode.....	47
14.5.6 Switch auto clock on / off.....	47
14.5.7 Set the outgoing line.....	48
14.6 Switch call alert on / off.....	48
14.7 Restore default settings.....	48
14.8 Registration.....	48

14.8.1	Manually register an additional handset.....	49
14.8.2	De-register a handset.....	49
14.9	Default settings.....	50
15.	Calendar.....	51
15.1	Add a new event.....	51
15.2	Switch off reminder ring.....	51
15.3	Edit an event.....	52
15.4	Delete an event.....	52
16.	Note pad.....	53
16.1	Create a note.....	53
16.2	Edit a note.....	53
16.3	Turn a note on / off.....	53
16.4	Delete a note.....	53
17.	Wallpaper.....	54
17.1	Set a wallpaper.....	54
18.	Help.....	55
19.	General information.....	57

1. Getting started

IMPORTANT

Do not place your IT.6 in the bathroom or other humid areas.

Location

You need to place your IT.6 base within 2 metres of the mains power socket and telephone wall socket so that the cables will reach. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Make sure that it is at least 1 metre away from other electrical appliances to avoid interference. Your IT.6 works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.


HANDSET RANGE

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete and stone walls can severely affect the range.

BLUETOOTH WIRELESS RANGE

Once your IT.6 and mobile phone are connected (see page 19), by positioning the IT.6 base and mobile phone where the mobile signal is strongest you can optimise the mobile range. The mobile phone must be within 10m of the IT.6 base. If you go out of range when making a call on the IT.6, handset using the mobile network, you will hear a double beep. If you don't move back into range the call will be disconnected.

SIGNAL STRENGTH

The  icon on your handset indicates that you are within range of the base and the signal strength, the more bars visible the better the signal. If you are on a call and go out of range, you will hear a warning beep.

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.


Setting up


IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.


Connecting the base

1. Plug the telephone line cord into the socket marked  on the underside of the base.

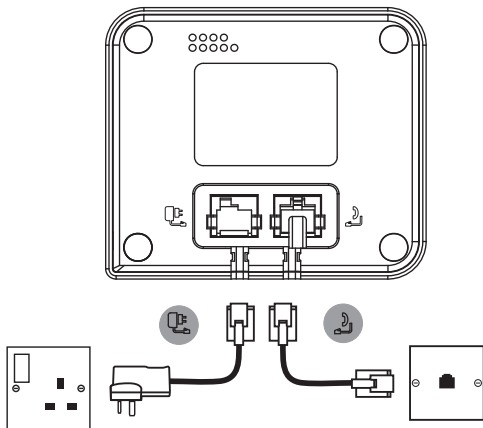

2. Plug the power adaptor into the socket marked  on the underside of the base and plug the other end into the mains power wall socket. Switch on the mains power.

Charging the handset

1. If you are charging the battery for the first time, place the handset on the base to charge for at least 24 hours continuously.
2. When the handset is fully charged,  icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.


NOTE



You cannot access the battery in the handset. Do not attempt to remove the battery, as you may damage the phone. If you need to replace the battery, contact customer service helpline found in this user guide.

Connecting the handset and charger


(for multi-pack only)

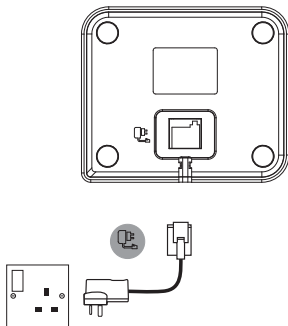If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.



1. Plug the power adaptor into the socket marked  on the underside of the charger and plug the other end into the mains power wall socket.
2. If you are charging the battery for the first time, place the handset on the charger to charge for at least 24 hours continuously.
3. When the handset is fully charged,  icon will appear steady on the display. The display will show the date and time to indicate that it is registered to the base.

BATTERY LOW WARNING

If  icon flashes on the display and you hear a warning beep every 30 seconds during a call, you will need to recharge the handset before you can use it again.

When charging,  icon will scroll on the display. Once fully charged scrolling will stop.

INTELLIGENT CHARGING

Your IT.6 supports Intelligent Charging, this means when the handset is fully charged, the base will automatically detect this and stop drawing power from the mains to charge the handset, saving unnecessary power usage.

BATTERY PERFORMANCE

In ideal conditions, a fully charged battery should give up to 7 hours talk time or up to 100 hours standby time on a single charge.¹

Note that a new battery does not reach the full capacity until it has been put to normal use for several days.

To keep your battery in the best condition, leave the handset off the base for a few hours at a time.

Running the battery right down at least once a week will help it last as long as possible.

The charge capacity of the rechargeable battery will reduce with time as it wears out, giving the handset less talk / standby time. Eventually it will need to be replaced, please contact customer service helpline found in this user guide.

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. The handset may become warm during charging. This is normal.

¹All talk and standby times are approximate and depend on features selected and usage pattern.

Date and time

If you have subscribed to a Caller ID Service, the date and time is set automatically for all handsets when you receive your first call.

If you do not have a Caller ID service, you can set the date and time manually.

1. Press **Menu**, scroll to **Date & Time** and press **OK**.
2. **Enter Date** is highlighted. Press **OK**.
3. Enter the date using the format DD-MM-YYYY e.g. 04-08-2013 for 4 August 2013 and press **OK**.
4. Scroll down to **Enter Time** and press **OK**.
5. Enter the time (hh:mm) and press **OK**.
If the current time format setting is 12 hour, press ***_{int}** to select **am** or **pm**.
6. Press **⏪** to return to standby.


NOTE

The date and time is retained during a power failure or when the battery is discharged. You can also set the time and date format, see page 35.

Your IT.6 is now ready for use.

2. Getting to know your phone

Overview of your handset

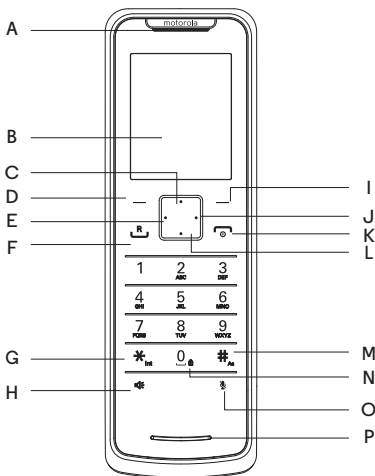

A Earpiece

B Display

See page 14 for an overview of the display icons.

C Phonebook / Scroll up / Volume up

In standby mode, press to open phonebook menu.

Scroll up through lists and menus.

Increase the earpiece and hands-free volume.

When the phone is ringing, press to increase the handset ringer volume.

D Menu / OK / Left softkey

In standby mode, press to open the Menu.

Press to select menu options and to confirm a displayed option.

E Scroll Left

Scroll left through the menu.

Moves the cursor to the left during editing.

F Talk / Recall

Make or answer a call.

Use recall (R) functions.

When on an external call, press Recall to get a fresh dialling tone or to access call waiting when you hear the signal. Press the key again to toggle between your two callers.

G * / Intercom

Dial a *.

Press to make an internal call.

H Hands-free

Activate and deactivate hands-free during a call.

IMPORTANT

Hands-free activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

I Redial / Clear / Right softkey

In standby press to enter the redial list.

Press to delete text or numbers.

Press and hold to delete all text.

Select the function displayed on the handset screen immediately above key.

J Scroll right

Scroll right through the menu.

Moves the cursor to the right during editing.

K End call / Exit / Switch Handset on / off

End the call.

Exit menu or operation.

Press and hold to switch the handset on / off

L Calls List / Scroll down / Volume down

In standby mode, press to go to the Calls list.

Scroll down through lists and menus.

Decrease the earpiece and hands-free volume.

When the phone is ringing, press to decrease the handset ringer volume.

M # / Pause / Change case

Press and hold to enter a pause (P) when pre-dialling or storing numbers.

Press to switch between upper and lower case during text editing.

N Space / Key lock

Press to inset a space in text / number editing

Press and hold to lock / unlock the keypad.


O Mute

During a call, press to turn mute on / off.

P Microphone

Handset LCD Display





 Steady when the handset is registered and within range of the base. Flashes when handset is out of range or searching for the base.

ECO Displays when ECO mode is on.

 Displays when ECO PLUS is on.


¹ Bluetooth function is activated.


 Bluetooth headset is paired.

 Displays when you have missed calls in the Calls list.¹

 Handset ringer volume is Off.

 Displays when in hands-free mode.

 Displays when Do Not Disturb is activated.


 Displays when you have new voicemails.²


 The alarm clock has been set.


NOTE

Some icons replace others along the top of the display depending which function is activated.

The approximate power levels of your battery are indicated as follows:

 Battery is fully charged

 Battery is partially charged


 Battery is running low

 Flashes when the battery is almost fully discharged.

¹For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

²This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

Overview of the base

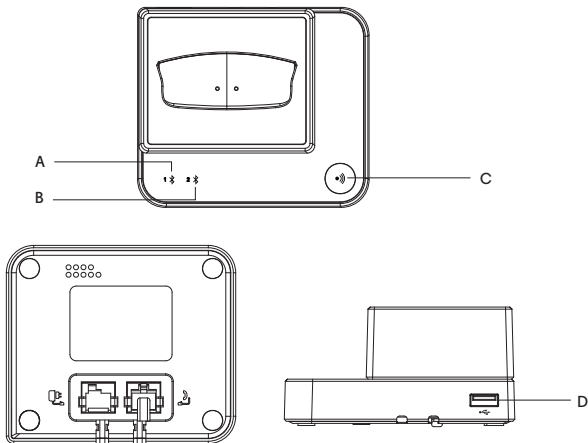

A Bluetooth 1 LED

B Bluetooth 2 LED

C Page / Find

In standby, press to ring the handset(s).

Press and hold to enter registration mode when registering handsets.

D USB connector


To charge your mobile phone (USB cable not included).

Navigating the menu

Your IT.6 has an easy to use menu system on the handset.

Each menu has a list of options, which you can see on the menu map on the following page.


When the handset is switched on and in standby:

1. Press the left softkey **Menu**. The main menu is opened.
2. Then use  button to scroll up / down / left / right through the menu.
3. Soft key options **OK** and **Back** are displayed.
Press the left softkey **OK** to open a sub-menu or validate an option.
Press the right softkey option **Back** to go back to the previous menu level, correct a character or cancel an action.

Moving through the menu

Throughout this guide the words 'scroll to' will be used whenever you need to scroll up / down / left / right in the product menu.

If you need to press the up / down / left / right options directly then the words UP / DOWN / LEFT or RIGHT will be used. See below.

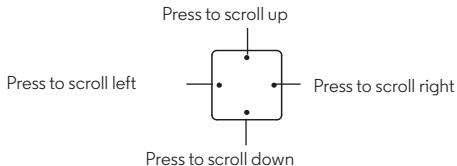

NOTE

If no buttons are pressed for 30 seconds or the handset is placed on the base / charger, the handset returns to standby.

Menu map

Phonebook

Press Options:

Add Entry
Show Details¹
Edit Entry¹
Search
Delete All¹
Sort by

*If an entry is stored
highlight the entry and
press Options.*

Add Entry
Show Details
Edit Entry
Search
Select Ringtone
Quickdial
Birthday
Anniversary
Call Block
Delete
Delete All
Do Not Disturb
Sort by

Calls List

Press Options:

Save Number
Show Details
Call Block
Delete
Delete All
Show
All Calls
Missed Calls
Received Calls
Dialled Calls

*If no entry is stored press
Options:*

All Calls
Missed Calls
Received Calls
Dialled Calls

Date & Time

Enter Date
Enter Time
Date Format
Time Format

Do Not Disturb

On/Off
Start/End Time
Allow
Frequency

Call Block

Press Options

Add Entry
Show Details
Delete
Delete All

Call Bar

Call Bar Mode
Call Bar Number
Set PIN

Room Monitor

On
Call To
Internal
External
Enter Number
Select Number
Level
Low

Medium
High

Alarm

Create alarm
Enter name

*Once an alarm is
created:*

On/Off
Enter Time
Frequency
Once
On Daily
Weekly
Mon-Friday
Sat-Sun
Alarm Ring
Edit Name
Delete

*Delete will only be
displayed if an alarm has
been saved.*

Sounds

Ringer Volume
Ringtone
Home
Mobile 1
Mobile 2
Profiles
Clear
Bright
Pure
Loud
Bass
Key Beep
Base Beep

Settings



ECO
ECO PLUS
Handset Name
Display
Disp. Contrast
Backlight
Call Settings
Conference Call
Country Code
Local Code
Auto Prefix
Recall Mode
Dialling Mode
Auto Clock
Outgoing Line
Call Alert
Master Reset
Registration
Register Handset
Unregister

Bluetooth



Devices
Find
Set PIN

Rename
Find Headset

Mobile settings



Mobile 1
Enter PIN
Off
In Range
PIN code
Mobile 2
Enter PIN
Off
In Range
PIN code

Calendar



Press Options:
Add Reminder
On/Off
Enter Date
Enter Time
Reminder Note
Reminder Ring

If a reminder is stored highlight the entry and press Options.

On/Off
Enter Date
Enter Time
Reminder Note
Reminder Ring
Delete

Note Pad



If no Note is stored:

Add Note

If a note is stored, highlight the note and press OK:

Edit Entry
On/Off
Delete

Wallpaper



Select Wallpaper

¹These options will only be available if there is a default voicemail number saved in the handset phonebook. This will be dependent on the country settings.

3. Bluetooth

3.1 Bluetooth wireless technology

Your IT.6 can be connected to two mobiles at a time.

The IT.6 will automatically reconnect with a stored device when within range, unless 2 devices are already connected.

Once your mobile and IT.6 are connected you can:

- Make or receive calls over the fixed line or mobile network from your cordless handset.
- When receiving a call the cordless handset will show Caller ID from the mobile phone.
- Synchronise your mobile phonebook to your cordless handset, see page 20.



You can store up to 8 mobile phones via Bluetooth wireless technology¹, if you have 8 devices already stored you will need to delete a device from the devices list before pairing another, see below, "Manage your devices".

¹Bluetooth® wireless technology provides a wireless connection of up to 10 metres between the Motorola IT.6 series and other Bluetooth compatible mobile phones. This device supports the hands-free profiles. In order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth profile.

The IT.6 base has a USB socket (USB cable not provided) to charge your mobile phone while taking mobile calls on the IT.6 handset. This helps to ensure the mobile is within the 10 metre range of the IT.6 base.

3.2 Pair your IT.6 with your mobile


You will need to pair your IT.6 with your mobile phone before you can take advantage of the Bluetooth features.

1. Press **Menu**, scroll to **Bluetooth** and press **OK**.
2. Scroll to **Find** and press **OK**.
3. Turn on your mobile phone's Bluetooth function.
4. Place the mobile close to the IT.6 base and search for devices.
5. The display shows **Motorola IT.6** and the PIN (default is 0000).
6. The IT.6 will show as Motorola IT.6 on your mobile.
7. Enter the Bluetooth PIN on the mobile phone if necessary and follow the mobile's instructions to pair and connect to the IT.6.
8. Once connected the handset display shows ¹ or ₂ depending on the device connected and the corresponding LED on the base will light up.


NOTE

If 2 mobiles are connected you will have to disconnect a mobile before connecting another, see next section, "Manage your devices".


3.3 Manage your devices

1. Press **Menu**, scroll to **Bluetooth** and press **OK**.
2. **Devices** is highlighted, press **OK**.
3. Scroll to select the device you want to manage and press **Options**.
4. You then have the option to **Connect / Disconnect, Delete** or **Delete All**.
5. Press  to return to standby.


3.4 Change the Bluetooth PIN

1. Press **Menu**, scroll to **Bluetooth** and press **OK**.
2. Scroll to **Set PIN** and press **OK**.
3. Press **Clear** to delete the current PIN.
4. Using the keypad type in the new PIN and press **OK**.
5. Press  to return to standby.

3.5 Set the phones Bluetooth name

1. Press **Menu**, scroll to **Bluetooth** and press **OK**.
2. Scroll to **Rename** and press **OK**.
3. Press **Clear** to delete the current name.
4. Using the keypad type in the new name and press **Save**.
5. Press  to return to standby.



3.6 Pair a Bluetooth headset

1. Press **Menu**, scroll to **Bluetooth** and press **OK**.
2. Scroll to **Find Headset** and press **OK**.
3. Select the device and press **OK**.
4. The headset will be paired and  will be displayed.

NOTE

Once a Bluetooth headset is connected you can receive home calls via the headset but it must be within 10m of the IT.6 base. You cannot make calls via the headset or receive mobile calls on the headset.

3.7 Sync or update the phonebook from a mobile

1. Press **UP** or press **Menu**, **Phonebook** is highlighted, press **OK**.
2. Scroll to the phonebook list you want, either  1 or  2.
3. If the phonebook is empty press **Update** and the mobile phonebook will start downloading.

4. If the mobile phonebook is already downloaded, press **Options** and scroll to **Update** and press **OK**.
5. The phonebook will be updated.

NOTE

Up to 500 contacts can be downloaded from each of the 2 connected mobiles.



3.8 Manage the mobile phonebook privacy settings

Once your mobile phonebook is synced with the IT.6 you can set the mobile phonebook to different privacy settings.

1. Press **Menu**, scroll to **Mobile Settings** and press **OK**.
2. Scroll to the mobile you want to set and press **OK**.
3. Enter the PIN code and press **OK**.
4. You can select one of the below options.
 - **Off:** No PIN is required to access the mobile phonebook and it will always be available.
 - **In Range:** No PIN is required to access the mobile phonebook and it will be available only when the mobile phone is connected and in range of the IT.6 base.
 - **PIN:** Follow the instructions to set and activate your PIN. Once activated although the phonebook will always be available a PIN is required to access the phonebook.

3.9 Manage your mobile phone calls list

You can download your mobile phones calls list onto the IT.6 handset.

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the calls list you want to manage, either  1 or  2.
3. If the list is empty press **Update** and the mobile calls list will start downloading.
4. If the mobile calls list is already downloaded, press **Options** and scroll to **Update** and press **OK**.
5. The calls list will be updated.

4. Using the phone

NOTE

Your handset will automatically time the duration of all external calls, the call timer will display on the screen. When the call ends, the total duration of your talk time is shown for 3 seconds.


4.1 Switch the handset on / off

Press and hold  to switch the handset on or off.

4.2 Calls

Once you have paired your IT.6 with your mobile, you can make calls over the home line or mobile network using the IT.6 handset, to pair the IT.6 with your mobile, see page 19.





4.2.1 Make a call

1. Press . Home is highlighted.
2. Scroll to the line you want to use and press OK.
3. When you hear the dial tone, dial the number.

NOTE

If you choose Mobile 1 or Mobile 2 and no mobile is paired the handset will return to standby.

4.2.2 Preparatory dialling

1. Dial the number first. If you make a mistake press Clear to delete the last digit.
2. Scroll to ,  or .
3. Press  to dial.

NOTE

To enter a pause (P) when pre-dialling, see page 27.

4.2.3 Make a call using quickdial keys

1. Press and hold the relevant keypad number to dial the pre-stored number directly.

NOTE


To assign a quickdial number, see page 30.

4.2.4 End a call


Press , or place the handset back on the base or charger.

4.2.5 Receive a call from the home line

When you receive an external call, the phone rings and an avatar shows on the display.

1. Press  to answer the call.

4.2.6 Receive a mobile call on the cordless handset

1. When you receive a call via your mobile phone the cordless handset will also ring.
2. The cordless handset display shows the avatar and the callers number or name if the phonebook has been copied.
3. Press  to answer the call.

4.2.7 Call a second external line with the home line / mobile network

When you are on a call using the home line / mobile network, you can also make a second call using the other line (mobile network / home line).

1. During the external call press **Options**.
2. Scroll to the other line you want to make the call from and press **OK**.
Your first call is put on hold.
3. Enter the second number.
4. The number will be dialled out. Once answered:
 - **CONFERENCE** – press **Options** scroll to **Conferencing** and press **OK**.
 - **SWITCH CALLS** – press **Options** scroll to **Switch home** or **Switch mobile** to switch between the two callers.

4.2.8 Answer a second external line with the home line / mobile network

When you are on a call using the home line / mobile network, you can also answer a second call through the other line (mobile network / home line).



1. During the external when another call comes in you will hear a double beep in the earpiece of the IT.6, press **Options**.
2. Scroll to the other line you want to answer and press **OK**.
Your first call is put on hold.
3. To switch or end the calls from the home line and / or mobile network, select from **Options**.

4.3 Adjust the earpiece volume

During a call, scroll to the required volume level. There are 5 levels to choose from.

4.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

1. During a call, press . The display shows **Mute On** and your caller cannot hear you.
2. Press  again to resume your call.

4.5 Intercom

4.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

Handset X displays to indicate an internal call.

1. Press and hold ***_{int}** if only 2 handsets are registered the other handset will ring.
2. If more than 2 handsets are registered the available handsets will be displayed.
3. Scroll to the handset you want to intercom and press **OK**.

4.5.2 Receive an internal call

When you receive an internal call, **Calling from Handset X** is displayed.

1. Press **R** or **Accept** to answer the call.

4.5.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

1. Press and hold ***_{int}** if only 2 handsets are registered the other handset will ring.
2. If more than 2 handsets are registered the available handsets will be displayed.
3. Scroll to the handset you want to transfer the call to and press **OK**.
4. When the other handset answers, press **⓪** to complete the transfer.

NOTE

*If there is no answer from the other handset and you wish to return to your external caller, press **Cancel**.*

4.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers (on cordless handsets) and 1 external caller.





During a call with an external caller:

1. Press and hold ***_{int}** if only 2 handsets are registered the other handset will ring.
2. If more than 2 handsets are registered the available handsets will be displayed.
3. Scroll to the handset you want to include in the conference call and press **OK**.
4. When the other handset answers, press **Conf** on the handset to start the conference call.
5. If there is no answer from the other handset, press **Cancel** to return to your external caller.
6. Press **⓪** to end the call.

4.6 Hands-free speakerphone

Hands-free lets you talk to your caller without holding the handset. It also enables other people in the room to listen to the conversation.


4.6.1 Make a hands-free call

1. Dial the number and then press .
 icon is displayed and you will hear the call over the handset loudspeaker.
2. Press  to switch the call between the earpiece and hands-free.
3. Press  to end the call.


NOTE


During a hands-free call, scroll to the required volume, there are 5 levels to choose from.

4.6.2 Answer a call hands-free

Press  to answer the call.

4.6.3 Switch to hands-free during a call

During a call, press  to put the call on the hands-free.

To switch hands-free off and return the call to the earpiece, press  again.


4.6.4 Adjust the hands-free volume

During a hands-free call, scroll to the required volume level. There are 5 levels to choose from.

4.7 Redial

The last 50 entries dialled are stored in the redial list.

4.7.1 View or dial an entry


1. Press **Redial** to open the Redial list.
2. The last number dialled is highlighted.
3. Scroll to the entry you want.
4. Press  to dial the entry or press **Back** to return to standby.

NOTE

*If the caller's number exactly matches an entry stored in the phonebook, the name is displayed. Press **Options** scroll to **Show Details** and press **OK** to see the caller's number.*

4.7.2 Copy a Redial list number to the phonebook


1. Press **Redial** to open the Redial list.
2. Scroll to the entry you want.
3. Press **Options**. **Save Number** is highlighted.
4. Scroll to the number category you want to store the number under, either **Home**, **Office**, or **Mobile** and press **OK**.
5. **First Name** is highlighted, press **OK**, enter the name and press **OK**.

6. Scroll to **Last Name** and press **OK**, enter the name and press **OK**.
7. Scroll to the number category you choose in point 4 and press **OK**.
8. Edit the number if necessary, then press **OK**. Press **Save**, the number is stored.
9. Press  to return to standby.


NOTE

See “*ENTERING NAMES and WRITING TIPS*” on page 27.

4.7.3 Delete an entry

1. Press **Redial** to open the Redial list.
2. Scroll to the entry you want and press **Options**. The display shows **Save Number**.
3. Scroll to **Delete**.
4. Press **OK** to confirm or  to cancel.

4.7.4 Delete all entries



1. Press **Redial** to open the Redial list.
2. Press **Options**. The display shows **Save Number**.
3. Scroll to **Delete all**.
4. Press **OK** to confirm or  to cancel.

4.8 Lock / unlock the keypad

You can lock the keypad so that it cannot be operated accidentally while carrying it around.

NOTE



When the keypad is locked, you can still answer incoming calls and operate the handset as normal. When the call ends, the keypad lock comes on again.

1. Press and hold .
Keys Locked is displayed.
2. To unlock the keypad, press and hold  again.

4.9 Paging / Find handset

You can alert a handset user that they are wanted or locate a missing handset.

Paging calls cannot be answered by a handset.

1. Press  on the base. All handsets registered to the base will ring and display **Paging Call**.
2. To stop the ringing, press  on the base again or press any button on the handset.

5. Phonebook

You can store up to 1000 names and numbers in the phonebook, this is in addition to the mobile phonebook. Each name can have a Home, Office and Mobile number saved. Names can be up to 32 characters long (16 for the first name and 16 for the last name) and numbers up to 32 digits. You can also select different ringer melodies for the phonebook entries.

5.1 Store a name and number

If the IT.6 is connected to a switchboard, you may need to enter a pause in a number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard access code (e.g. 9). When storing a number, press and hold **#_{As}** until the display shows P. You can then continue storing the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller instead of the number, save the full telephone number including the area code to your phonebook.

1. Press UP or press **Menu** and scroll to **Phonebook** and press OK.
2. The first entry in the phonebook is highlighted.
3. Press **Options**, **Add Entry** is highlighted, press OK.
4. **First Name** is highlighted, press OK, enter the name and press OK.
5. Scroll to **Last Name**, press OK, enter the name and press OK.
6. Scroll to the number category you want to store the number under, either **Home**, **Office**, or **Mobile** and press OK.
7. Enter the number and press OK, press **Save** and the entry is stored.
8. Press **⏪** to return to standby.

NOTE

Cancel storing an entry by pressing **⏪** at any time during the process.

ENTERING NAMES and WRITING TIPS

Use the alphanumeric keypad to enter names in the phonebook.

For instance to enter the name Paul

P Press **7**_{PNBS} once

A Press **2**_{ABC} once

U Press **8**_{TUV} twice

L Press **5**_{JKL} three times

To enter a space, press **0**_␣.

Press **LEFT** or **RIGHT** to move between characters/digits.

Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.




CHARACTER MAP

Key	Case	Assigned characters and symbols
1	L / U	1 @ _ # = < > () & € £ \$ ¥ [] { } ∅ § ...
2 <small>ABC</small>	L	a b c 2 à â ä æ á ã ä å ç
	U	A B C 2 Â Ã Ä Å Á Æ Ã Ä Å Ç
3 <small>DEF</small>	L	d e f 3 è é ê ë ì Δ Φ
	U	D E F 3 Ê É Ê Ë Ì Δ Φ
4 <small>GHI</small>	L	g h i 4 ñ ï ï ï Γ
	U	G H I 4 Ğ Ĩ Ĩ Ĩ Γ
5 <small>JKL</small>	L	j k l 5 Λ
	U	J K L 5 Λ
6 <small>MNO</small>	L	m n o 6 ñ ó ô õ ö ò
	U	M N O 6 Ñ Ó Ó Ô Õ Ö Ò
7 <small>PNRS</small>	L	p q r s 7 ß § © ® Σ
	U	P Q R S 7 Ş § © ® Σ
8 <small>TUV</small>	L	t u v 8 ù ú û μ
	U	T U V 8 Ù Ú Û Ü
9 <small>WXYZ</small>	L	w x y z 9 ø Ω Ξ Ψ
	U	W X Y Z 9 Ø Ω Ξ Ψ
0 <small>Ⓜ</small>	L / U	Space . 0 , / : ; “ ’ ! ; ? ; * + - % \ ^ ~
# <small>Ⓜ</small>	L / U	short press to switch between ABC, abc, Abc

L = Lower case

U = Upper case

5.2 View the details or dial an entry

1. Press UP or press **Menu**, Phonebook is highlighted, press OK.
2. Scroll to the phonebook list you want, either ,  1 or  2.
3. Scroll to the entry you want to view.





Or

To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press **6** MNO twice. The display shows the first entry beginning with N. If required, scroll to the exact entry.


4. Press **Options** and scroll to **Show Details**, the display shows the available information, scroll to the required number.
5. Press **R** and scroll to the line you want to dial out from.

6. Press  to dial or press  to return to standby.


5.3 Search an entry

1. Press UP or press **Menu**, **Phonebook** is highlighted, press **OK**.
2. Scroll to the phonebook list you want to view, either ,  1 or  2.
3. Press **Options** and scroll to **Search**. Press **OK**.
4. Enter the first letter (s) of the name to search alphabetically and press **OK**.
5. The names beginning with that letter will be displayed.
6. Scroll down to the exact entry.
7. Press  to return to standby.


5.4 Edit a name and number

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press **Options**.
3. Scroll to **Edit Entry** and press **OK**.
4. **First Name** is highlighted, press **OK** to edit the first name or scroll to the field you want to edit and press **OK**.
5. Press **Clear** to delete a character / digit, or press and hold **Clear** to delete all characters / digits.
6. Press **Save** to confirm the changes.
7. Press  to return to standby.


5.5 Assign a ringtone

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press **Options**.
3. Scroll to **Select Ringtone** and press **OK**.
4. Scroll to the ringtone you want and press **OK**.
The ringtone is saved.
5. Press  to return to standby.




5.6 Assign a quickdial number

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press Options.
3. Scroll to Quickdial and press OK.
4. Scroll to the keypad number where the entry will be stored and press OK, the Quickdial entry is stored.
5. Press  to return to standby.

5.7 Clear a quickdial number


1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press Options.
3. Scroll to Quickdial and press OK.
4. Scroll to Delete? and press OK to confirm.
5. Press  to return to standby.

5.8 Access the phonebook during a call


1. During a call, press Options.
2. Scroll to the phonebook list you want, either ,  1 or  2.
3. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press OK to view the details.

5.9 Assign a birthday or anniversary


You can assign a birthday or anniversary reminders to a phonebook entry

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press Options.
3. Scroll to Birthday or Anniversary and press OK.
4. The display shows Enter Date, press OK.
5. Using the keypad enter the date, press OK.
6. Scroll to Reminder Ring and press OK.
7. Scroll to the required melody and press OK.
8. Scroll to Reminder On/Off and press OK.
9. Scroll to On or Off, press OK and then press Save.
10. Press  to return to standby.


5.10 Assign a phonebook entry to the Call block list

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press **Options**.
3. Scroll to **Call Block** and press OK.
4. Scroll to **On** and press OK.
5. Press  to return to standby.

5.11 Delete an entry


1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press **Options**.
3. Scroll to **Delete** and press OK.
4. Display shows **Confirm delete?**. Press OK to confirm.
5. Press  to return to standby.

5.12 Delete all entries

1. Press UP. The first entry is highlighted on the display.
2. Press **Options** and scroll to **Delete All** and press OK.
3. Display shows **Confirm delete all ?**. Press OK to confirm.
4. Press  to return to standby.

5.13 Do Not Disturb (DND) exceptions

You can assign an entry to the DND allow list, so when the person calls even when DND is activated the phone will ring, see page 36.

1. Press UP. The first entry is highlighted on the display.
2. Enter the first letter of the name to search alphabetically then scroll to the exact entry. Press **Options**.
3. Scroll to **Do Not Disturb** and press OK.
4. Press  to return to standby.

6. Calls list

If you have subscribed to Caller ID service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network). You can also sync your mobile calls list to your IT.6, see page 21.

NOTES

If the caller's number is stored in your phonebook along with a name, the name will also be displayed.

*If the number is unavailable, **Unknown** will be displayed.*

*If the caller has withheld their number, **Private** will be displayed.*


Information about incoming calls is dependent on the country and network operator. Some operators may charge a subscription for their Caller ID service.


The Calls lists contains details of missed, received and dialled calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

When the list is full, and a new call is received, the oldest entry will be deleted automatically.





The Calls list holds details of up to 50 calls.

6.1 New calls alert




When you have new missed calls (incoming calls that you haven't answered), the display shows **X Missed calls** and the  icon flashes.

1. To view the missed call, press **Menu** scroll to **Calls List** and press **OK**.
2.  indicates a new missed call, once viewed the icon disappears.

6.2 View different Calls lists





1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Press **Options** and scroll to **Show**, press **OK**.
5. Scroll to the calls list you want (**All Calls**, **Missed Calls**, **Received Calls**, **Dialled Calls**) and press **OK**.
6. Press  to return to standby.

6.3 Dial a number in the Calls list





1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.

4. Scroll to the entry you want.
5. If the outgoing line is set to manual, press  and scroll to the line you want to dial out from.
6. Press  to dial or press  to return to standby.





6.4 Copy a Calls list number to the phonebook

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Scroll to the entry you want and press **Options**.
5. **Save Number** is highlighted, press **OK**.
6. **Home** is highlighted, press **OK**.
7. **First Name** is highlighted, press **OK**, enter the name and press **OK**.
8. Scroll to **Last Name**, press **OK**, enter the name and press **OK**.
9. Scroll to the number category you want to store the number under, either **Home**, **Office**, or **Mobile** and press **OK**.
10. Enter the number and press **OK**, press **Save** and the entry is stored.
11. Press  to return to standby.





6.5 View the details of an entry

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Scroll to the entry you want and press **Options**.
5. Scroll to **Show Details**. Press **OK**. The number (or name if stored in the phonebook) and the date and time of the call are displayed.
6. Press  to return to standby.





6.6 Assign a phonebook entry to the Call block list

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Scroll to the entry you want and press **Options**.
5. Scroll to **Call Block** and press **OK**.
6. Scroll to **On** and press **OK**.
7. Press  to return to standby.

6.7 Delete an entry

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Scroll to the entry you want and press **Options**.
5. Scroll to **Delete** and press **OK**. The call is deleted.
6. Press  to return to standby.

6.8 Delete the entire Calls list

1. Press **Menu**, scroll to **Calls List** and press **OK**.
2. Scroll to the home line or mobile line calls list (,  1 or  2) you want.
3. The most recent number or name (if stored in the phonebook) is displayed.
4. Press **Options**, scroll to **Delete All** and press **OK**. The calls list is deleted.
5. Press  to return to standby.

7. Date & Time

If you have subscribed to your network's Caller ID service, the base automatically sets the date and time of all handsets when you receive the first call (Only applicable to FSK caller ID system and this function can be switch off, see page 47). You can also manually set the time on the individual handsets.

7.1 Date and time

1. Press **Menu**, scroll to **Date & Time** and press **OK**.
2. **Enter Date** is highlighted. Press **OK**.
3. Enter the date using the format DD-MM-YYYY e.g. 04-08-2013 for 4 August 2013 and press **OK**.
4. Scroll down to **Enter Time** and press **OK**.
5. Enter the time (hh:mm) and press **OK**.
If the current time format setting is 12 hour, press ***_{in}** to select **am** or **pm**.
6. Press **⏪** to return to standby.

7.2 Date format

1. Press **Menu**, scroll to **Date & Time** and press **OK**.
2. Scroll to **Date Format** and press **OK**.
3. Scroll to **DD-MM-YYYY** or **MM-DD-YYYY** and press **OK**.
4. Press **⏪** to return to standby.


7.3 Time format

1. Press **Menu**, scroll to **Date & Time** and press **OK**.
2. Scroll to **Time Format** and press **OK**.
3. Scroll to **24 Hours** or **12 Hours** and press **OK**.
4. Press **⏪** to return to standby.


8. Do Not Disturb

Your IT.6 can be set to Do Not Disturb (DND) mode for a designated time period. Once activated when you receive an incoming call the phone will not ring, unless a contact has been set as an exception, see page 31 or the **Allow** setting has been set to **On**.

8.1 Set DND mode

1. Press **Menu**, scroll to **Do Not Disturb** and press **OK**.
2. **On/Off** is highlighted, press **OK**.
3. Scroll to **On** or **Off** and press **OK**.
4. Scroll to **Start/End Time** and press **OK**.
5. Using the keypad enter the **Start** and **End** times and press **OK**.
6. Press  to return to standby.

8.2 Turn Allow mode on / off

1. Press **Menu**, scroll to **Do Not Disturb** and press **OK**.
2. Scroll to **Allow** and press **OK**.
3. **On/Off** is highlighted and press **OK**.
4. Scroll to **On** or **Off** and press **OK**.
5. Press  to return to standby.

8.3 Set ring delay

1. Press **Menu**, scroll to **Do Not Disturb** and press **OK**.
2. Scroll to **Allow** and press **OK**.
3. Scroll to **Ring Delay** and press **OK**.
4. Scroll to the ring delay you want (either **No Rings** or **10 - 20 Rings**) and press **OK**.


NOTE

Once **Allow** is set to **On** and the ring delay is set, the IT.6 will ring only when the set ring delay is reached.

If you page your handset or the alarm has been set the phone will still alert you even when DND mode is activated.

8.4 Set the frequency

The DND can be set to either **Once**, **On Daily**, **Weekly**, **Mon-Friday** or **Sat-Sun**.


1. Press **Menu**, scroll to **Do Not Disturb** and press **OK**.
2. Scroll to **Frequency** and press **OK**.
3. Scroll to **Once**, **On Daily**, **Weekly**, **Mon-Friday** or **Sat-Sun** and press **OK**.
4. Press  to return to standby.

9. Call block


You can set the IT.6 so that when certain phone numbers call the phone does not ring. Contacts can be blocked through the phonebook menu, see page 31 or through the Call block menu. You can store up to 49 numbers in the Call block list.

For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.


9.1 Add a number

1. Press **Menu**, scroll to **Call Block** and press **OK**.
2. If there are already blocked numbers, the first entry is highlighted.
3. Press **Options**, **Add Entry** is highlighted, press **OK**.
4. Using the keypad enter the number you want to block and press **OK**.
5. Press  to return to standby.


9.2 View a number

1. Press **Menu**, scroll to **Call Block** and press **OK**.
2. Scroll to the entry you want to view.
3. Press **Options**, scroll to **Show Details** and press **OK**.
4. The display shows the available information.
5. Press  to return to standby.

9.3 Delete a number

1. Press **Menu**, scroll to **Call Block** and press **OK**.
2. Scroll to the entry you want to delete.
3. Press **Options**, scroll to **Delete** and press **OK**.
4. Press **OK** again and the number is deleted.
5. Press  to return to standby.

9.4 Delete all numbers


1. Press **Menu**, scroll to **Call Block** and press **OK**.
2. Press **Options**, scroll to **Delete All** and press **OK**.
3. Press **OK** again and all numbers are deleted.
4. Press  to return to standby.

10. Call Bar


You can set the IT.6 so that it will block outgoing calls to numbers that start with certain digits.

Up to 4 numbers can be set in the Call Bar list and each number can be up to 4 digits long. When a call starting with one of the numbers in the list is dialled out, the outgoing call will be blocked.


10.1 Turn Call Bar on / off

1. Press **Menu**, scroll to **Call Bar** and press **OK**.
2. **Call Bar Mode** is highlighted, press **OK**.
3. Using the keypad enter the PIN and press **OK**.
4. Scroll to **On** or **Off** and press **OK**.
5. Press  to return to standby.

10.2 Add or edit a number

1. Press **Menu**, scroll to **Call Bar** and press **OK**.
2. Scroll to **Call Bar Number** and press **OK**.
3. Using the keypad enter the PIN and press **OK**.
4. Scroll to a number in the list (Number 1 - 4) and press **OK**.
5. If a number is already stored it will be displayed, press **Clear** to delete a digit or press and hold **Clear** to delete all digits.
6. Use the keypad to store the new number and press **OK**.
7. Press  to return to standby.

10.3 Set the Call Bar PIN

1. Press **Menu**, scroll to **Call Bar** and press **OK**.
2. Scroll to **Set PIN** and press **OK**.
3. Enter the old PIN and press **OK**.
4. Using the keypad enter the new PIN and press **OK**.
5. Re-type the new PIN and press **OK**.
6. Press  to return to standby.


NOTE

A barred number will still be sent if set as the external number in room monitor mode.

11. Room Monitor

You can use your IT.6 handset to monitor the sounds in another room. If the sounds reach a certain level the handset will automatically dial out to a pre-set external number or to another handset. When the Room Monitor is set to On, the handset will display Room Monitor On and only the microphone will be active to monitor the sound levels in the room. Both the speaker and receiver will be set to Off and the handset will not ring if there is an incoming call.

11.1 Switch Room Monitor On

1. Press **Menu**, scroll to **Room Monitor** and press **OK**.
2. **On** is highlighted, press **OK**.
3. The handset returns to idle screen and the display shows **Room Monitor On**. To switch off Room Monitor press **Off**.
4. Press  to return to standby.

NOTE

*If no receiver unit has been set (either an external number or additional handset number) then the unit will beep and the display shows **Please set receiving unit**.*

11.2 Set the receiver unit

1. Press **Menu**, scroll to **Room Monitor** and press **OK**.
2. Scroll to **Call To** and press **OK**.
3. Scroll to **Internal** or **External** and press **OK**.

Internal

1. Press **OK** and the registered handset will be listed, for example “Handset 2”.
2. Scroll or to select the handset the Room Monitor will call if the noise levels reach a certain level.
3. Press **OK**.

NOTE


*If only one handset is registered the display prompts **No additional HS** and returns to the previous screen. You must register additional handsets before the handsets will be displayed and make Internal calls.*

External

Either

1. Press **OK**, **Enter Number** is highlighted.
2. Press **OK**, enter the external number and press **OK**.

Or

1. Press **OK**, scroll to **Select Number** and press **OK**.
2. The phonebook is displayed, either scroll to the entry you want to use or search alphabetically and press **OK**.
3. Scroll to the number you want to set and press **OK**.
4. Press  to return to standby.

NOTE


When Room Monitor is switched on and the sound level reaches a certain level the receiver unit will be automatically dialled.

If the Room Monitor is triggered to call a handset or number and the called handset is on a call, an alert tone of 2 beeps will be heard.

11.3 Change the monitor level

The monitor level can be set to High, Medium or Low, the default setting is “Low”.

To increase the sensitivity of the Room Monitor:

1. Press **Menu**, scroll to **Room Monitor** and press **OK**.
2. Scroll to **Level**, press **OK**.
3. Scroll to select **Low**, **Medium** or **High** and press **OK**.
4. Press  to return to standby.


IMPORTANT

This product is not intended for use as a baby safety device and is not a substitute for adult supervision.


12. Alarm

The IT.6 has a built in alarm facility.

12.1 Create an alarm


1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. **Create alarm** is highlighted, press **OK**.
3. Using the keypad enter the name and press **OK**.
4. Press **Save** and press  to return to standby.

12.2 Switch alarm on / off

1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to edit and press **OK**.
3. **On/Off** is highlighted, press **OK**.
4. Scroll to **On** or **Off** and press **OK**.
5. Press **Save** and press  to return to standby.


12.3 Set the alarm time

When the alarm is set, the display shows . Each handset can have a different alarm setting.

1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to edit and press **OK**.
3. Scroll to **Enter Time** and press **OK**.
4. Enter the time (hh:mm) and press **OK**.
5. Press **Save** and press  to return to standby.


12.4 Set the frequency

The alarm can be set to ring either **Once**, **On Daily**, **Weekly**, **Mon-Friday** or **Sat-Sun**.

1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to edit and press **OK**.
3. Scroll to **Frequency** and press **OK**.
4. Scroll to **Once**, **On Daily**, **Weekly**, **Mon-Friday** or **Sat-Sun** and press **OK**.
5. Press **Save** and press  to return to standby.

NOTES

If the alarm is set to **Once**,  will disappear from the screen after the alarm has sounded once.


If the alarm is set to **On Daily**, **Weekly**, **Mon-Friday** or **Sat-Sun**,  will remain on the screen after the alarm has sounded.

When the alarm rings:


Press **Off** to turn the alarm off.

Press **Snooze** for the alarm to repeat after 5 minutes. After pressing **Snooze** 3 times the alarm will automatically turn off.


12.5 Set the alarm ring

1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to edit and press **OK**.
3. Scroll to **Alarm Ring** and press **OK**.
4. Scroll to the ringtone you want and press **OK**.
5. Press **Save** and press  to return to standby.

12.6 Edit alarm name

1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to edit and press **OK**.
3. Scroll to **Edit Name** and press **OK**.
4. Edit the name and press **OK**.
Press **Clear** to delete a character / digit, or press and hold **Clear** to delete all characters / digits.
5. Press **Save** and press  to return to standby.

12.7 Delete an alarm


1. Press **Menu**, scroll to **Alarm** and press **OK**.
2. Scroll to the alarm you want to delete and press **OK**.
3. Scroll to **Delete** and press **OK**.
4. Press **OK** to confirm and press  to return to standby.

13. Sounds

13.1 Ringer volume

The handset has 7 ringer volume settings, volume 1-5, Progressive or Off.

If the volume is set to Off,  is displayed.

1. Press **Menu**, scroll to **Sounds** and press **OK**.
2. **Ringer Volume** is highlighted. Press **OK**.
3. Scroll to adjust the ringer volume level and press **OK**.
4. Press  to return to standby.


NOTE

When the phone is ringing, you may press **Silence** to silent the ringer for that call.

13.2 Ringtone


Select from 10 handset ringtones.

You will hear a sample ring as you scroll to each ringtone.

1. Press **Menu**, scroll to **Sounds** and press **OK**.
2. Scroll to **Ringtone** and press **OK**.
3. Scroll to the line you want (Home / Mobile 1 / Mobile 2) and press **OK**.
4. Scroll to the ringtone you want and press **OK**.
5. Press  to return to standby.

13.3 Set the sound profile

You can set the earpiece and hands-free tones to follow 1 of 5 different profiles. The different profiles are Loud, Bass, Bright, Clear and Pure.


1. Press **Menu**, scroll to **Sounds** and press **OK**.
2. Scroll to **Profiles** and press **OK**.
3. Scroll to the sound profile you want and press **OK**.
4. Press  to return to standby.

NOTE

You can also access the sound profiles during a call, press **Sound** and scroll to the profile you want.


13.4 Key beep

When you press a button on the IT.6 handset, you will hear a beep. You can switch it on or off.

1. Press **Menu**, scroll to **Sounds** and press **OK**.
2. Scroll to **Key Beep** and press **OK**.
3. Scroll to **Off** or **On** then press **OK**.
4. Press  to return to standby.

13.5 Base beep

When you replace the IT.6 handset on the base, you will hear a beep. You can switch it on or off.


1. Press **Menu**, scroll to **Sounds** and press **OK**.
2. Scroll to **Base Beep** and press **OK**.
3. Scroll to **Off** or **On** then press **OK**.
4. Press  to return to standby.

14. Settings

14.1 ECO mode

Your IT.6 offers an ECO mode function which reduces the transmitted power and energy consumption when switched on. This feature is set to **Off** by default.


To turn ECO mode **On** or **Off**:

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. **ECO** is highlighted, press **OK**.
3. Scroll to **Off** or **On** and press **OK**.
4. Press  to return to standby.

14.2 ECO PLUS

When ECO PLUS is activated and the unit has been idle for 1 minute the transmitted power between the handset and the base will stop, an incoming call or pressing any key will activate the unit and it will revert back to the normal mode. This feature is set to **Off** by default.


To turn ECO PLUS **On** or **Off**:

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **ECO PLUS** and press **OK**.
3. Scroll to **Off** or **On** and press **OK**.
4. Press  to return to standby.

14.3 Handset name

If you are using more than one handset with the IT.6 base, you can give each handset a personalised name to easily distinguish between the handsets.

A name can be up to 14 characters long.


1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Handset Name** and press **OK**.
3. Enter the name and press **OK**. Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.
4. Press  to return to standby.

14.4 Display settings


You can set the display contrast on the handset screen and whether the screen backlight is on when the handset is on the base.

14.4.1 To change the display contrast

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Display** and press **OK**.


3. **Disp. Contrast** is highlighted, press **OK**.
4. Scroll to the contrast you want and press **OK**.
5. Press  to return to standby.

14.4.2 Set the backlight


1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Display** and press **OK**.
3. Scroll to **Backlight** and press **OK**.
4. Scroll to **On In Base** or **Off In Base** and press **OK**.
5. Press  to return to standby.

14.5 Call settings

14.5.1 Auto conferencing

If more than one IT.6 handset is registered to your base a second handset can join the call automatically by just pressing .


This feature can be set to **Auto** or **Off**.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. **Conference Call** is highlighted, press **OK**.
4. Scroll to **Auto** or **Off** and press **OK**.
5. Press  to return to standby.

14.5.2 Set the different calling codes

If you are downloading your phonebook from your mobile you can set the phone to remove the calling code information (e.g. +) from local numbers to avoid unsuccessful calls when you dial from the home line.

There are 2 different codes that can be set, country code (6 digits) and local code (6 digits). Please set the Auto prefix Direct digit to 0065 to remove the country code and leave the Prefix number blank so numbers can be dialled.


1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Country Code** or **Local Code** and press **OK**.
4. Using the keypad, enter the code and press **OK**.
5. Press  to return to standby.

14.5.3 Set the auto prefix

This feature checks and formats a pre-dialled outgoing number before it is dialled out.

You can set a detect number that can be up to 6 digits, once this number has been set the phone will check the first few digits of any pre-dialled number and if they match the detect

number will replace them with the prefix number.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Auto Prefix** and press **OK**.
4. Using the keypad, enter the **Detect digit** number and press **OK**.
5. Using the keypad, enter **Prefix** number and press **OK**.
6. Press  to return to standby.


14.5.4 Recall mode

Recall is useful to access certain network services and PABX /switchboard services. When on an external call, press Recall to get a fresh dialling tone or to access call waiting when you hear the signal. Press the key again to toggle between your two callers.

The default recall mode preset in the IT.6 is suitable for your country network and therefore you should not need to change it.


NOTE

The use of the IT.6 cannot be guaranteed on all PABX.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Recall Mode** and press **OK**.
4. Scroll to **Short** (100ms), **Medium** (250ms) or **Long** (600ms) and press **OK**.
5. Press  to return to standby.

14.5.5 Dialling mode


The IT.6 is preset to Tone dialling. It is unlikely that you need to change this setting.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Dialling Mode** and press **OK**.
4. Scroll to **Pulse** or **Tone** and press **OK**.
5. Press  to return to standby.

14.5.6 Switch auto clock on / off


If you have subscribed to Caller ID Service, the date and time will be set on all your handsets whenever a call is received. This feature can be set to On or Off.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Auto Clock** and press **OK**.
4. Scroll to **On** or **Off** then press **OK** to confirm.

5. Press  to return to standby.

14.5.7 Set the outgoing line

You can set the handset so it automatically selects the home line / mobile line you want to use on each outgoing call. Or you can set it to manual or auto.


1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Settings** and press **OK**.
3. Scroll to **Outgoing Line** and press **OK**.
4. Scroll to the setting you want and press **OK**.
5. Press  to return to standby.

NOTE

If auto is selected the idle line is pre selected for the outgoing call, the home line is the highest priority, followed by Mobile 1 and the Mobile 2. If manual is selected the scroll to the required line.

14.6 Switch call alert on / off

You can set the display backlight to flash when the phone rings.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Call Alert** and press **OK**.
3. Scroll to **Flashing On** or **Flashing Off** and press **OK**.
4. Press  to return to standby.

14.7 Restore default settings

You can restore the IT.6 to its default (original) settings. You can choose to keep or remove data when resetting your phone. If you choose to keep data the phonebook, calls list and incoming messages will be saved, if you choose to remove data, all data will be removed.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Master Reset** and press **OK**.
3. Scroll to **Remove Data** or **Keep Data** and press **OK**.
4. The unit will restart automatically once the reset is complete.

14.8 Registration

The handset battery must be fully charged before you start to register. Hold your handset close to the base during the registration process. Handsets that were supplied with your IT.6 base are already registered.

14.8.1 Manually register an additional handset

On the handset:

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Registration** and press **OK**.
3. **Register Handset** is highlighted. Press **OK**.
4. The display shows **Press base Find key for 5s**.
5. On the base, press and hold **Ⓜ** for 5 seconds.
6. Enter the system PIN and press **OK**.
7. The base station will automatically assign the handset number.
8. When registration is successful you hear a confirmation beep.

NOTE

If registration is not successful the first time, please repeat the process again in case the base registration period ran out of time. If the base is not found after a few seconds, the handset returns to standby. Try registering again.

If there are already 5 handsets registered to the base, registration will fail. You must de-register a handset before you can register a new one.

14.8.2 De-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Scroll to **Registration** and press **OK**.
3. Scroll to **Unregister** and press **OK**.
4. Enter the System PIN and press **OK**. (default setting = 0000)
5. Scroll to the handset you want to de-register and press **OK**.

14.9 Default settings

Handset Name	Motorola
Key Beep	On
Ringtone	Home Melody 7 Mobile Melody 6
Ringer Volume	4
Earpiece Volume	2
Phonebook	Keep data - Unchanged Remove data - Changed
Calls List	Keep data - Unchanged Remove data - Changed
Redial	Keep data - Unchanged Remove data - Changed
Master PIN	0000
Keypad Lock	Off
Clock	00:00
Alarm	Off
Dialling Mode	Tone
ECO Mode	Off
Recall mode	Long 600ms


15. Calendar

The current monthly view is displayed in the calendar and the current date is highlighted by default. You can create new, view and delete events. Scroll to select the date and month. You can also view a list of upcoming events.

15.1 Add a new event

Use the IT.6 to remind you of details of events such as birthdays, anniversaries or appointments. The IT.6 can store up to 15 events in total.

Up to 50 characters can be entered as the subject.

1. Press **Menu**, scroll to **Calendar** and press **OK**.
2. The calendar will be displayed, scroll to the date you would like to set a reminder for. Press **Options**.
3. **Add Reminder** is highlighted, press **OK**.
4. **On/Off** is highlighted, press **OK**.
5. Scroll to **On** and press **OK**.
6. Scroll to **Enter Date** and press **OK**. Edit the date if necessary and press **OK**.
7. Scroll to **Enter Time** and press **OK**. Edit the time if necessary and press **OK**.
8. Scroll to **Reminder Note** and press **OK**.
9. Using the keypad enter the text and press **OK**.
10. Scroll to **Reminder Ring** and press **OK**.
11. Scroll to the ringtone you want and press **OK**.
12. Press **Save** to store the Event.
13. Press  to return to standby.

NOTES

*If you select a **No Melody**, the event subject is displayed on the screen but no alarm will sound.*

When the event memory is full, the display shows an alert message. You must delete an event before you can add a new one.


15.2 Switch off reminder ring

When the event is due if a ringtone is set the handset will ring, press **Off** to stop the ringing, if **No Melody** is set then the handset will not ring.


NOTE

If no button is pressed, the alarm stops after one minute but the reminder will stay on the screen.

15.3 Edit an event

1. Press **Menu**, scroll to **Calendar** and press **OK**.
2. Stored events are displayed scroll to the event you want to edit and press **OK**.
3. Enter and edit the required option and press **OK**.
4. Press **Save** to store the Event.
5. Press  to return to standby.


15.4 Delete an event

1. Press **Menu**, scroll to **Calendar** and press **OK**.
2. Stored events are displayed scroll to the event you want to delete and press **OK**.
3. Scroll to **Delete** and press **OK**.
4. Display shows **Confirm delete?**. Press **OK**.
5. Press  to return to standby.


16. Note pad

You can leave a note that will be displayed on the screen of the handset.


16.1 Create a note

1. Press **Menu**, scroll to **Note Pad** and press **OK**.
2. **Add Note** is highlighted, press **OK**.
3. Using the keypad enter the text and press **OK**.
4. Press  to return to standby.

16.2 Edit a note

1. Press **Menu**, scroll to **Note Pad** and press **OK**.
2. Scroll to the note you want to edit and press **OK**.
3. **Edit Entry** is highlighted, press **OK**.
4. Edit the text where necessary and press **OK**.
5. Press  to return to standby.


16.3 Turn a note on / off

1. Press **Menu**, scroll to **Note Pad** and press **OK**.
2. Scroll to the note you want to edit and press **OK**.
3. Scroll to **On** or **Off** and press **OK**.
4. Press  to return to standby.

NOTE

Once a note has been set to on it will appear on the standby screen of the handset until it has been set to Off.


16.4 Delete a note

1. Press **Menu**, scroll to **Note Pad** and press **OK**.
2. Scroll to the note you want to delete and press **OK**.
3. Scroll to **Delete** and press **OK**. Press **OK** to confirm.
4. Press  to return to standby.

17. Wallpaper

Select from 10 different wallpapers for your handset or set to no wallpaper.

17.1 Set a wallpaper


1. Press **Menu**, scroll to **Wallpaper** and press **OK**.
2. **Select Wallpaper** is highlighted, press **OK**.
3. Scroll to the wallpaper you want and press **OK**.
4. Press  to return to standby.

18. Help

No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly.
- Check that the mains power is connected properly and switched on.

No display

- Check that the handset is switched on. Press and hold .
- Reset the base by disconnecting the mains power. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

icon only shows 1 bar and handset beeps

- Handset is out of range. Move closer to the base.
- Make sure that the handset is registered to the base, see page 48.
- Check that the mains power is connected properly and switched on.

My phonebook will not copy from my mobile phone

- Make sure the IT.6 and your mobile are paired see page 19.

The IT.6 does not show in my mobile's device list

- Unplug the IT.6 base from the power and plug back in again.
- Turn the Bluetooth function on the mobile off and on and try again.
- If the problem persists reset the IT.6 to its default settings, see page 48.


I cannot make / receive calls on the IT.6 via the mobile network

- Make sure your mobile is paired and says "Connected".
- Turn the Bluetooth function on the mobile off and on and try again.
- Check the signal on your mobile.

Keypad does not seem to work

- Check that the keypad lock is not on, see page 26.

icon is not scrolling during charge

- Adjust the handset slightly on the base.
- Clean the charging contacts with a cloth moistened with alcohol.
- Check that the mains power is connected properly and switched on.
- The battery is full. When the handset is fully charged,  icon will appear steady on the display.

No Caller ID

- Check your subscription with your network operator, see page 32.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

Cannot register a handset to the base

- You can register up to a maximum of 5 handsets to a IT.6 base. You must de-register a handset in order to register a new one, see page 49.
- Check that you have entered the correct PIN code (default = 0000).
- Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Handset does not ring

- The handset ringer volume may be set to Off, see page 43.

Noise interference on my phone or on other electrical equipment nearby

- Place your IT.6 at least one metre away from electrical appliances or any metal obstructions to avoid any risk of interference.

19. General information

IMPORTANT

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Singapore and Malaysia.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

IMPORTANT

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

- Read and understand all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

IMPORTANT

Do not attempt to access the battery. There is a risk of explosion if you replace the battery with an incorrect battery type.

- Your device has a non-removable, rechargeable battery. Do not attempt to remove the battery, as you may damage the device and any attempt to do so will void your warranty. To replace the battery, contact customer service helpline found in this user guide.

SAVE THESE INSTRUCTIONS

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the battery is being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage, do not place the product on antique / veneered wood.
- Do not place your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

When the IT.6 reaches its end of life, it needs to be disposed of according to local laws and regulations, please contact the customer service helpline found in this user guide for information on how to dispose of the product free of charge.

Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Suncorp Technologies Limited, 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong. ("SUNCORP")

What Does this Warranty Cover?

Subject to the exclusions contained below, SUNCORP warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will SUNCORP do?

SUNCORP or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE

PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Battery. Only a battery whose fully charged capacity falls below 80% of the rated capacity and a battery that leaks is covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or SUNCORP are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, SUNCORP or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call: **(65) 68412668.**

Email: support@alcom.com.sg.

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a SUNCORP Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

Technical Information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your IT.6 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types, there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

Connecting to a switchboard

This product is intended for use within Singapore and Malaysia for connection to the public telephone network.

Recall

You may need to use the recall function if you are connected to a switch. Contact your PABX supplier for further information.

<THIS PAGE IS INTENTIONALLY LEFT BLANK>

Declaration of Conformity (DoC)

Suncorp declares that the following products:

Brandname: Motorola
Type: IT.6.1, IT.6.2, IT.6.3, IT.6.4
Descriptions: DECT phone without telephone answering machine (IT.6.x) and their multi-handset versions.

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

- R&TTE Directive (1999/5/EC)
- Ecodesign Directive (2009/125/EC)

The products are compliant with the following standards:

Safety: EN60950-1:2006+A11:2009+A1:2010+A12:2011
EMC: EN301489-1 v1.9.2 and EN301489-6 v1.3.1
RF Spectrum : EN301406 v2.1.1
Ecodesign : EC No 278/2009, 6 April 2009

For and on behalf of Suncorp Technologies Limited,



CW Cheung
2013.07.09
11:58:19
+08'00'

Signature:

Printed name & Position: CW Cheung – Chief Technical Officer

Date: July 9, 2013

Place: 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong

Manufactured, distributed or sold by Suncorp Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. The Bluetooth trademarks are owned by their proprietor and used by Suncorp Technologies Ltd. under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.

Version 6 (SG)

